

■ FUNCTION OF MAIN COMPONENT

Component	Function
Television Camera	Transmits a view of the area behind the vehicle to the Television Camera ECU.
Television Camera ECU	- Transmits video signals, which are composed of a view of the area behind the vehicle taken with the television camera and parking assist guide lines, to the multi display. Furthermore, it effects overall control of the system based on signals received from the sensors and the Navigation ECU. - The Television Camera ECU sets a warning message or guide message of the parking assist monitor system using the same language selected for the multi display.
Multi Display	Receives video signals composed of the of the area behind the vehicle with parking assist guide lines overlaid from the Television Camera ECU, and displays them on the display panel.
Navigation ECU	- Transmits the movement of the vehicle to the Television Camera ECU. - Transmits the current language settings to the Television Camera ECU. These settings were selected using the language select function of the multi display.
Steering Angle Sensor	Detects the angle of the steering wheel and send the resulting signals to the Television Camera ECU.
Combination Meter	Transmits the vehicle speed signal to the Television Camera ECU.
Back-up Light Switch (For MT)	Transmits the reverse signal to the Television Camera ECU.
Neutral Start Switch (For AT)	
Gateway ECU	Converts signals from each ECU into AVC-LAN signals and transmits them to the Television Camera ECU.