


■ INITIALIZE FUNCTION DURING PART REPLACEMENT

The initialize function must always be performed whenever one of the conditions indicated in the table below occurs.

Parts Name	Condition	Initialize Item
Television Camera	• Camera position has shifted. • Removal and reassembly • Replacement • Deformation due to the mount area having been struck.	Camera Position Adjustment – Vertical Position – Horizontal Position – Roll Angle, Pan Angle, Tilt Angle
Television Camera ECU	Replacement	• Neutral steering point in memory • Maximum side-to-side steering angle in memory • Camera Position Adjustment – Vertical Position – Horizontal Position – Roll Angle, Pan Angle, Tilt Angle
Steering Angle Sensor	• Replacement • Removal and reassembly	• Neutral steering point in memory • Maximum side-to-side steering angle in memory

- The initialize function described above is performed on the diagnosis menu screen.
- The method for displaying the diagnosis menu screen is the same as for the multi display.

For details, see the LEXUS IS250 Repair Manual (Pub. No. RM0150E).

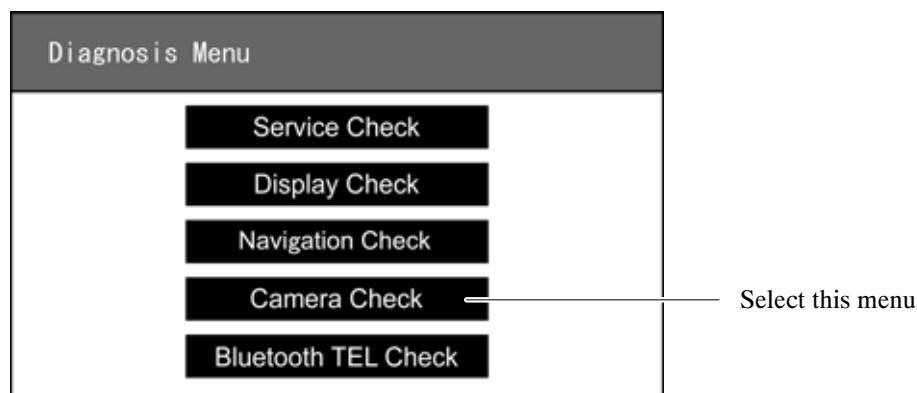

BE