


LEXUS PARKING ASSIST-SENSOR

■ DESCRIPTION

The LEXUS parking assist-sensor uses ultrasonic sensors to detect any obstacles at the corners, at the front, or the rear of the vehicle.

- The LEXUS parking assist-sensor then informs the driver of the approximate distance between the sensors and the obstacles as well as their positions by displaying them on the multi-information display in the combination meter or on the multi display and by sounding a buzzer.
- The LEXUS parking assist-sensor is optional equipment on all models.
- The operating condition of each LEXUS parking assist-sensor differs according to its installed position as shown in the table below:


Installation Position	Operating Condition
Front Corner	• Power source is IG-ON. • Main switch is ON. • Shift position is except P. (AT models) • Parking brake is not applied. (MT models) • Vehicle speed is approx. 10 km/h (6 mph) or less.
Rear Corner	• Power source is IG-ON. • Main switch is ON. • Shift position is R. (AT models) • Back-up light switch is ON. (MT models) • Vehicle speed is approx. 10 km/h (6 mph) or less.
Rear Center	• Power source is IG-ON. • Main switch is ON. • Shift position is R. (AT models) • Back-up light switch is ON. (MT models)

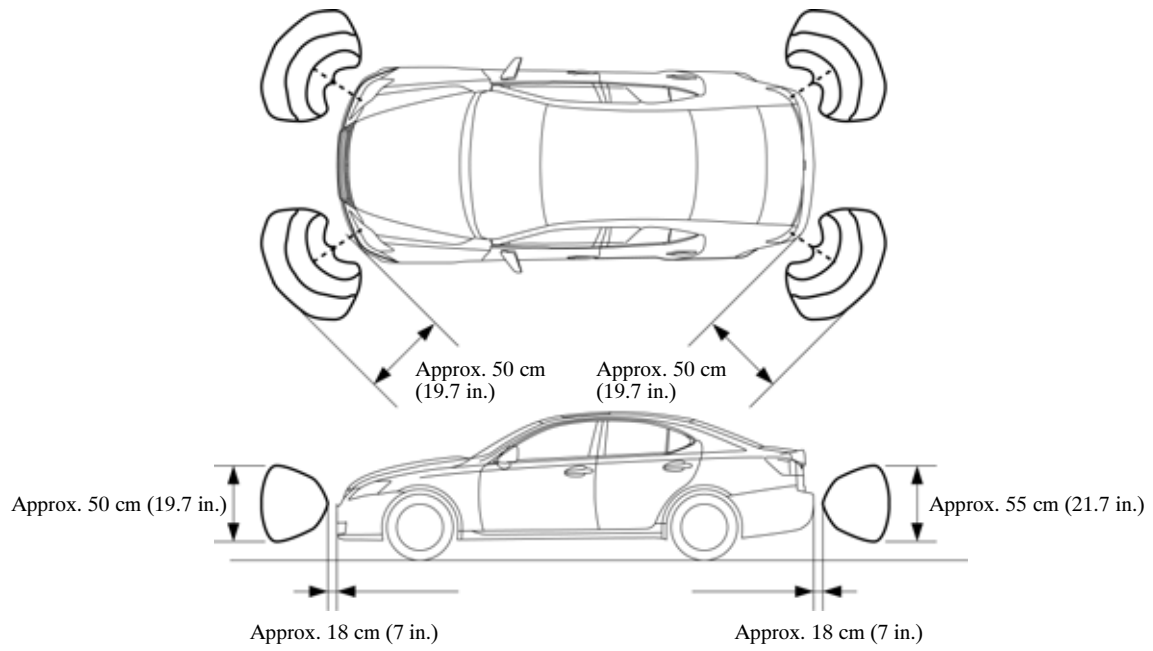

Corner Area

0140BE70C

BE

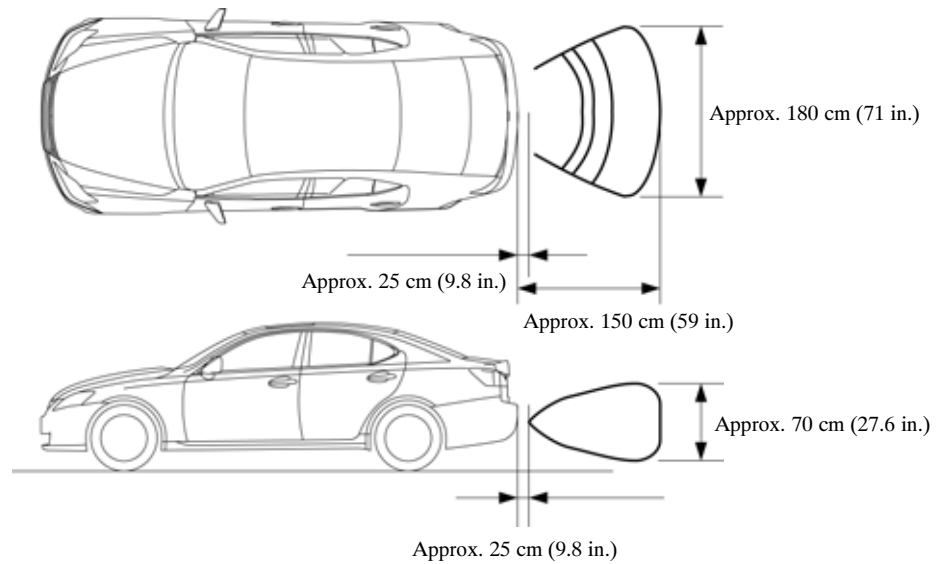

Rear Center Area

0140BE71C