


SYSTEM OPERATION

The states of the theft deterrent system are as follows:

State	Description	Theft detection
Disarmed State	The theft deterrent system is not set by the user.	—
Armed Preparation State	The standby state before the theft deterrent system activates when the system has already set.	—
Armed State	The theft deterrent system is being activated. (Theft can be detected.)	○
Alarm State	Theft has been detected and the warning operation activates.	○

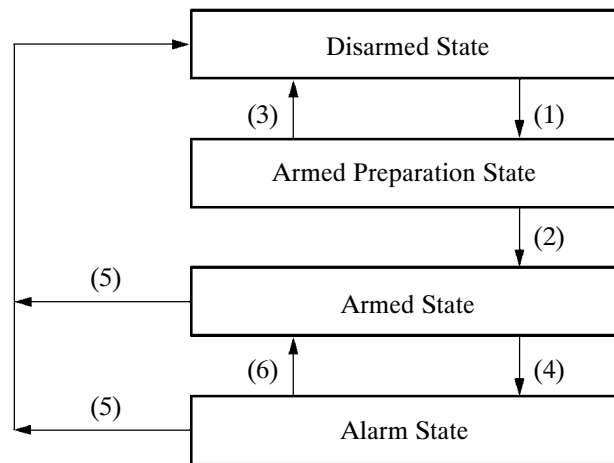

187BE40

BE

The theft deterrent system activates as described in the diagram below when one of items in the chart occurs in order to cause the system to enter the respective state.

Condition	Item
(1)	In the disarmed state, when the key is not in the actuation area, the system state is switched if all of the following conditions are met. • All doors, engine hood and trunk lid are closed. • All doors are locked using the transmitter lock button.
(2)	The system state is switched when the doors, engine hood, and trunk lid are all closed and locked, and 30 seconds have elapsed.
(3)	The system state is switched when one of the following conditions is met. • Any door, engine hood, or trunk lid is opened. • Any door is unlocked. • The engine switch is pushed. • A terminal is disconnected from the battery and reconnected.

(Continued)

Condition	Item
(4)*	The system state is switched when one of the following conditions is met. • With all doors closed, any door is opened. • With all doors locked, any door is unlocked by a method other than the mechanical key or transmitter. • The trunk lid and engine hood are opened by a method other than the mechanical key or transmitter. • A terminal is disconnected from the battery. (The self-powered siren will sound as a warning in the alarm state.) • A terminal is disconnected from the battery and reconnected. (The vehicle horn will sound and the hazard warning lights and interior lights will flash as a warning in the alarm state.) • The intrusion sensor has detected an intruder.
(5)	The system state is switched when one of the following conditions is met. • Any door is unlocked with the transmitter. • The trunk lid is opened with the transmitter. • The power source is changed to IG-ON.
(6)	The system state is switched after the alarm time elapses.

*: If the apparent theft continues to be detected, the warning will resume 5 seconds after the previous warning and repeat the warning a maximum of 10 times for each detection condition.