


■ SLIDING ROOF DIAL AND PUSH SWITCH

- A sliding roof dial and push switch is adopted. Pushing the dial switch enables the sliding roof to comfort stop or fully close. In addition, the sliding roof can be opened or closed according to the dial switch position.
- The adoption of a mechanical key-linked open-and-close function and transmitter-linked open function enables the sliding roof to be operated by the mechanical key or the transmitter.

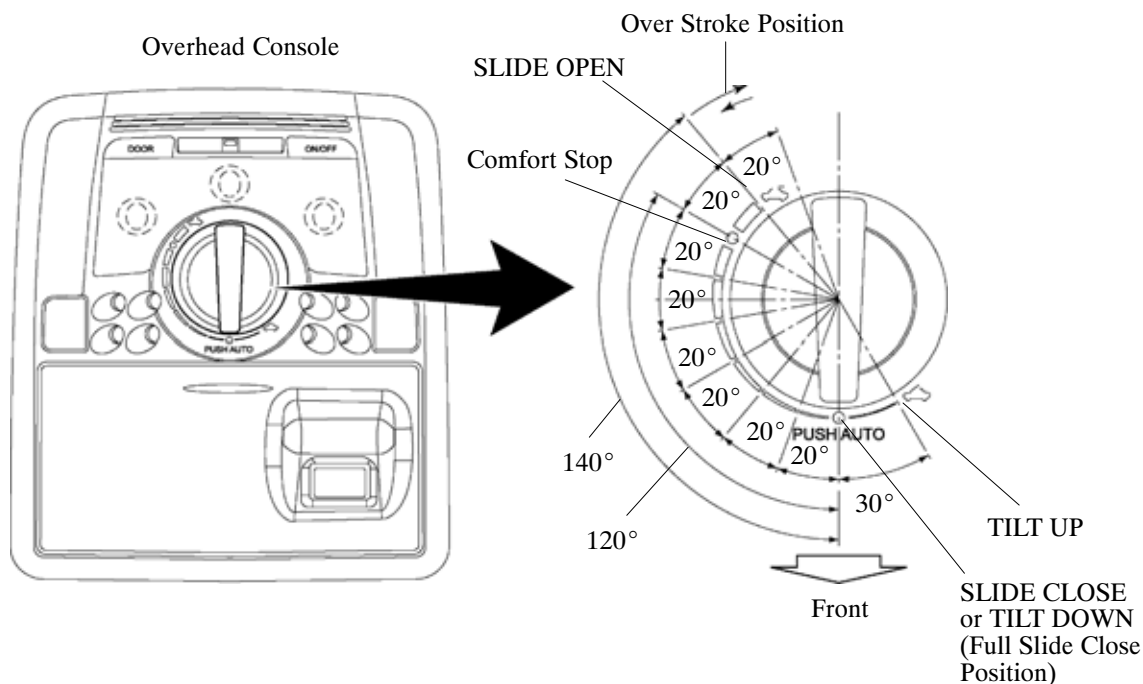

0140BE156C

■ WARNING

When the power source is changed from IG-ON to OFF and the driver door is opened when the sliding roof is open, the Sliding Roof ECU sounds the buzzer in the combination meter. Then, a warning message appears on the multi-information display.

Warning Condition		The warning is activated if all of the following conditions are met: • Sliding roof is not fully closed. • Power source is "OFF" • Driver door is opened.
Combination Meter	Buzzer	Sounds once
	Multi-information Display	 0140BE201C
	Master Warning Light	—
Warning Stop Condition		The warning is stopped when one of the following conditions is met. • 8 seconds have elapsed after the warning condition is detected. • Power source is "ON" • Driver door is closed.