


■ AIRBAG FOR SIDE/SIDE REAR COLLISION

1. General

- With the airbag for side collisions, if the side & curtain shield airbag sensor detects an impact, the Airbag Sensor Assembly causes the side and curtain shield airbags to be deployed simultaneously.
- With the airbag for side rear collisions, if the curtain shield airbag sensor detects an impact, the Airbag Sensor Assembly causes the curtain shield airbag to be deployed.


► System Operation ◀

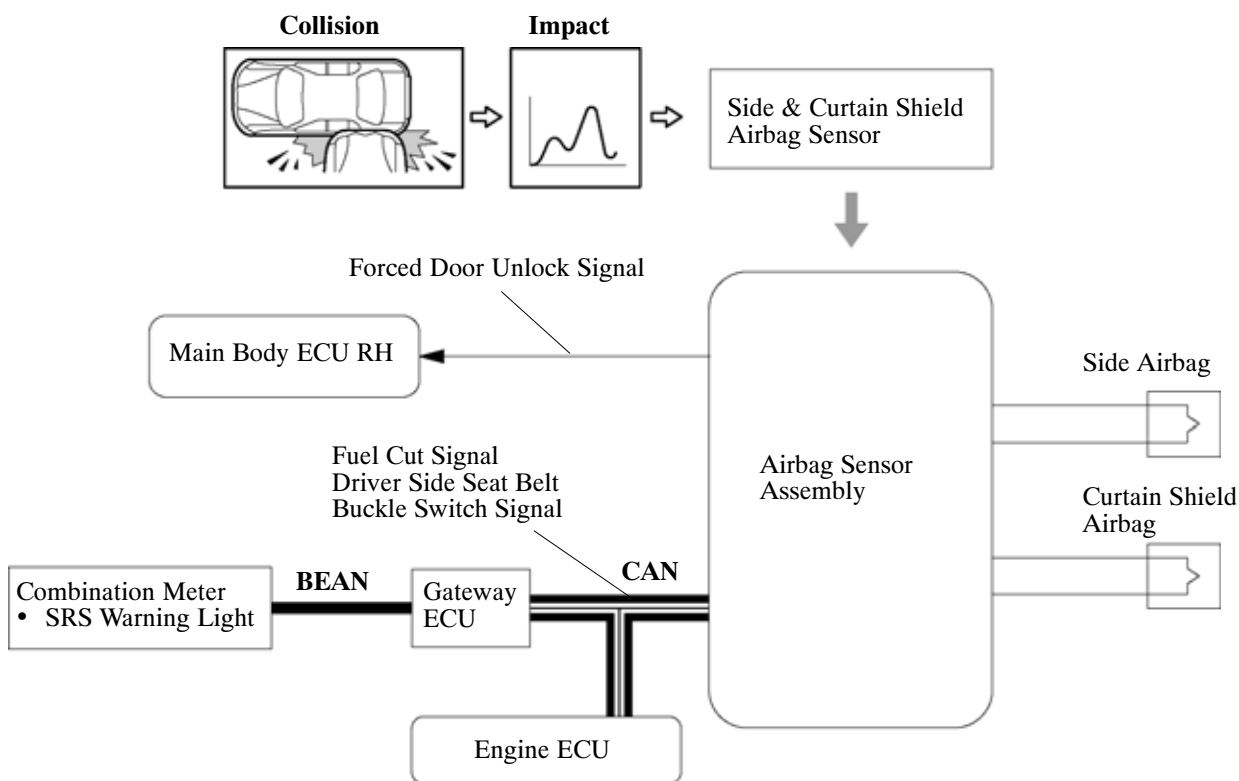

BE

Airbags for Side Collision

0140BE166C

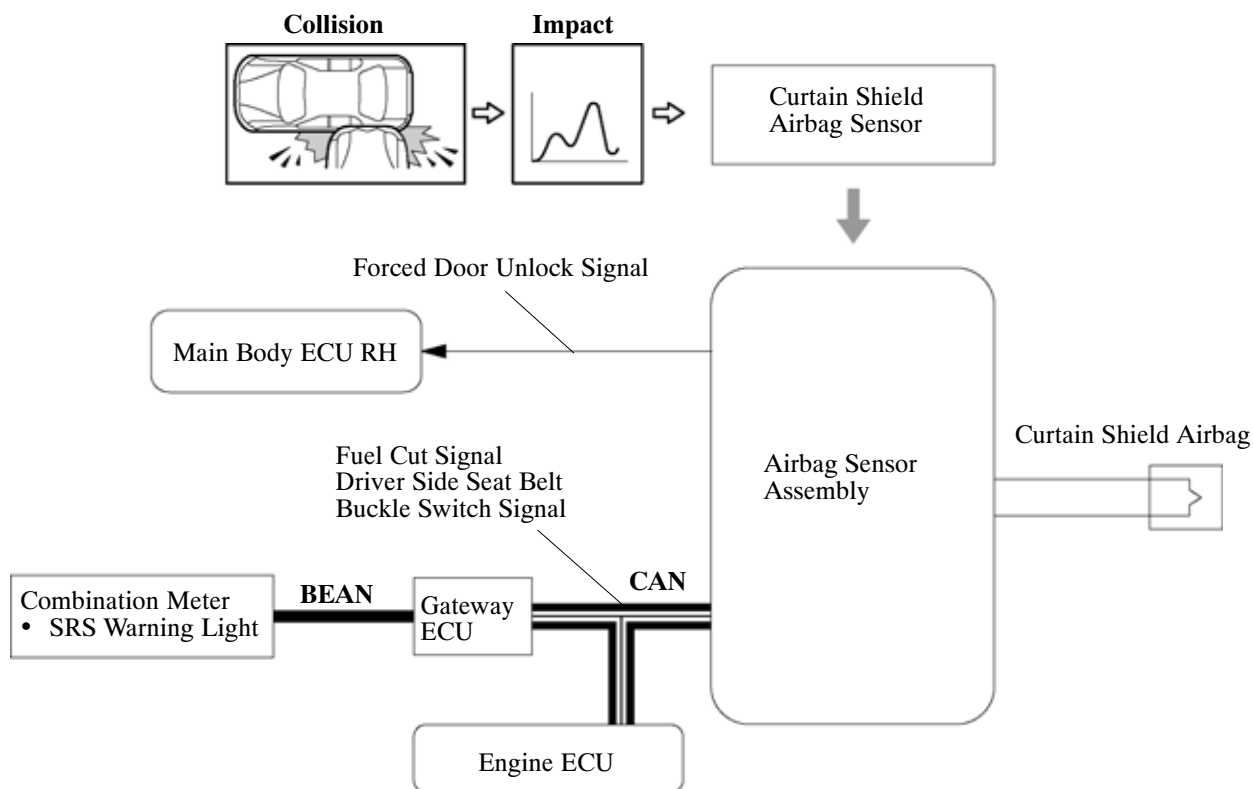

Airbag for Side Rear Collision

0140BE167C

2. SRS Side Airbag

SRS side airbags are installed in the seat backs of the driver seat and the front passenger seat. Each SRS airbag is a one-piece design, consisting of an inflator, a bag, and a cover.

3. SRS Curtain Shield Airbag

SRS curtain shield airbags are located in the areas that extend from the driver's and front passenger's front pillars to the rear pillars in the rear seat areas. Each SRS airbag is a one-piece design, consisting of an inflator, a bag, and a cover.

4. Side & Curtain Shield and Curtain Shield Airbag Sensors

A deceleration sensor is enclosed in each side & curtain shield or curtain shield airbag sensor. Based on the change of acceleration of the sensor during a side or side rear collision, a distortion is created in the sensor and converted into an electrical signal.