

## ■ CONSTRUCTION AND OPERATION

### Combination Meter

The master warning light, PCS warning light, warning message of the multi-information display and buzzer in the combination meter warns the driver of the abnormal or poor conditions of the pre-crash safety system.

- Two types of warning messages are used for the pre-crash safety system, as described below. The pre-crash safety system will not operate when these messages appear in the combination meter.

| Warning Message                                                                                | Detail                                                                                                                                                                                                                                                                                                                                     | <br>0150BE35C | <br>0150BE36C | Buzzer      | DTC |
|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-------------|-----|
| <br>0150BE33C | This message appears when the Seat Belt Control ECU detects a system malfunction.                                                                                                                                                                                                                                                          | Illuminate                                                                                       | Illuminate                                                                                       | Sounds once | ○   |
| <br>0150BE34C | This message appears when the seat belt control ECU determines the following conditions: <ul style="list-style-type: none"> <li>• Dirty millimeter wave radar sensor</li> <li>• Poor weather condition</li> <li>• Overheated Seat Belt Control ECU</li> </ul> After these conditions have been resolved, the system will operate normally. | Illuminate                                                                                       | Flash                                                                                            | Sounds once | ×   |

○: Repair is required/ DTCs are output

×: Repair is not required/DTCs are not output