

CRUISE CONTROL SYSTEM

■ DESCRIPTION

There are two cruise control systems, a conventional type and a dynamic radar type.

- The cruise control system is available on the following based on transmission type:

Type	Transmission	
	Manual Transmission	Automatic Transmission
Conventional	Standard	Standard
Dynamic Radar	—	Option*

*: Set option with pre-crash safety system.

- The conventional type maintains the vehicle speed at the speed set by the driver. For details, [see page BE-229](#).
- In addition to the conventional type of constant speed control, the dynamic type uses vehicle-to-vehicle distance control. For details, [see page BE-234](#).