

MEMORY SYSTEM


■ DESCRIPTION

The memory system can store the driver seat, front passenger seat, outside rear view mirror positions and tilt & telescopic position. Up to 3 memory positions can be stored in the system memory and recalled. Three positions can be saved for the driver memory switch or front passenger memory switch.

- Each Seat ECUs stores in its memory the four recordable adjustments of the seat (seat slide, front vertical, rear vertical and reclining). Each Seat ECUs is built in to the power seat switch.
- Each Mirror ECUs stores in its memory the outside rear view mirror position.
- The Tilt & Telescopic ECU stores in its memory the tilt & telescopic position.
- Seat ECU (Driver) outputs a reproduction signal to each ECUs.
- The memory and recall conditions of this system are as follows.

Function	Condition
Memory	Memorizes the positions when all conditions below have been met and the 1, 2 or 3 button is pushed while the “SET” button is pushed. • Power source mode is “IG-ON”. • Shift position is “P”. (A/T models) • Vehicle speed 3 km (1.9 mph) or less. (M/T models) • Parking brake lever is pushed. (M/T models) When the memory setting is completed, the buzzer will sound for 0.5 seconds.
Recall	If the button 1, 2 or 3 is pressed when all conditions have been met, it recalls the positions. • Power source mode is “IG-ON”. • Shift position is “P”. (A/T models) • Vehicle speed 3 km (1.9 mph) or less. (M/T models) • Parking brake lever is pushed. (M/T models) If the button 1, 2 or 3 is pressed when all conditions have been met and within 30 seconds, it recalls the positions. • Power source mode is “IG-OFF”. • Driver door is opened.

► System Diagram ◀

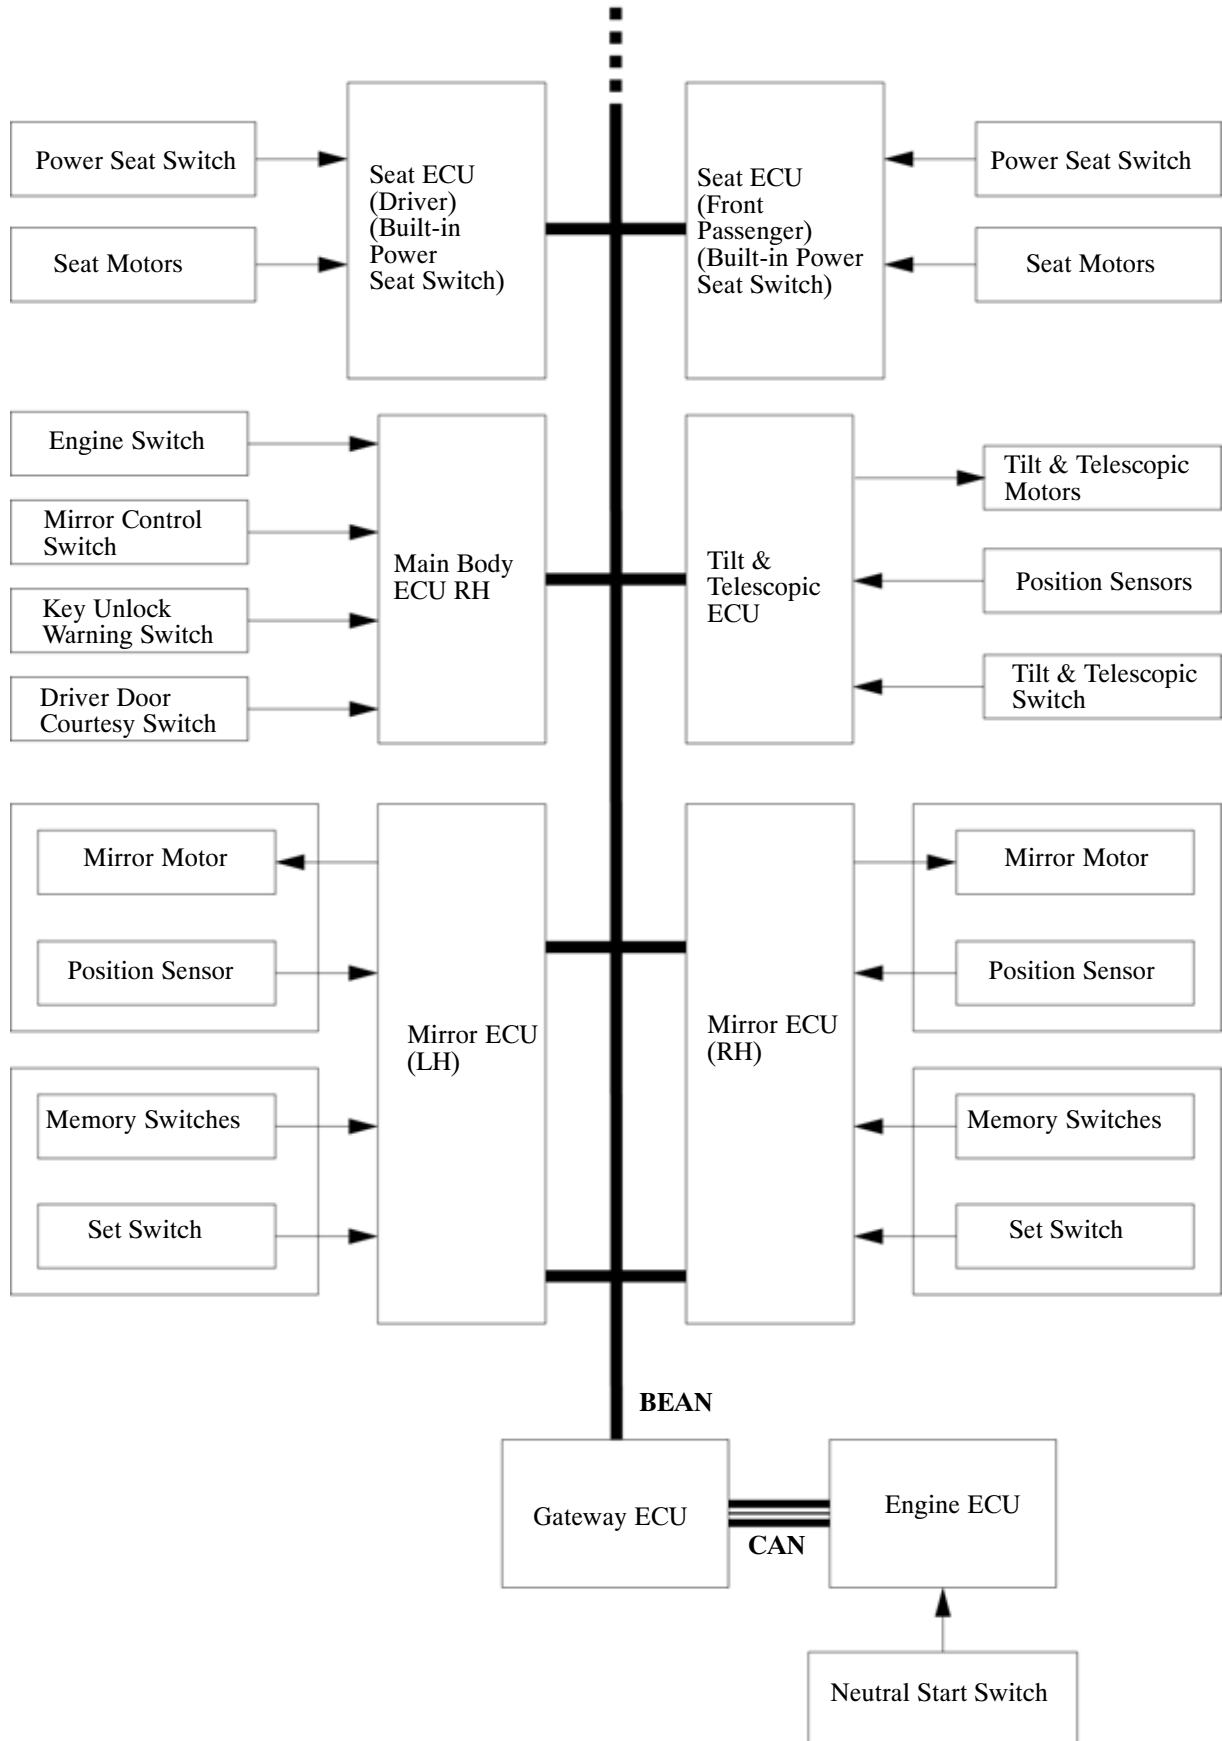

BE