


SEAT HEATER SYSTEM

DESCRIPTION


The seat heater system can steplessly adjust the temperature of the seat surface between 32°C and 39°C through the operation of a dial-type heater switch.

- A thermistor detects the temperature of the seat surface and the seat heater controller controls it.
- This system is optional equipment on the driver and front passenger seats of all models.

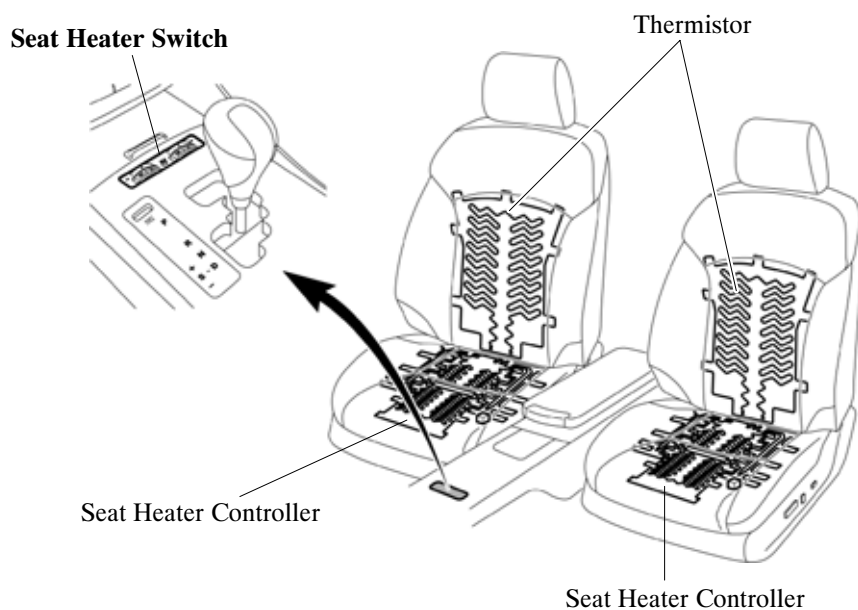

0140BE174C

► System Diagram ◀

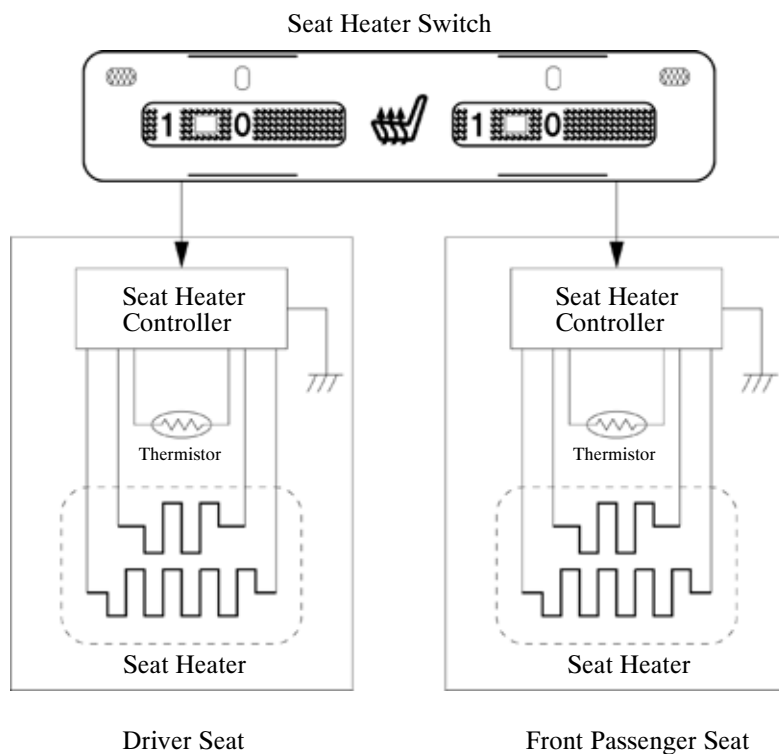

0140BE175C