

HEATED & VENTILATED SEAT SYSTEM


DESCRIPTION

The heated and ventilated seat system has a heating function and ventilation function, in addition to the blower units in the conventional seat ventilation system. This creates a very comfortable seat.

- The heating function and the ventilation function cannot be operated at the same time.
- The basic operation of the heating function is the same as in the seat heater system, however the Air Conditioning ECU controls the heating function.
- For the ventilation function, only air in the cabin is used and hot or cold air is not blown. The Air Conditioning ECU controls the ventilation function.
- This system is optional equipment for the driver and front passenger seats of all models.

SYSTEM DIAGRAM

The system consists of the seat heater element, two fan units, a switch for the heated & ventilated seats, seat heater controller, and Air Conditioning ECU.

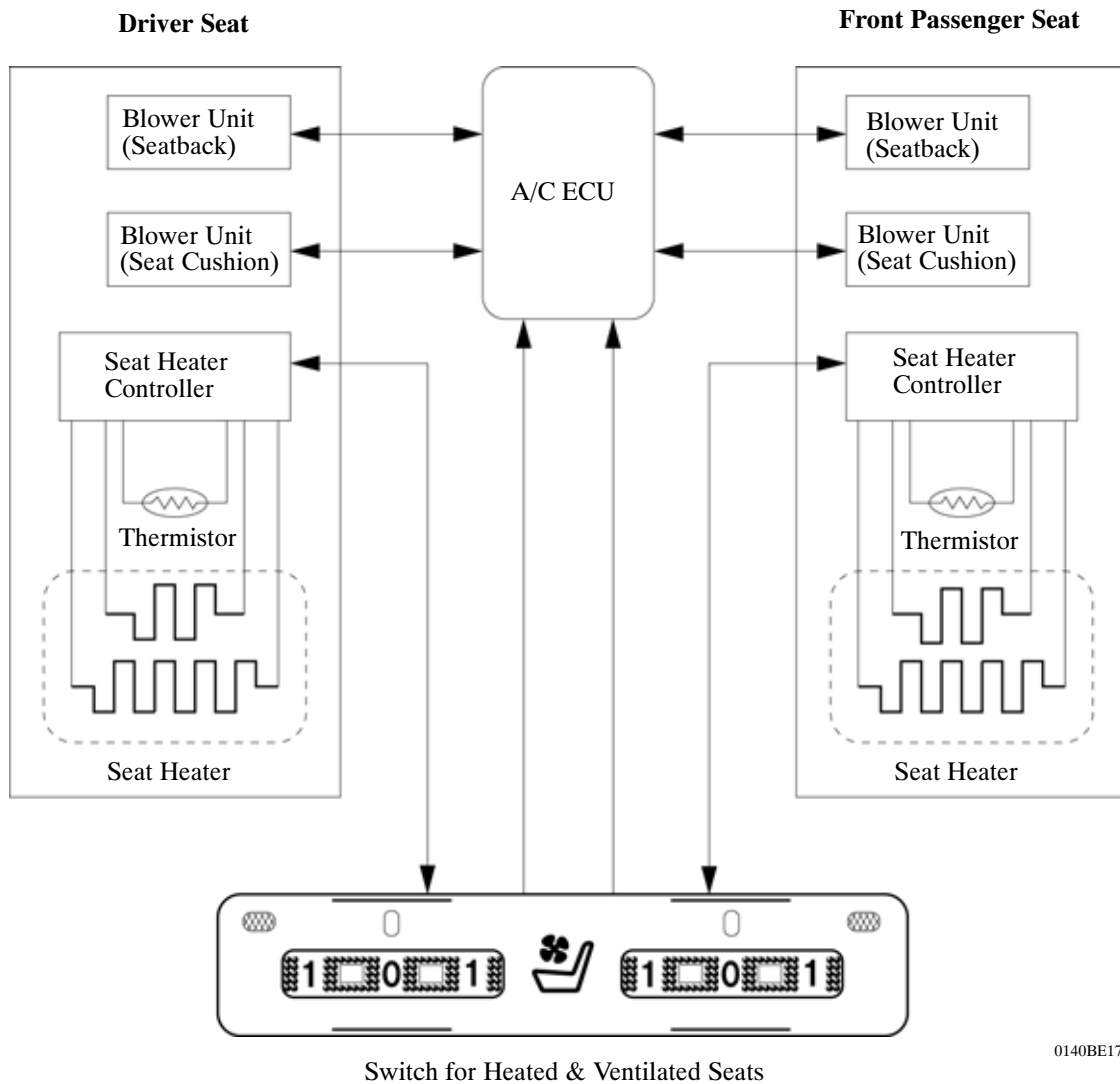

0140BE178C