

■ SEAT BELT

1. General

The following types of seat belts are provided.

Seat	Seat Belt Type	Remarks
Driver and Front Passenger	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter
Rear Passenger (RH and LH)	3-point ELR*1 & ALR*2	Electrical Sensing Type Pretensioner & Force Limiter
Rear Passenger (Center)	3-point ELR*1 & ALR*2	—


*1: Emergency Locking Retractor

*2: Automatic Locking Retractor

2. Pretensioner and Force Limiter

In accordance with deployment signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for frontal collision.


In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

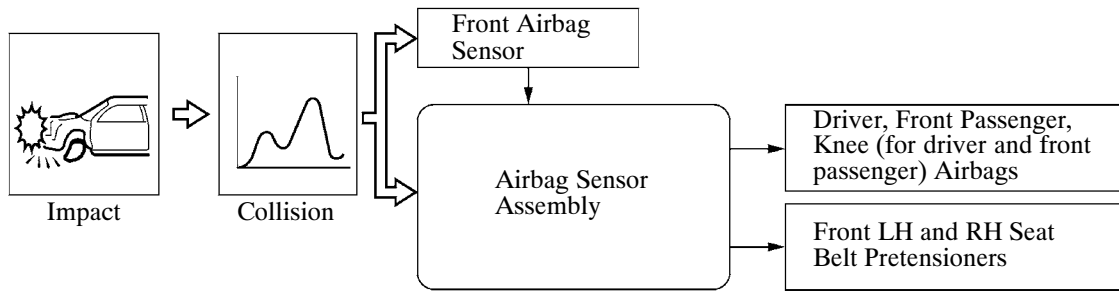

255BO24

3. Seat Belt Comfort Guide

This belt comfort guides for child or small occupant have been added on the both sides of rear seats. With this device, the belt guide can be slid to a position to reduce discomfort caused by the seatbelt.

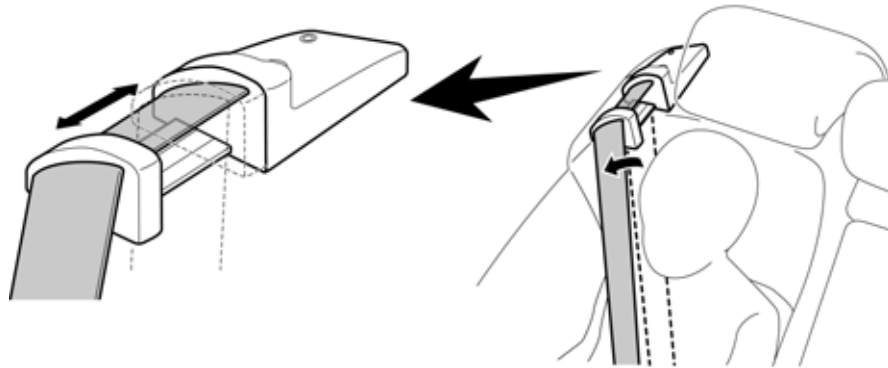

0140BO19C