


■ OIL PUMP

The oil pump is operated by the torque converter. It lubricates the planetary gear units and supplies operating fluid pressure for hydraulic control.

The material of the pump cover is aluminum to reduce weight.

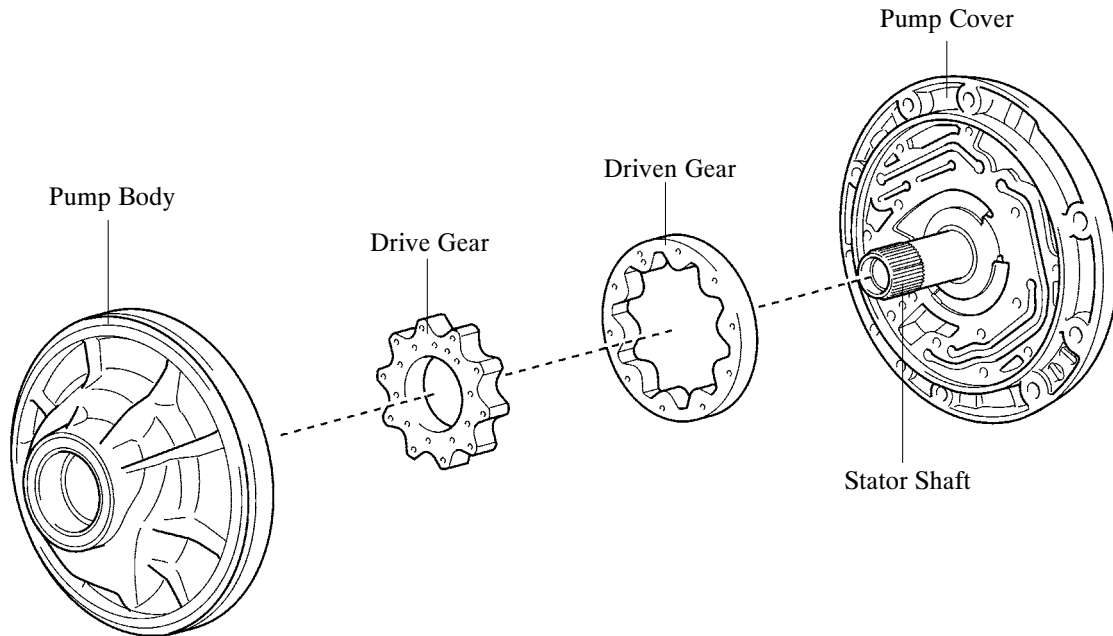

232CH89