

 
Smart Entry and Start System

Smart entry and start system mainly consists of the wireless door lock remote function, engine immobilizer function, start function and entry function.

Start Function

In the start function, the power source can be switched between OFF, ACC, and IG-ON by pushing the engine switch with the key carried by the driver.


In addition, when the key is carried by the driver, the driver can start the engine by pushing the engine switch with the brake pedal (automatic transmission models) or the clutch pedal (manual transmission models) depressed.

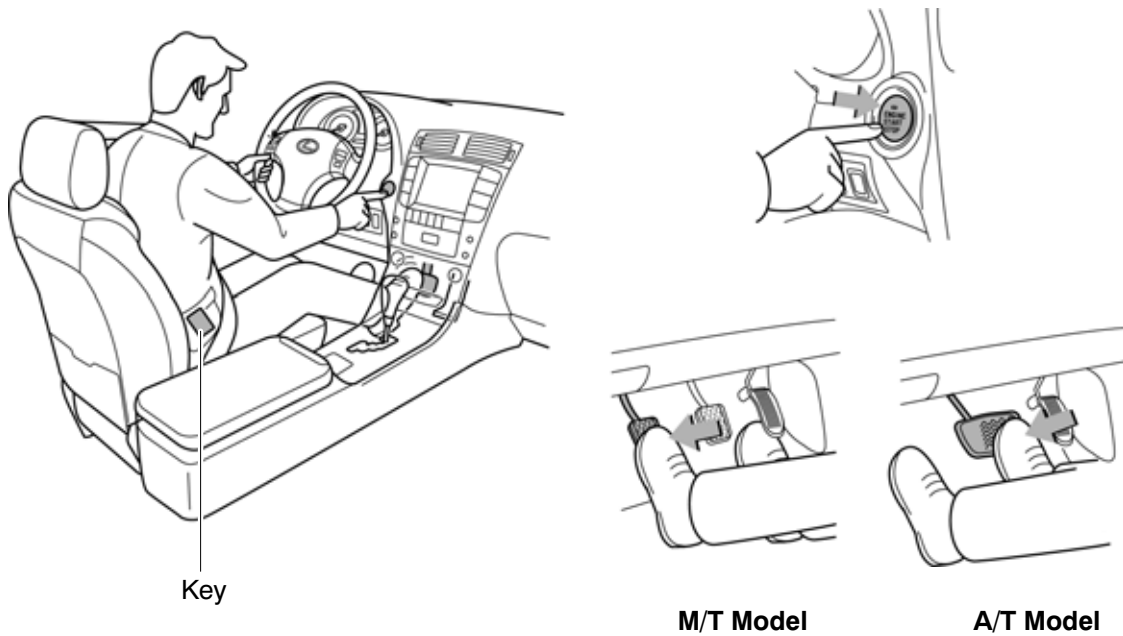

Entry Function


In the entry function, the following functions can be operated when the driver carries the key:

- The foot light and dome lights come on if the driver gets close to the vehicle. (Entry Illumination)
- The doors unlock if the door outside handle is gripped. (Entry Unlock)
- The doors lock if the lock switch on the door outside handle is pushed. (Entry Lock)
- The trunk opens if the trunk open switch is pushed. (Entry Trunk Open)

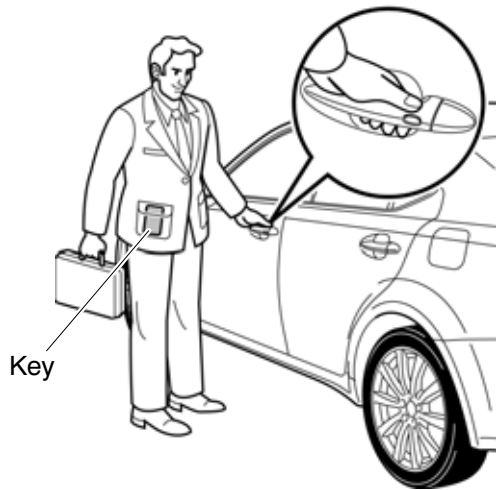


Entry Unlock

0140MO14C

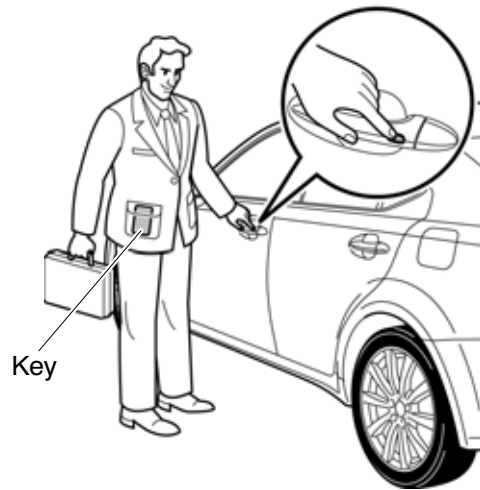

Entry Lock

0140MO15C

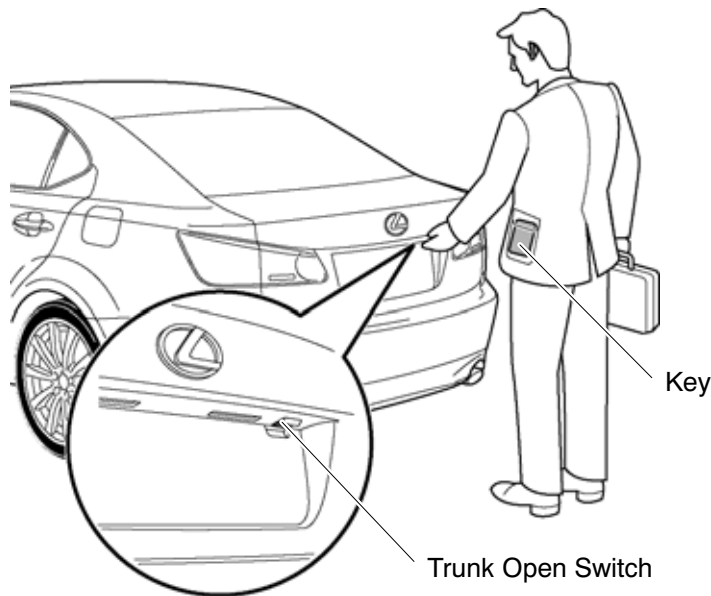

Entry Trunk Open

0140MO16C