



LEXUS Parking Assist-sensor

The LEXUS parking assist-sensor informs the driver of the distance between the sensors and the obstacles as well as their positions by displaying them on the multi-information display in the combination meter or multi display and by sounding a buzzer.

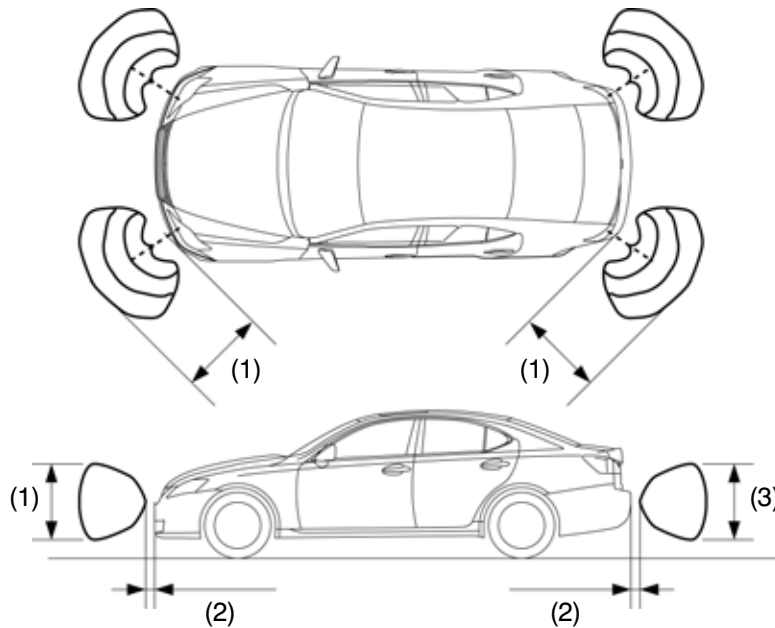

0140BE70C

Corner Area

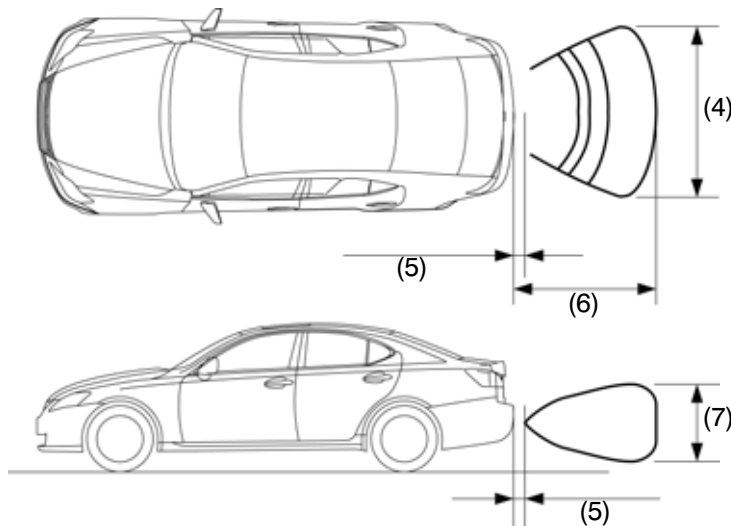

0140BE71C

Rear Center Area