



Position of Parts in Engine Compartment (LHD)

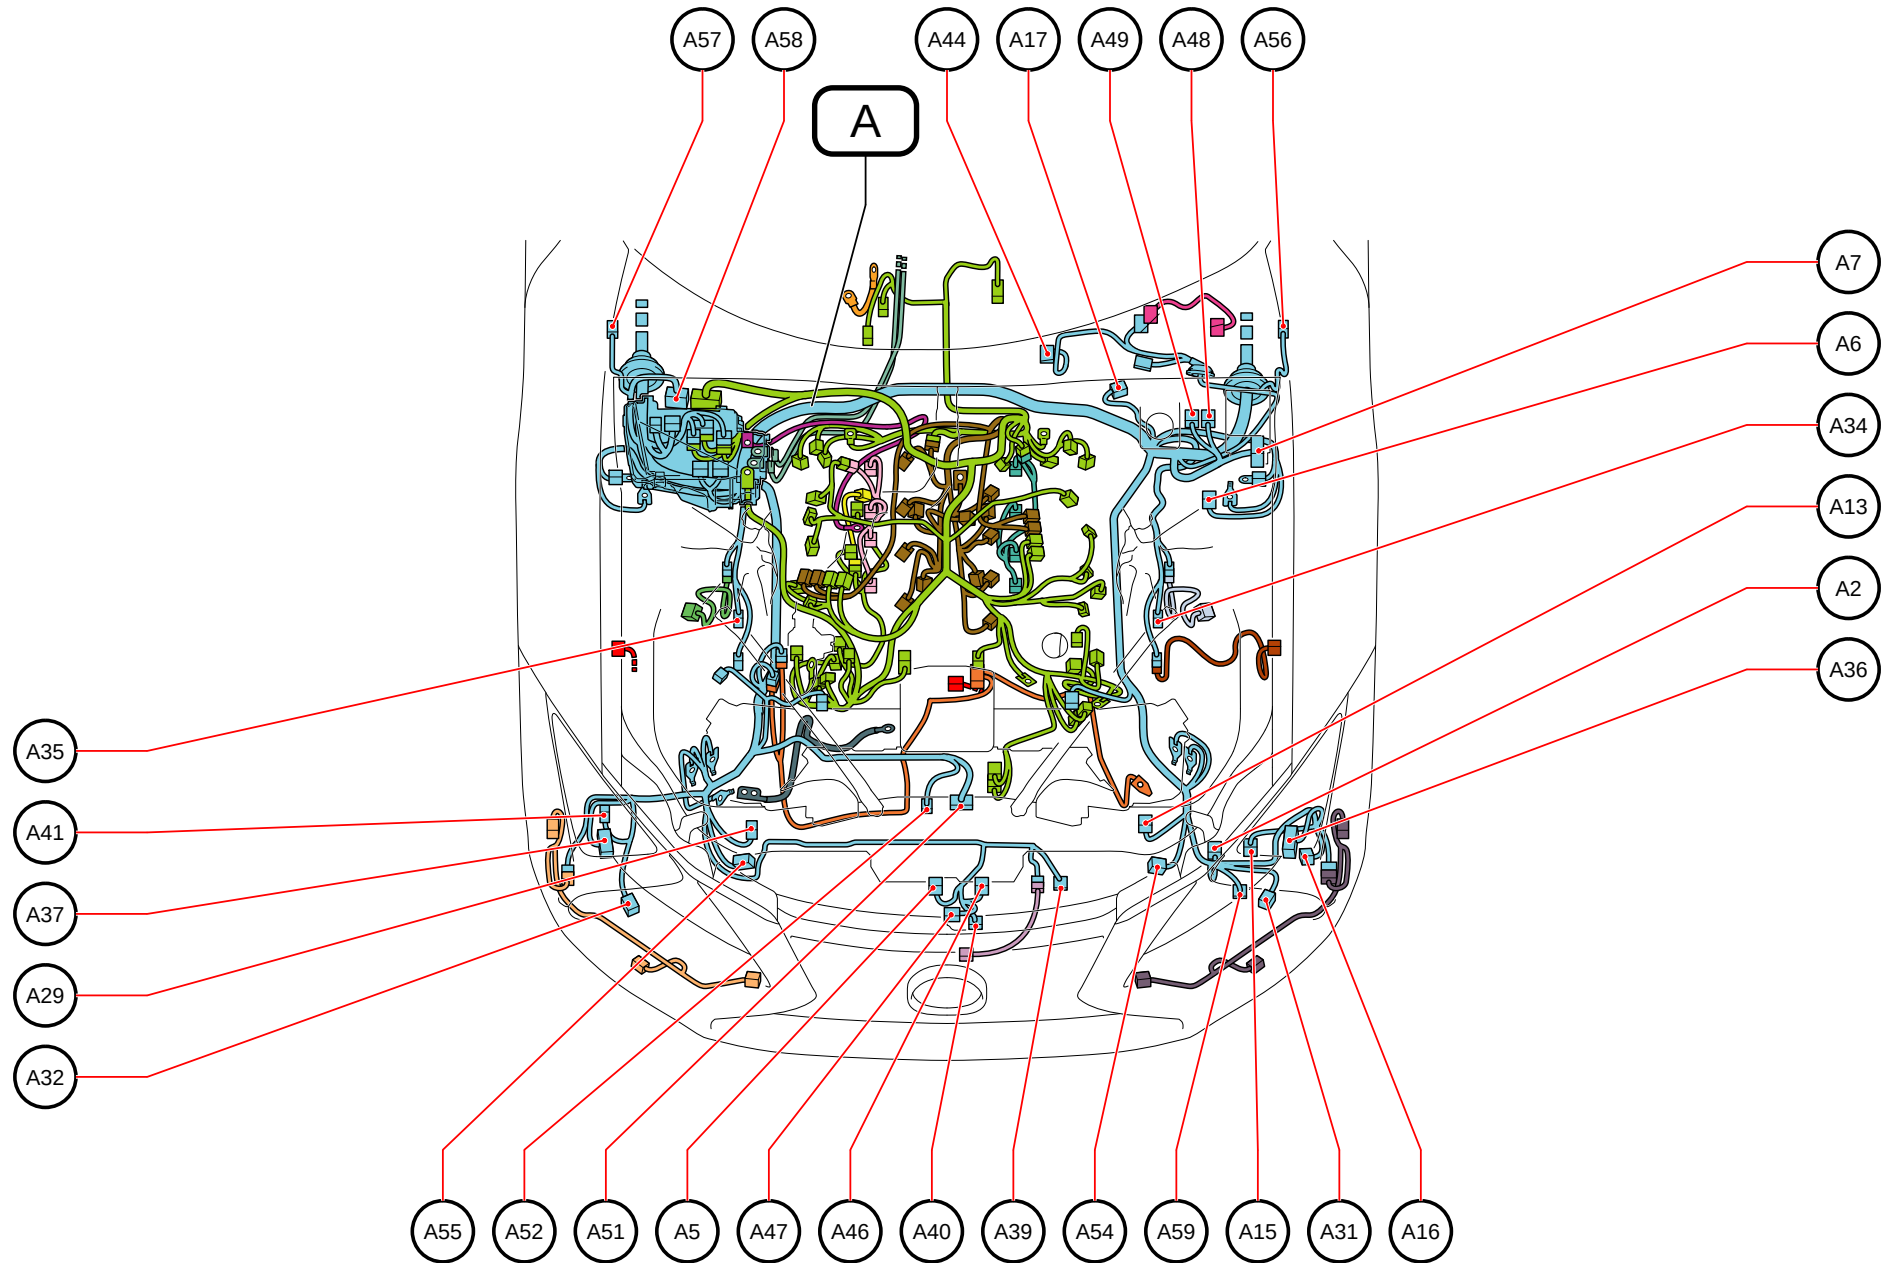


Position of Parts in Engine Compartment (LHD)

A2	Headlight Cleaner Control Relay
A5	Hood Courtesy Switch (Hood Lock Assembly)
A6	Wireless Door Lock Buzzer
A7	Brake Actuator Assembly
A13	Front Airbag Sensor LH
A15	Windshield Washer Motor and Pump Assembly
A16	Level Warning Switch Assembly
A17	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A29	Front Airbag Sensor RH
A31	Pedestrian Detection Chamber Assembly
A32	Pedestrian Detection Chamber Assembly
A34	Front Height Control Sensor Sub-Assembly LH
A35	Front Height Control Sensor Sub-Assembly RH
A36	Headlight Light Control ECU Assembly LH (Headlight Assembly LH)
A37	Headlight Light Control ECU Assembly RH (Headlight Assembly RH)
A39	Air Conditioner Pressure Sensor
A40	Outside Air Temperature Sensor (Thermistor Assembly)
A41	High Pitched Horn Assembly
A44	No. 2 Windshield Wiper Motor Assembly
A46	Low Pitched Horn Assembly
A47	Smog Ventilation Sensor
A48	Brake Booster Pump with Accumulator Assembly
A49	Brake Booster Pump with Accumulator Assembly
A51	Fan with Motor Assembly
A52	Fan with Motor Assembly
A54	Pop Up Hood Lifter Assembly LH
A55	Pop Up Hood Lifter Assembly RH
A56	No. 2 Pop Up Hood Lifter Assembly LH
A57	No. 2 Pop Up Hood Lifter Assembly RH
A58	ECM
A59	Headlight Cleaner Motor and Pump Assembly


Position of Parts in Engine Compartment (LHD)

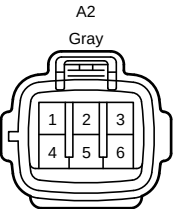


90980-11194

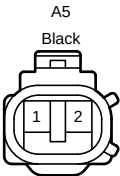


90980-11003

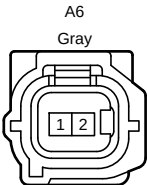


90980-12572

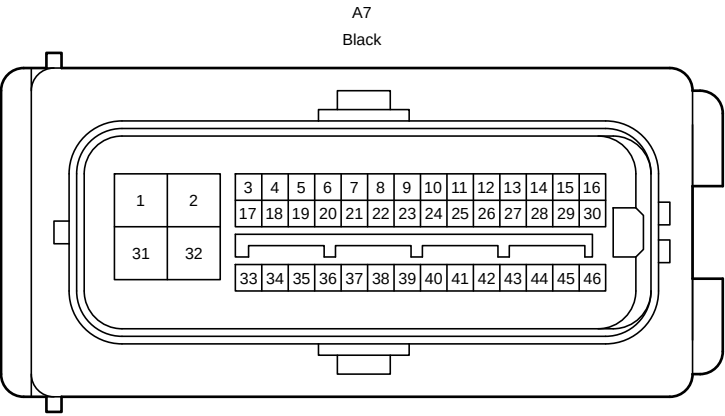


90980-12297

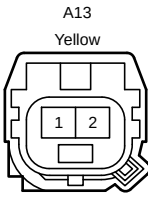


90980-12490

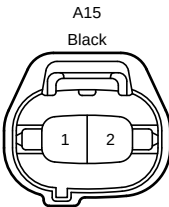


90980-11156

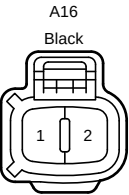


90980-11068

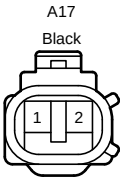


90980-11003

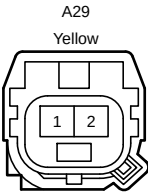


90980-12490

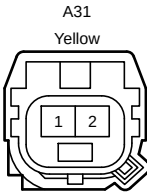


90980-12490

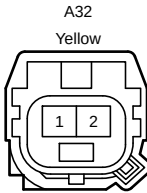


90980-12490

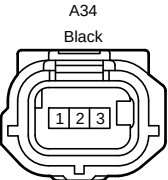


90980-12353

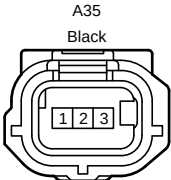


90980-12353

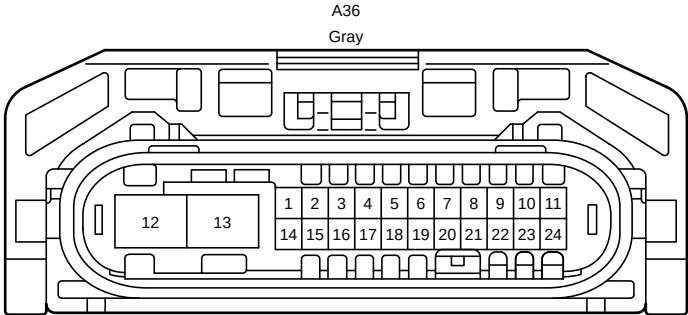


90980-12A92

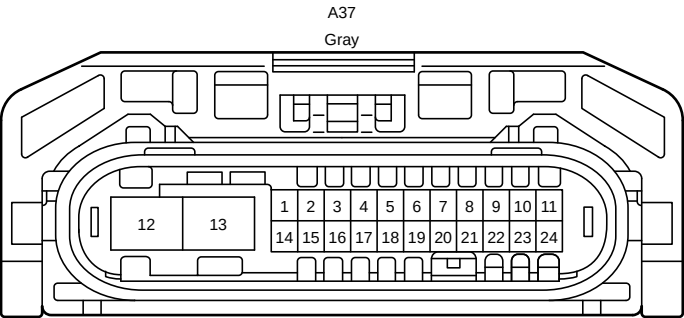

90980-12A92

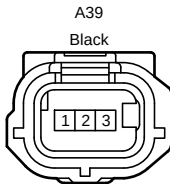

90980-12353

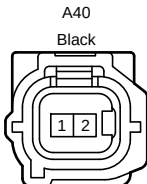

90980-12416

Position of Parts in Engine Compartment (LHD)

