



Position of Parts in Engine Compartment (LHD)

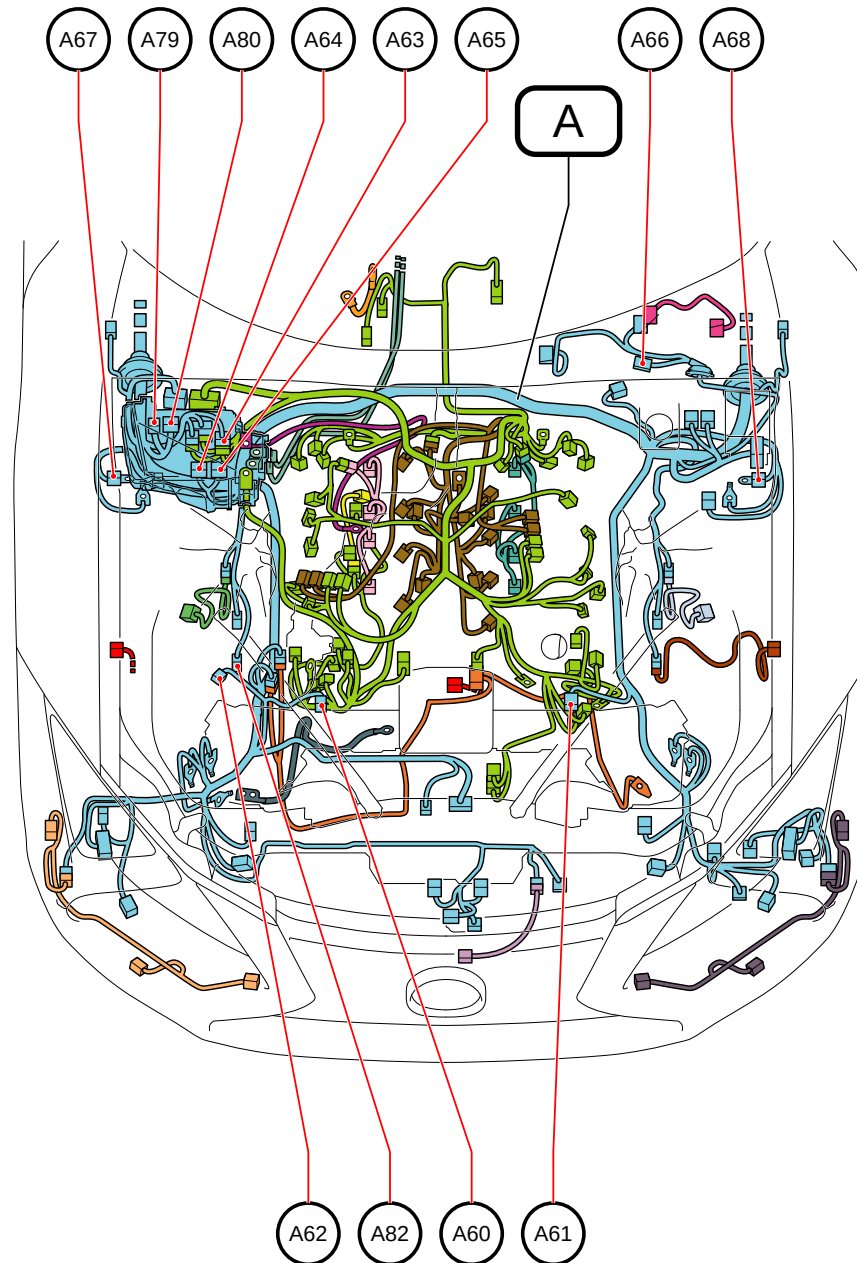


A60	Intake Mass Air Flow Meter Sub-Assembly RH
A61	Intake Mass Air Flow Meter Sub-Assembly LH
A62	Vacuum Switching Valve (Air Cleaner with Element Assembly RH)
A63	No. 1 Junction Connector
A64	No. 2 Junction Connector
A65	No. 12 Junction Connector
A66	Front Wiper Deicer (Windshield Glass)
A67	No. 2 Ground Junction Connector
A68	No. 1 Ground Junction Connector
A79	No. 1 Semiconductor Power Integration ECU
A80	No. 1 Semiconductor Power Integration ECU
A82	Front Skid Control Sensor Wire RH


Position of Parts in Engine Compartment (LHD)

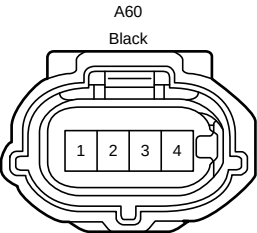


90980-12A85

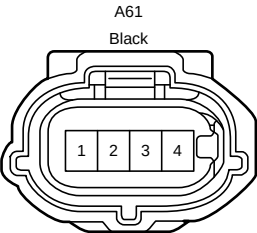


90980-12A85

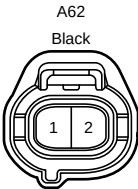


90980-12B06

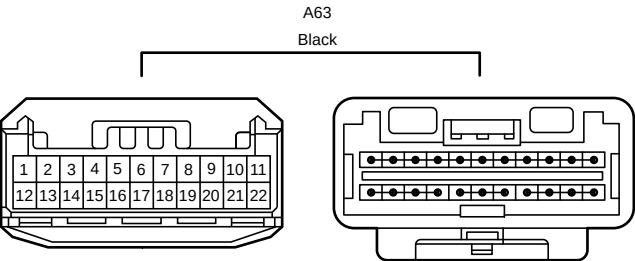


90980-12B54

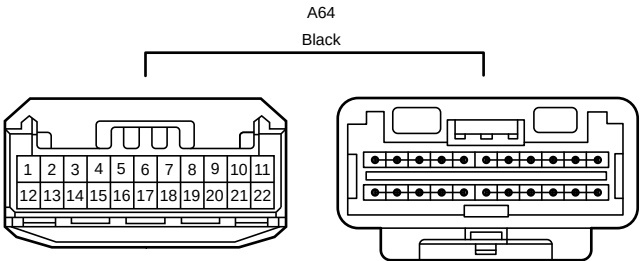


90980-12B54

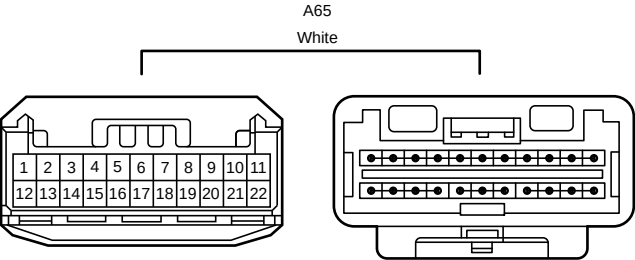

90980-12B54

 

90980-11155

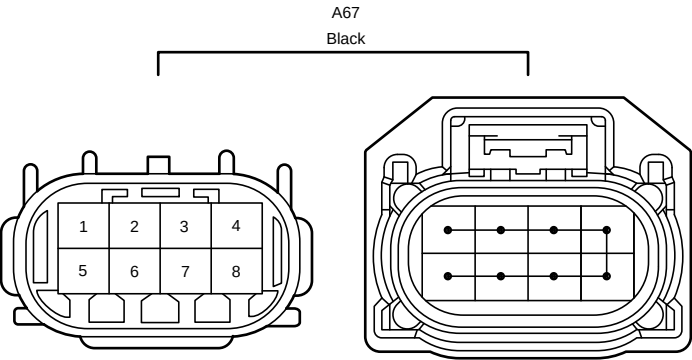

90980-12B56

Position of Parts in Engine Compartment (LHD)

