

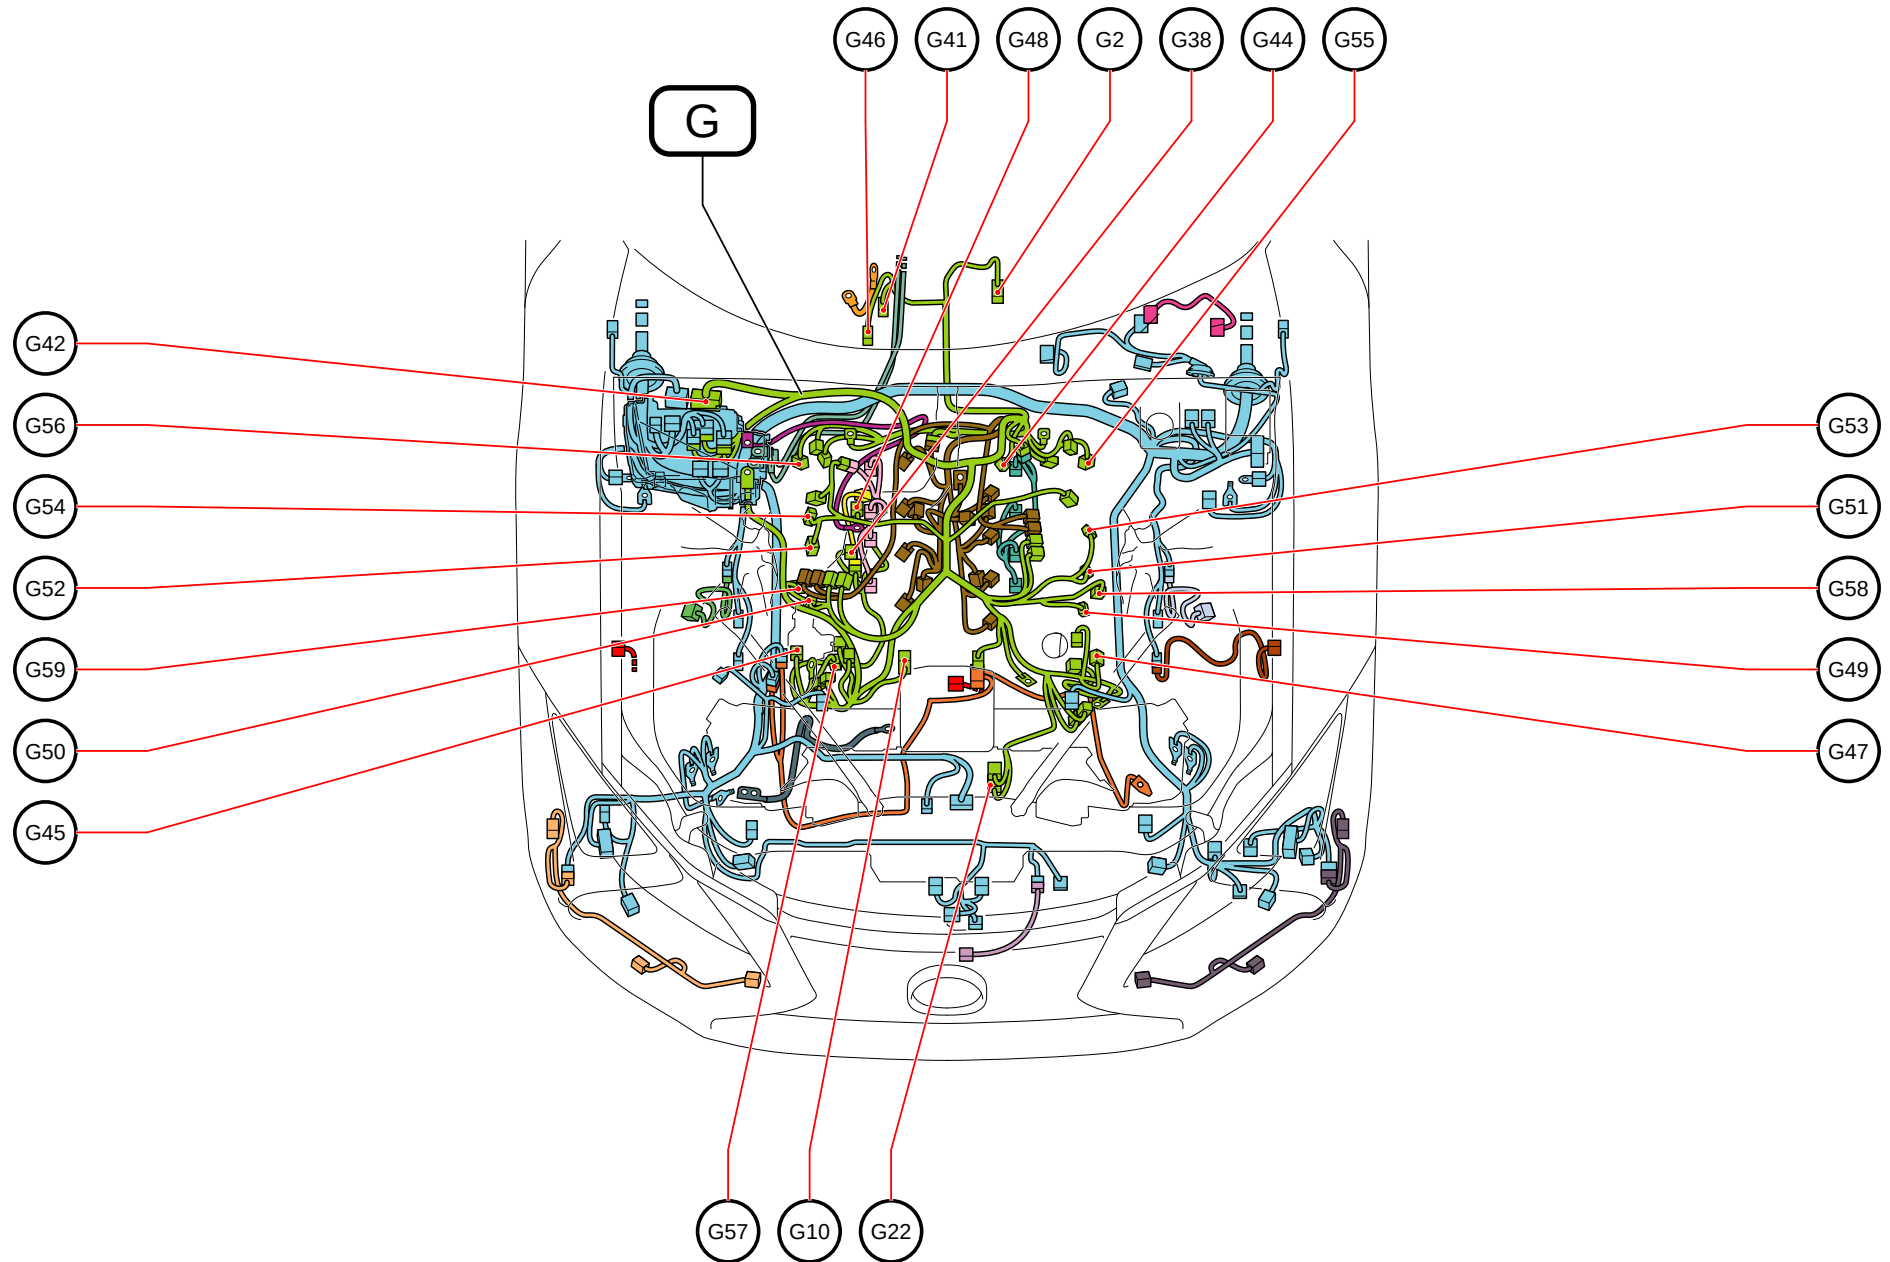
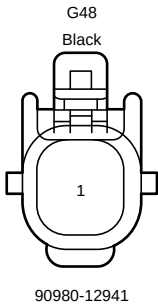
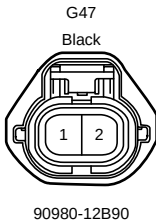
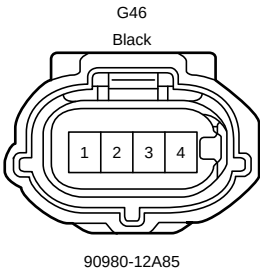
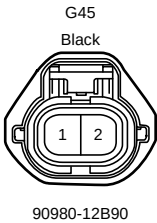
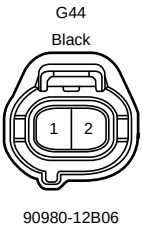
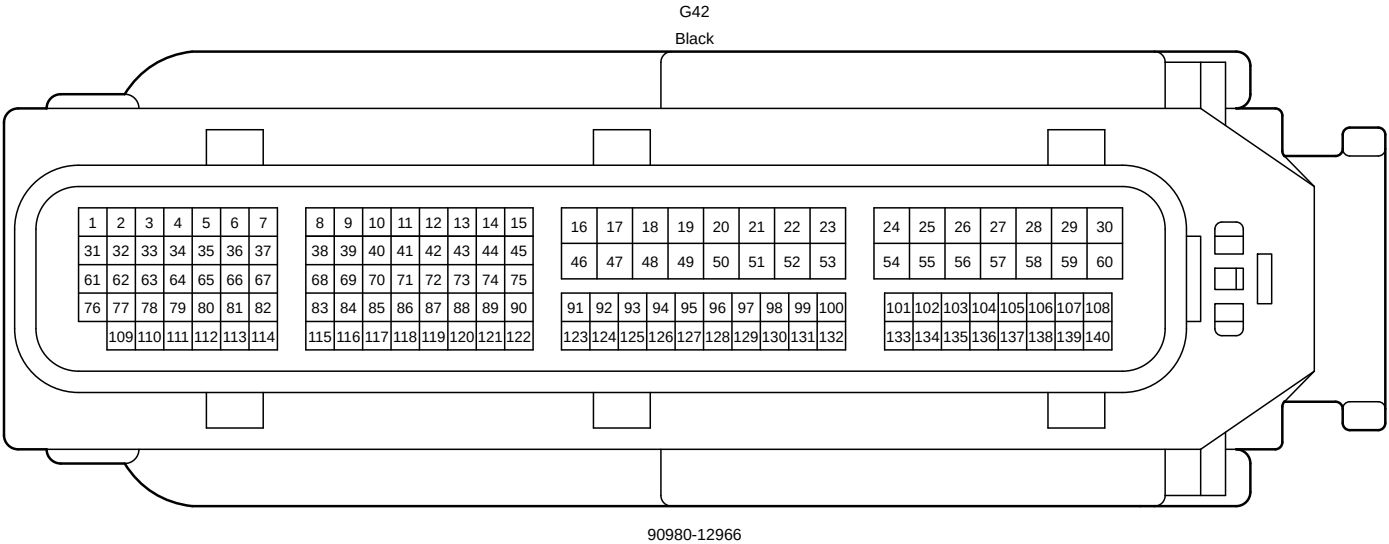
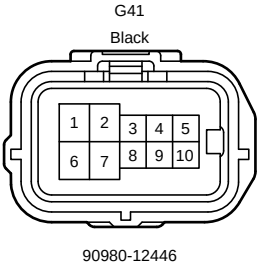


Position of Parts in Engine Compartment (LHD)

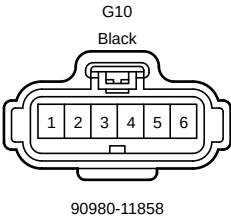

G2	ECT Solenoid (Transmission Wire)
G10	Throttle Body with Motor Assembly
G22	Engine Oil Pressure Switch Assembly
G38	Engine Oil Level Sensor
G41	Shift Control Actuator Assembly
G42	ECM
G44	Purge VSV
G45	Cam Timing Oil Control Valve Assembly RH (Bank 2 Exhaust Side)
G46	Shift Control Actuator Assembly
G47	Cam Timing Oil Control Valve Assembly LH (Bank 1 Exhaust Side)
G48	Starter Assembly
G49	Ignition Coil Assembly No. 1
G50	Ignition Coil Assembly No. 2
G51	Ignition Coil Assembly No. 3
G52	Ignition Coil Assembly No. 4
G53	Ignition Coil Assembly No. 5
G54	Ignition Coil Assembly No. 6
G55	Ignition Coil Assembly No. 7
G56	Ignition Coil Assembly No. 8
G57	Generator Assembly
G58	VVT Sensor (Bank 1 Exhaust Side)
G59	VVT Sensor (Bank 2 Exhaust Side)

Position of Parts in Engine Compartment (LHD)

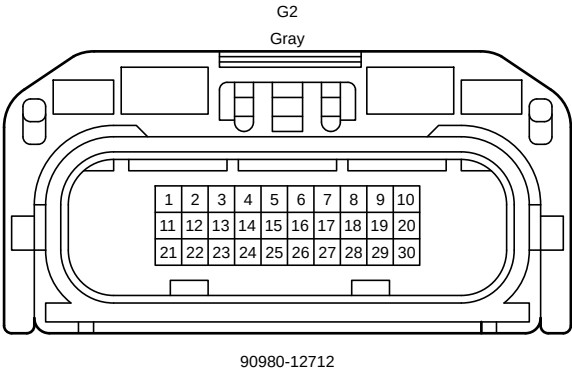

Position of Parts in Engine Compartment (LHD)

