


Position of Parts in Engine Compartment (LHD)

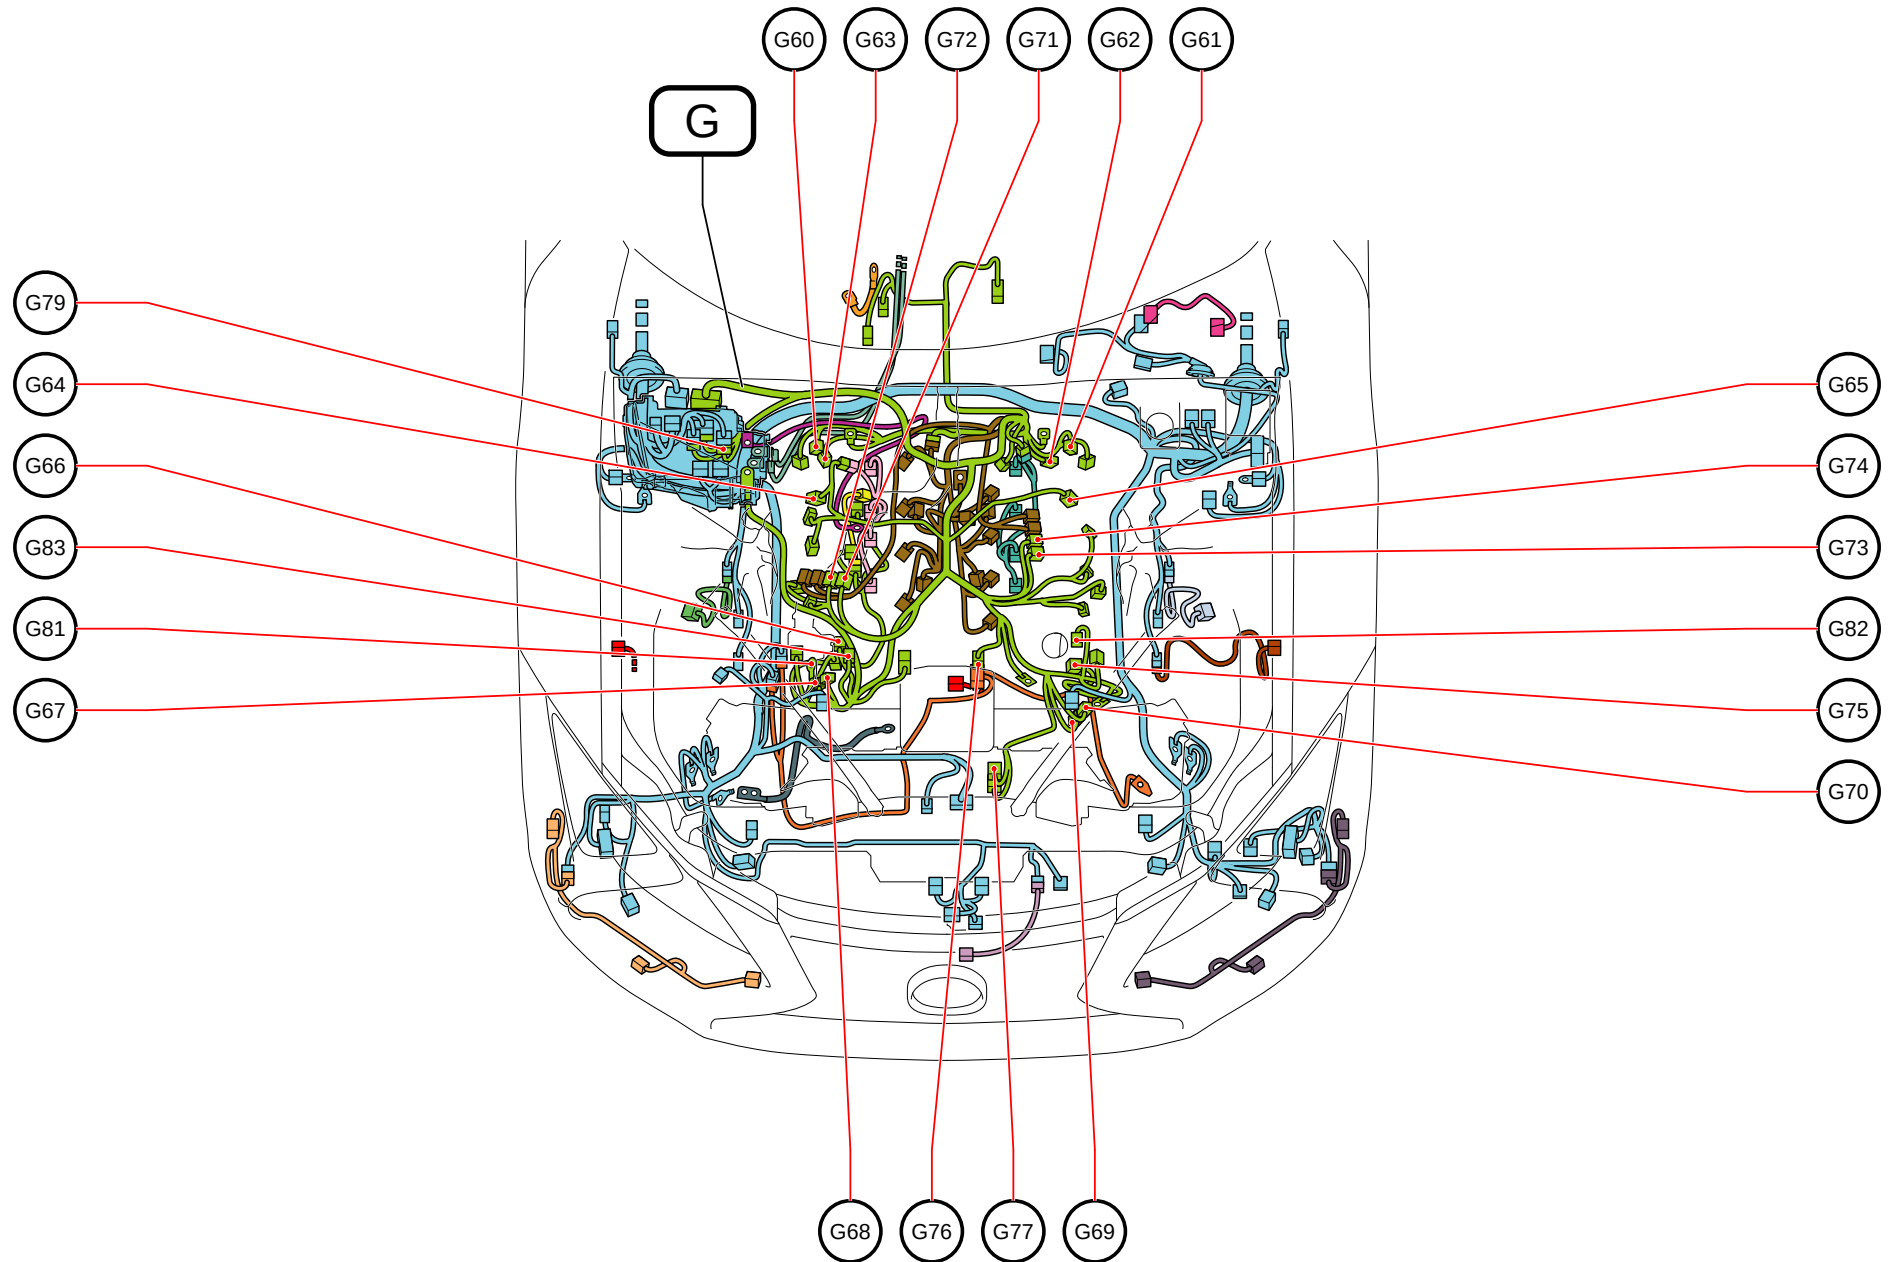

G60	VVT Sensor (Bank 2 Intake Side)
G61	VVT Sensor (Bank 1 Intake Side)
G62	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
G63	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
G64	Fuel Pump with Seal Sub-Assembly RH
G65	Fuel Pump with Seal Sub-Assembly LH
G66	Camshaft Position Sensor
G67	Camshaft Timing Control with EDU Motor Assembly RH
G68	Camshaft Timing Control with EDU Motor Assembly RH
G69	Camshaft Timing Control with EDU Motor Assembly LH
G70	Camshaft Timing Control with EDU Motor Assembly LH
G71	Injector Driver No. 2
G72	Injector Driver No. 2
G73	Injector Driver No. 1
G74	Injector Driver No. 1
G75	Compressor with Pulley Assembly
G76	E.F.I. Engine Coolant Temperature Sensor
G77	Oil Temperature Sensor
G79	No. 13 Junction Connector
G81	Generator Assembly
G82	Differential Pressure Sensor LH
G83	Differential Pressure Sensor RH

Position of Parts in Engine Compartment (LHD)

