

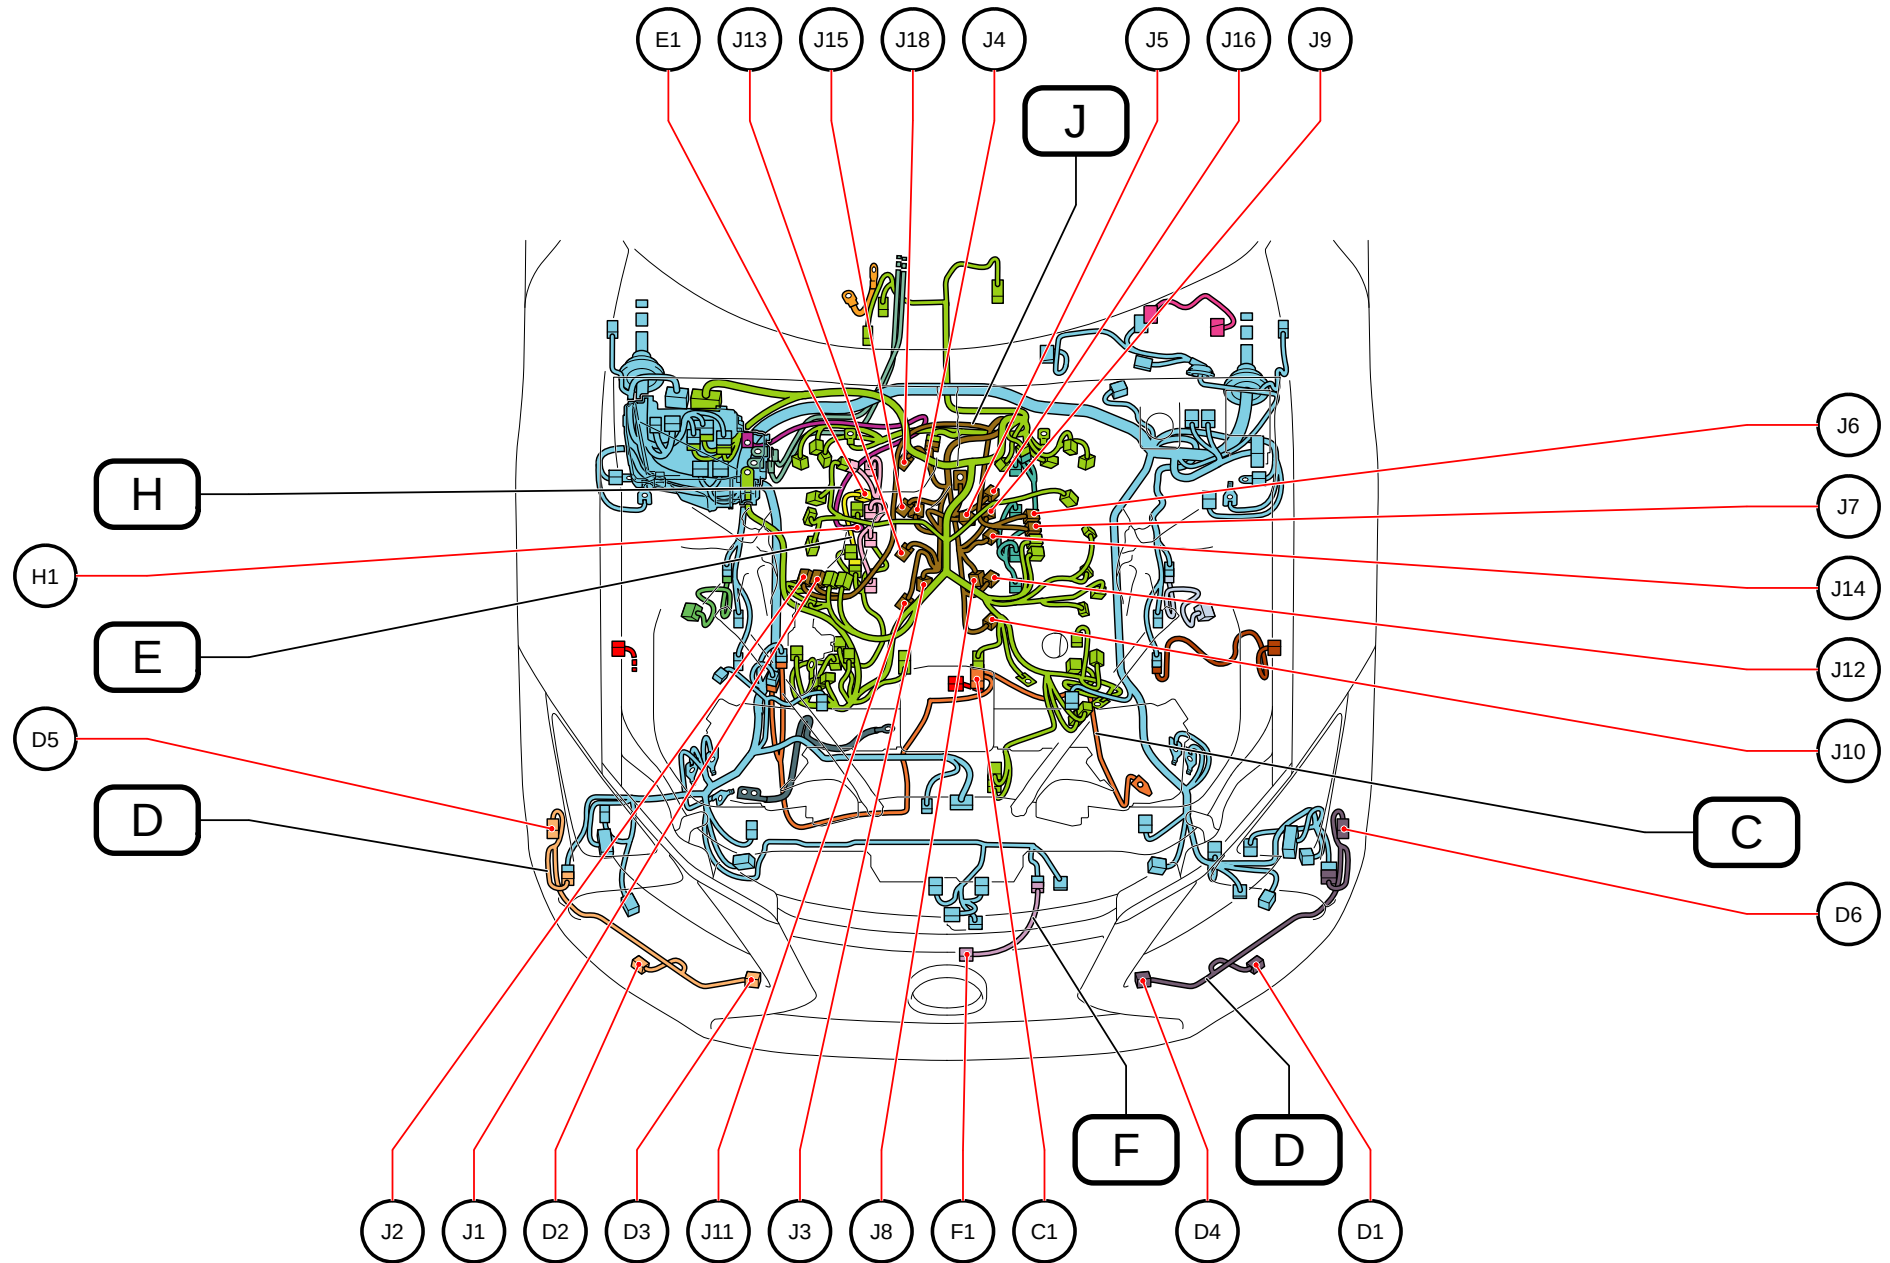
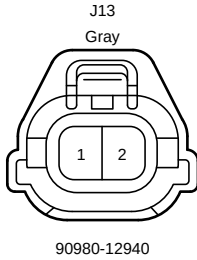
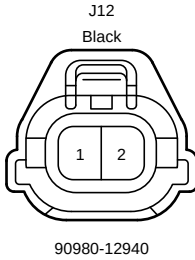
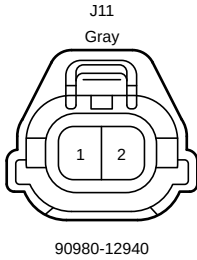
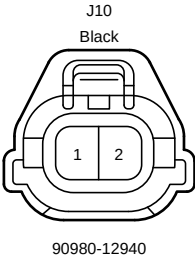
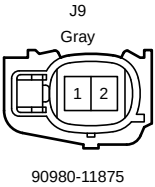
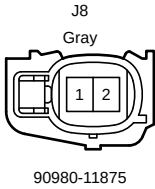
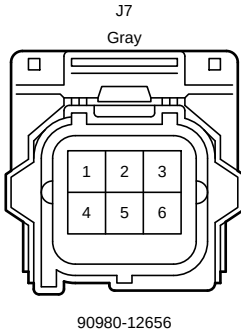
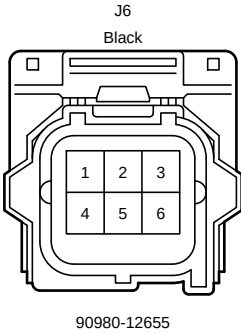
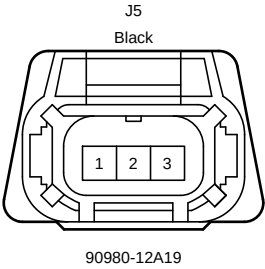
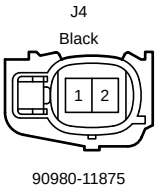
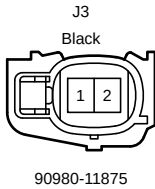
 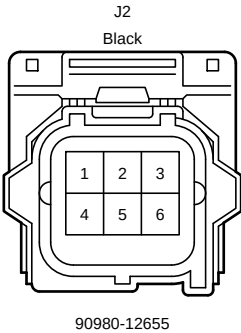
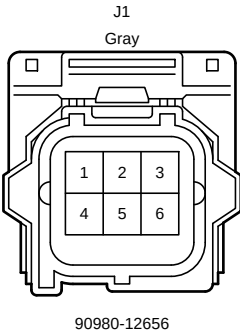

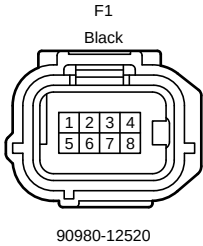
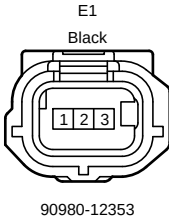
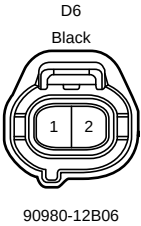
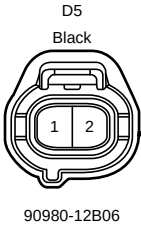
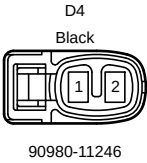
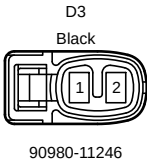
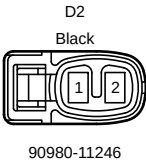


Position of Parts in Engine Compartment (LHD)

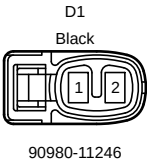

C1	Rack & Pinion Power Steering Gear Assembly
D1	Front Ultrasonic Sensor Corner LH
D2	Front Ultrasonic Sensor Corner RH
D3	Front Ultrasonic Sensor Center RH
D4	Front Ultrasonic Sensor Center LH
D5	Front Turn Signal Light Assembly RH
D6	Front Turn Signal Light Assembly LH
E1	Crank Position Sensor
F1	Millimeter Wave Radar Sensor Assembly
H1	Starter Assembly
J1	Injector Driver No. 2
J2	Injector Driver No. 2
J3	Knock Control Sensor (Bank 2 Sensor 1)
J4	Knock Control Sensor (Bank 2 Sensor 2)
J5	Fuel Pressure Sensor (Fuel Delivery Pipe LH)
J6	Injector Driver No. 1
J7	Injector Driver No. 1
J8	Knock Control Sensor (Bank 1 Sensor 1)
J9	Knock Control Sensor (Bank 1 Sensor 2)
J10	Direct Fuel Injector Assembly No. 1
J11	Direct Fuel Injector Assembly No. 2
J12	Direct Fuel Injector Assembly No. 3
J13	Direct Fuel Injector Assembly No. 4
J14	Direct Fuel Injector Assembly No. 5
J15	Direct Fuel Injector Assembly No. 6
J16	Direct Fuel Injector Assembly No. 7
J18	Direct Fuel Injector Assembly No. 8

Position of Parts in Engine Compartment (LHD)

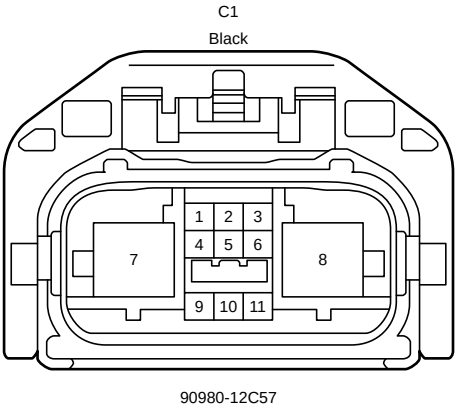

Position of Parts in Engine Compartment (LHD)

