


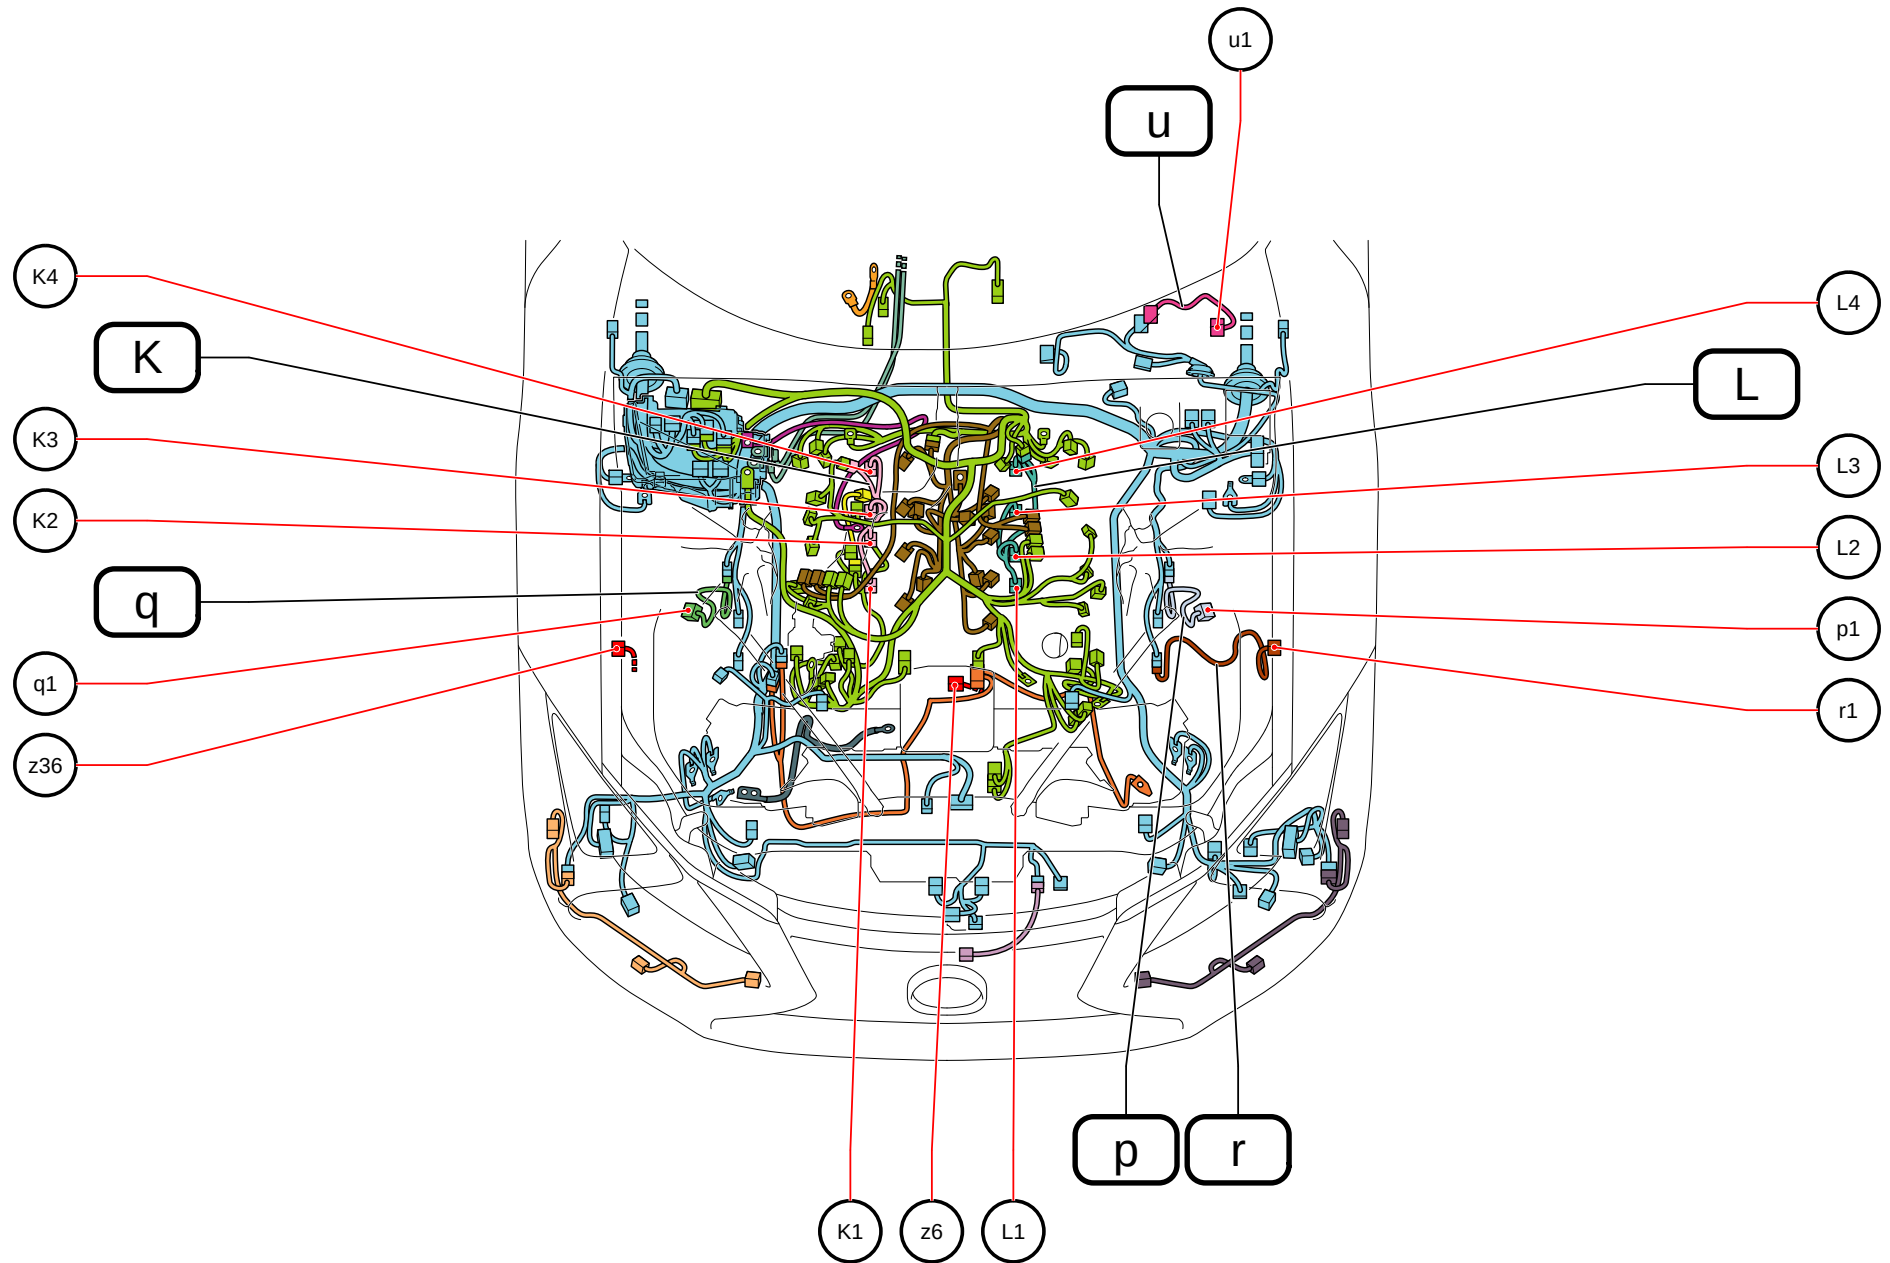

Position of Parts in Engine Compartment (LHD)

K1	Port Fuel Injector Assembly No. 2
K2	Port Fuel Injector Assembly No. 4
K3	Port Fuel Injector Assembly No. 6
K4	Port Fuel Injector Assembly No. 8
L1	Port Fuel Injector Assembly No. 1
L2	Port Fuel Injector Assembly No. 3
L3	Port Fuel Injector Assembly No. 5
L4	Port Fuel Injector Assembly No. 7
p1	Front Shock Absorber Assembly LH
q1	Front Shock Absorber Assembly RH
r1	Front Speed Sensor LH (Front Axle Hub Sub-Assembly LH)
u1	Windshield Wiper Motor Assembly
z6	Steering Torque Sensor (Rack & Pinion Power Steering Gear Assembly) , Rack & Pinion Power Steering Gear Assembly
z36	Front Speed Sensor RH (Front Axle Hub Sub-Assembly RH) , Front Skid Control Sensor Wire RH

Position of Parts in Engine Compartment (LHD)

