


Position of Parts in Seat (RHD)

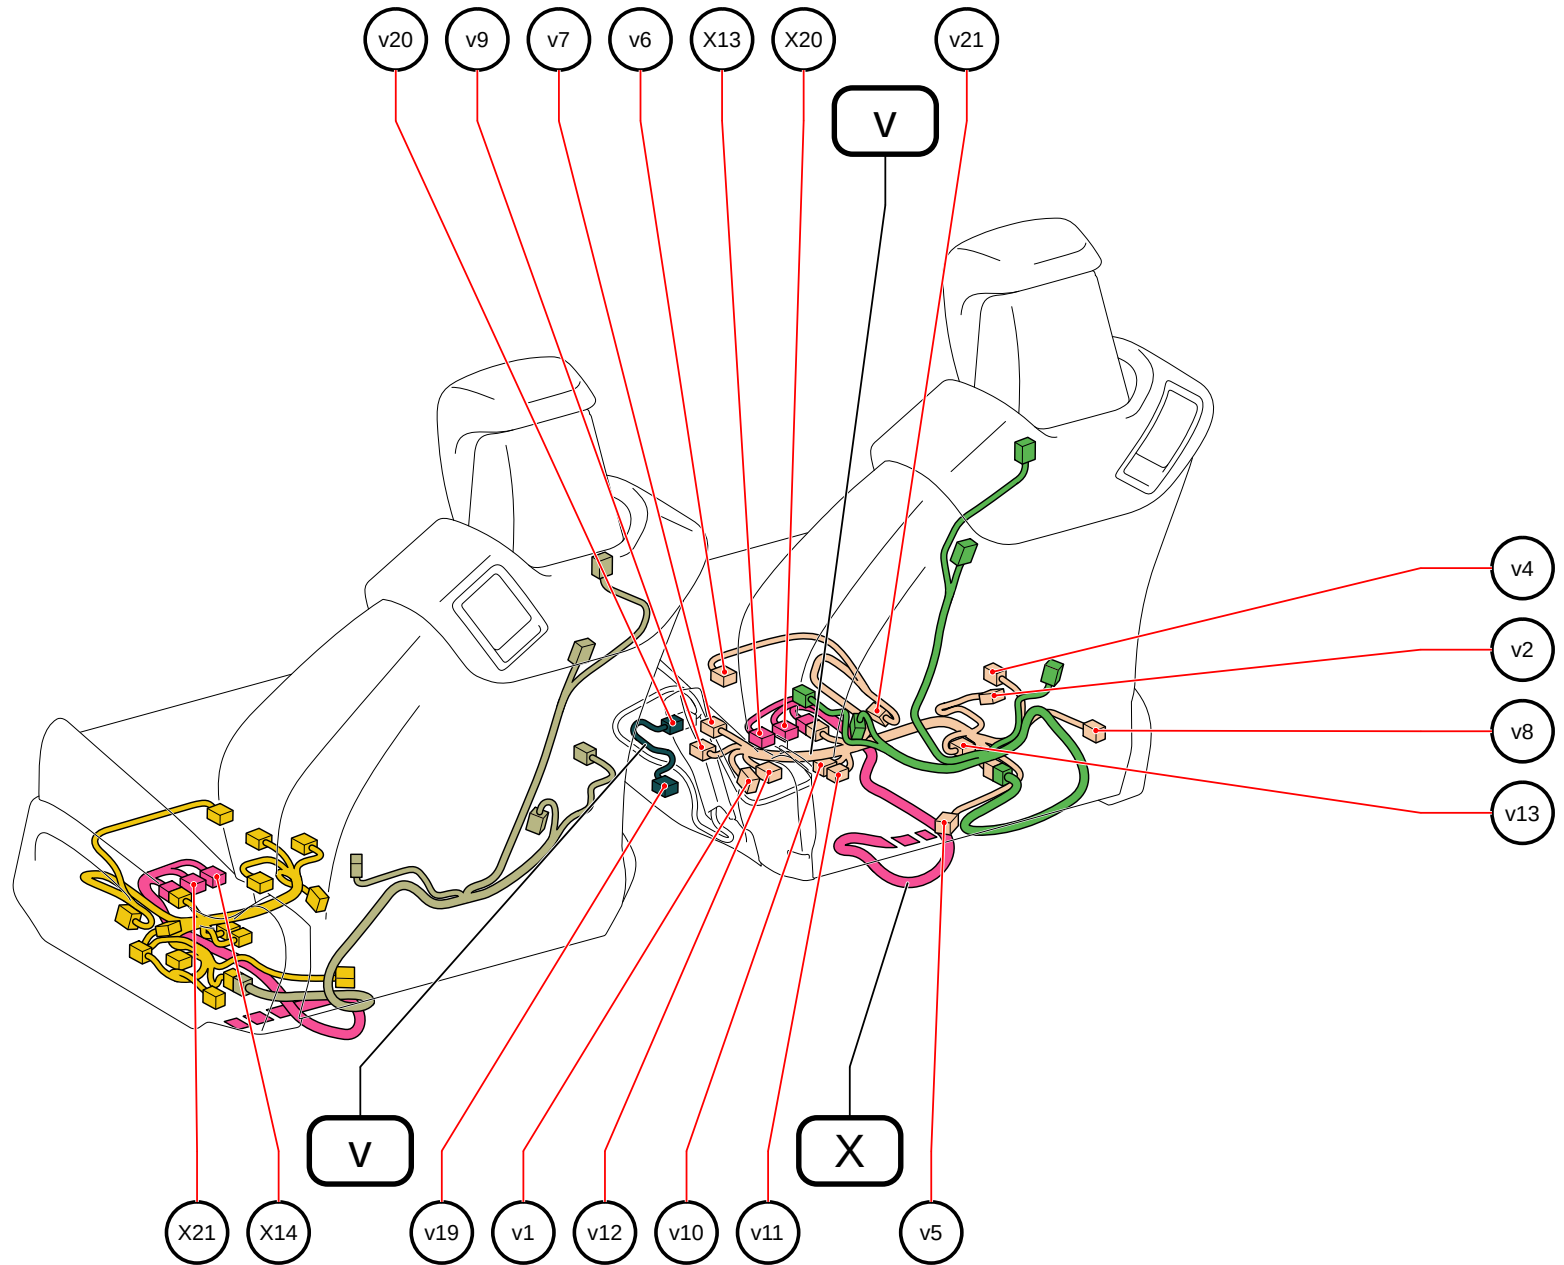

Position of Parts in Seat (RHD)

X13	Front Seat Inner Belt Assembly RH
X14	Front Seat Inner Belt Assembly LH
X20	Front Seat Airbag Assembly RH
X21	Front Seat Airbag Assembly LH
v1	Power Seat Slide Motor RH (Front Seat Adjuster Assembly RH)
v2	Power Seat Lift Motor RH (Front Seat Adjuster Assembly RH)
v4	Front Power Seat Switch RH
v5	Seat Heater RH (Front Seat Cushion Heater Assembly RH)
v6	Seat Cushion Climate Control Blower Assembly RH
v7	Front Seat Inner Belt Assembly RH
v8	Limit Switch Assembly RH (Outer)
v9	Seat Heater Control Sub-Assembly RH
v10	Position Control ECU Assembly RH
v11	Position Control ECU Assembly RH
v12	Position Control ECU Assembly RH
v13	No. 10 Junction Connector
v19	Seat Position Airbag Sensor RH
v20	Front Seat Inner Belt Assembly RH
v21	Power Seat Tilt Motor RH (Front Seat Adjuster Assembly RH)


Position of Parts in Seat (RHD)




90980-10942




90980-10942

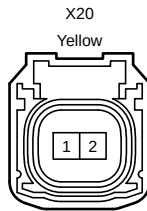


90980-12698

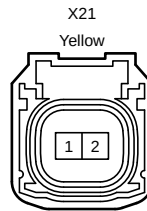


90980-12698

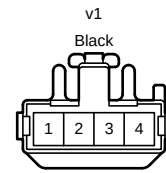


90980-12335

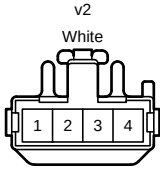


90980-12335

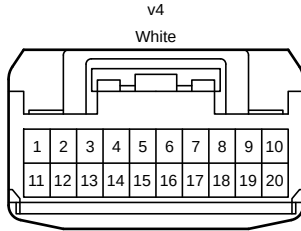


90980-12460

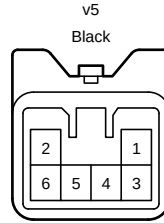


90980-10796

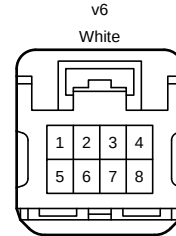


90980-12735

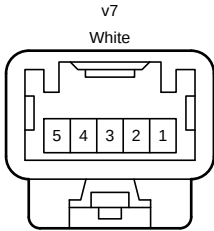


90980-12365

 


90980-11736

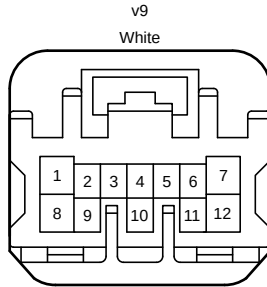


90980-12812

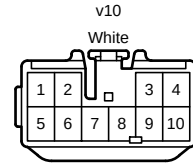


90980-10997

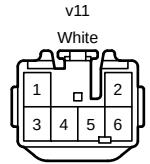


90980-10996

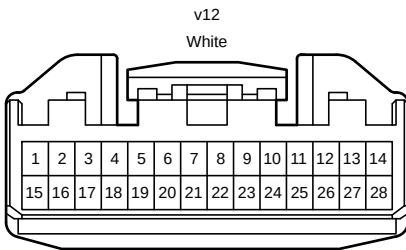

90980-12555

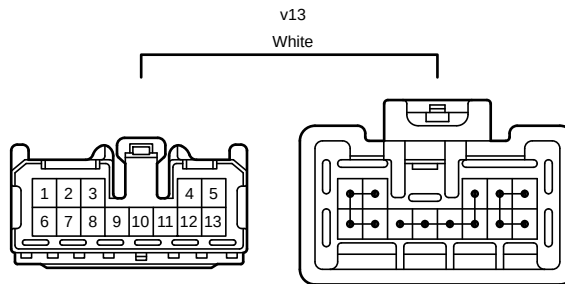


90980-12346

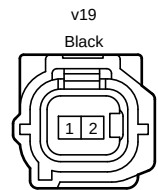

90980-12416



90980-11155

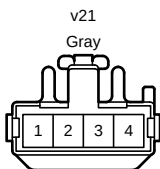

90980-12335