




Active Noise Control, Audio System, Back Guide Monitor System, LEXUS Navigation System

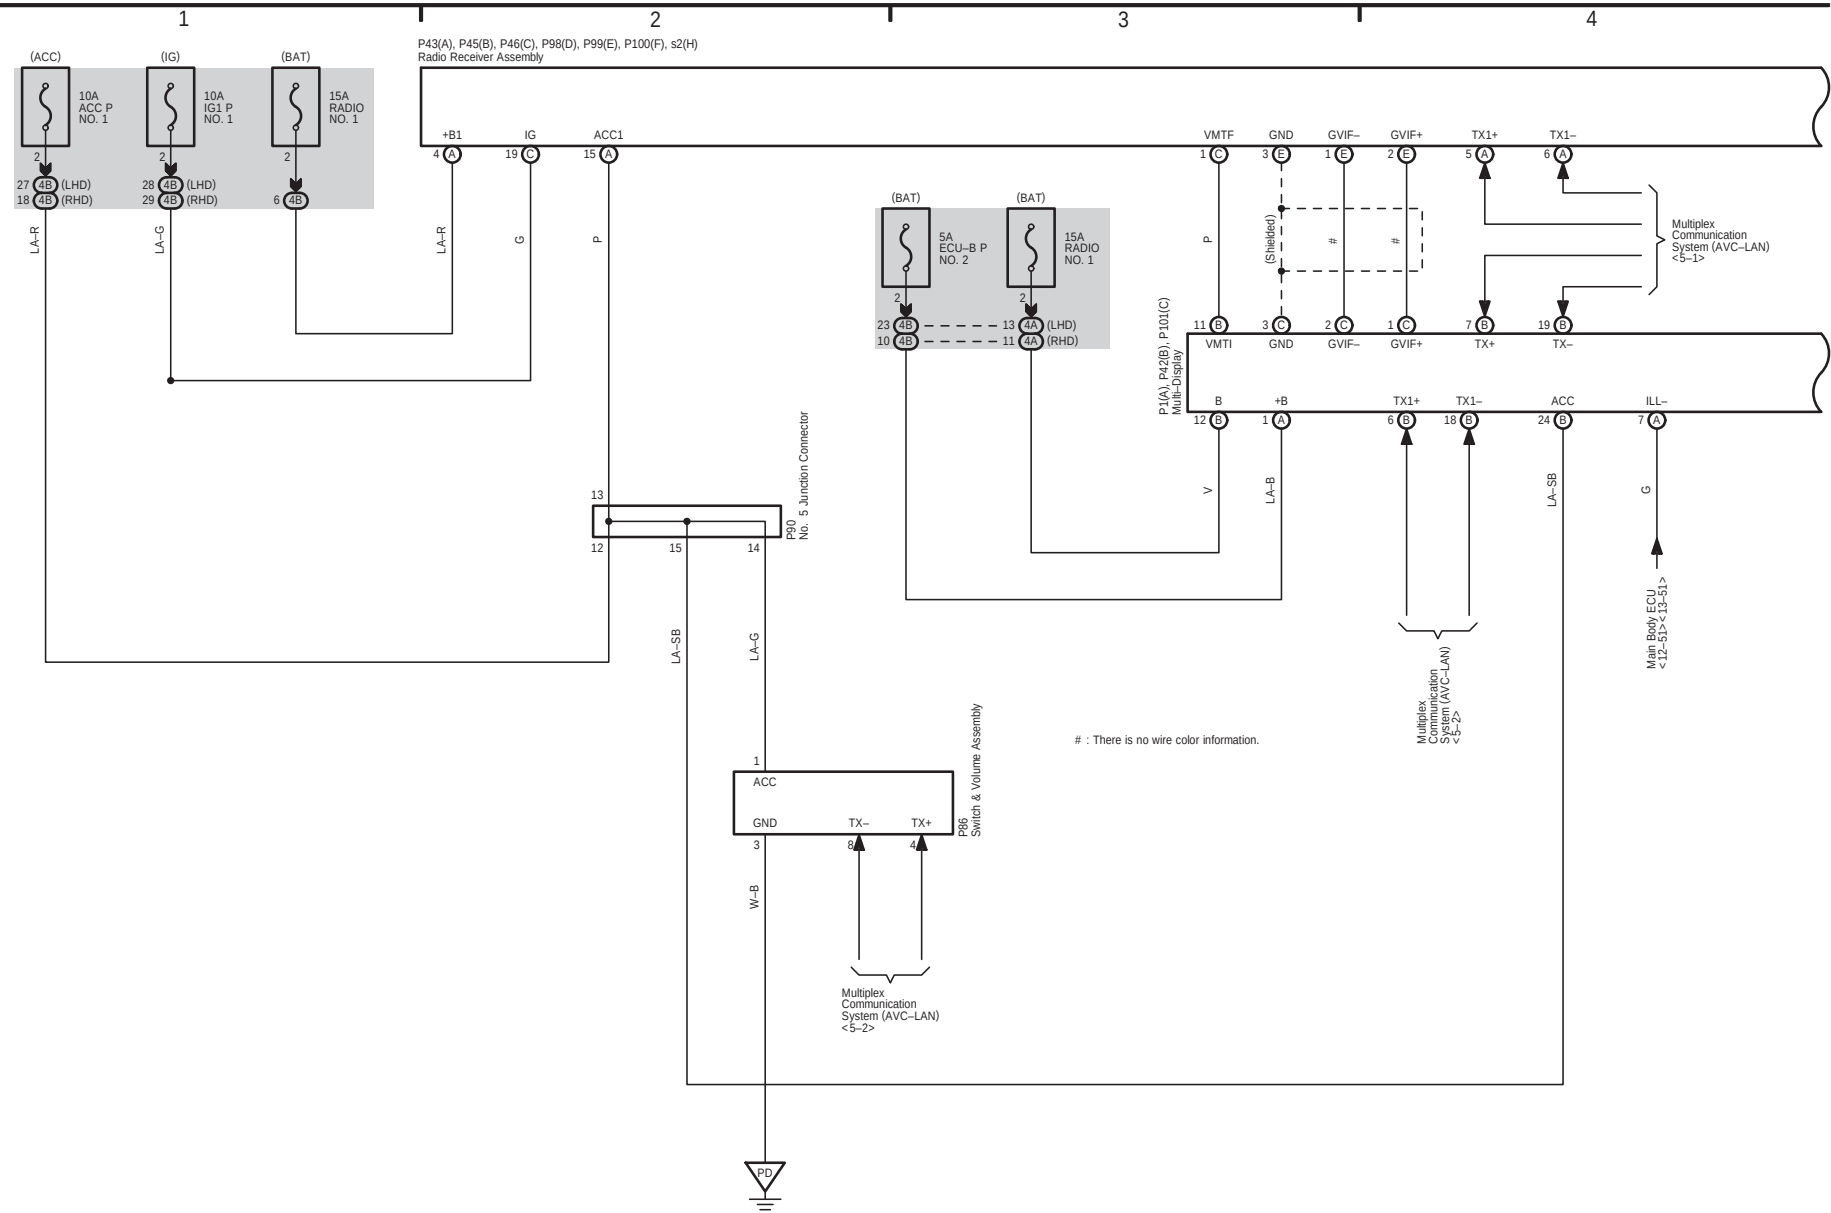


Active Noise Control, Audio System, Back Guide Monitor System, LEXUS Navigation System

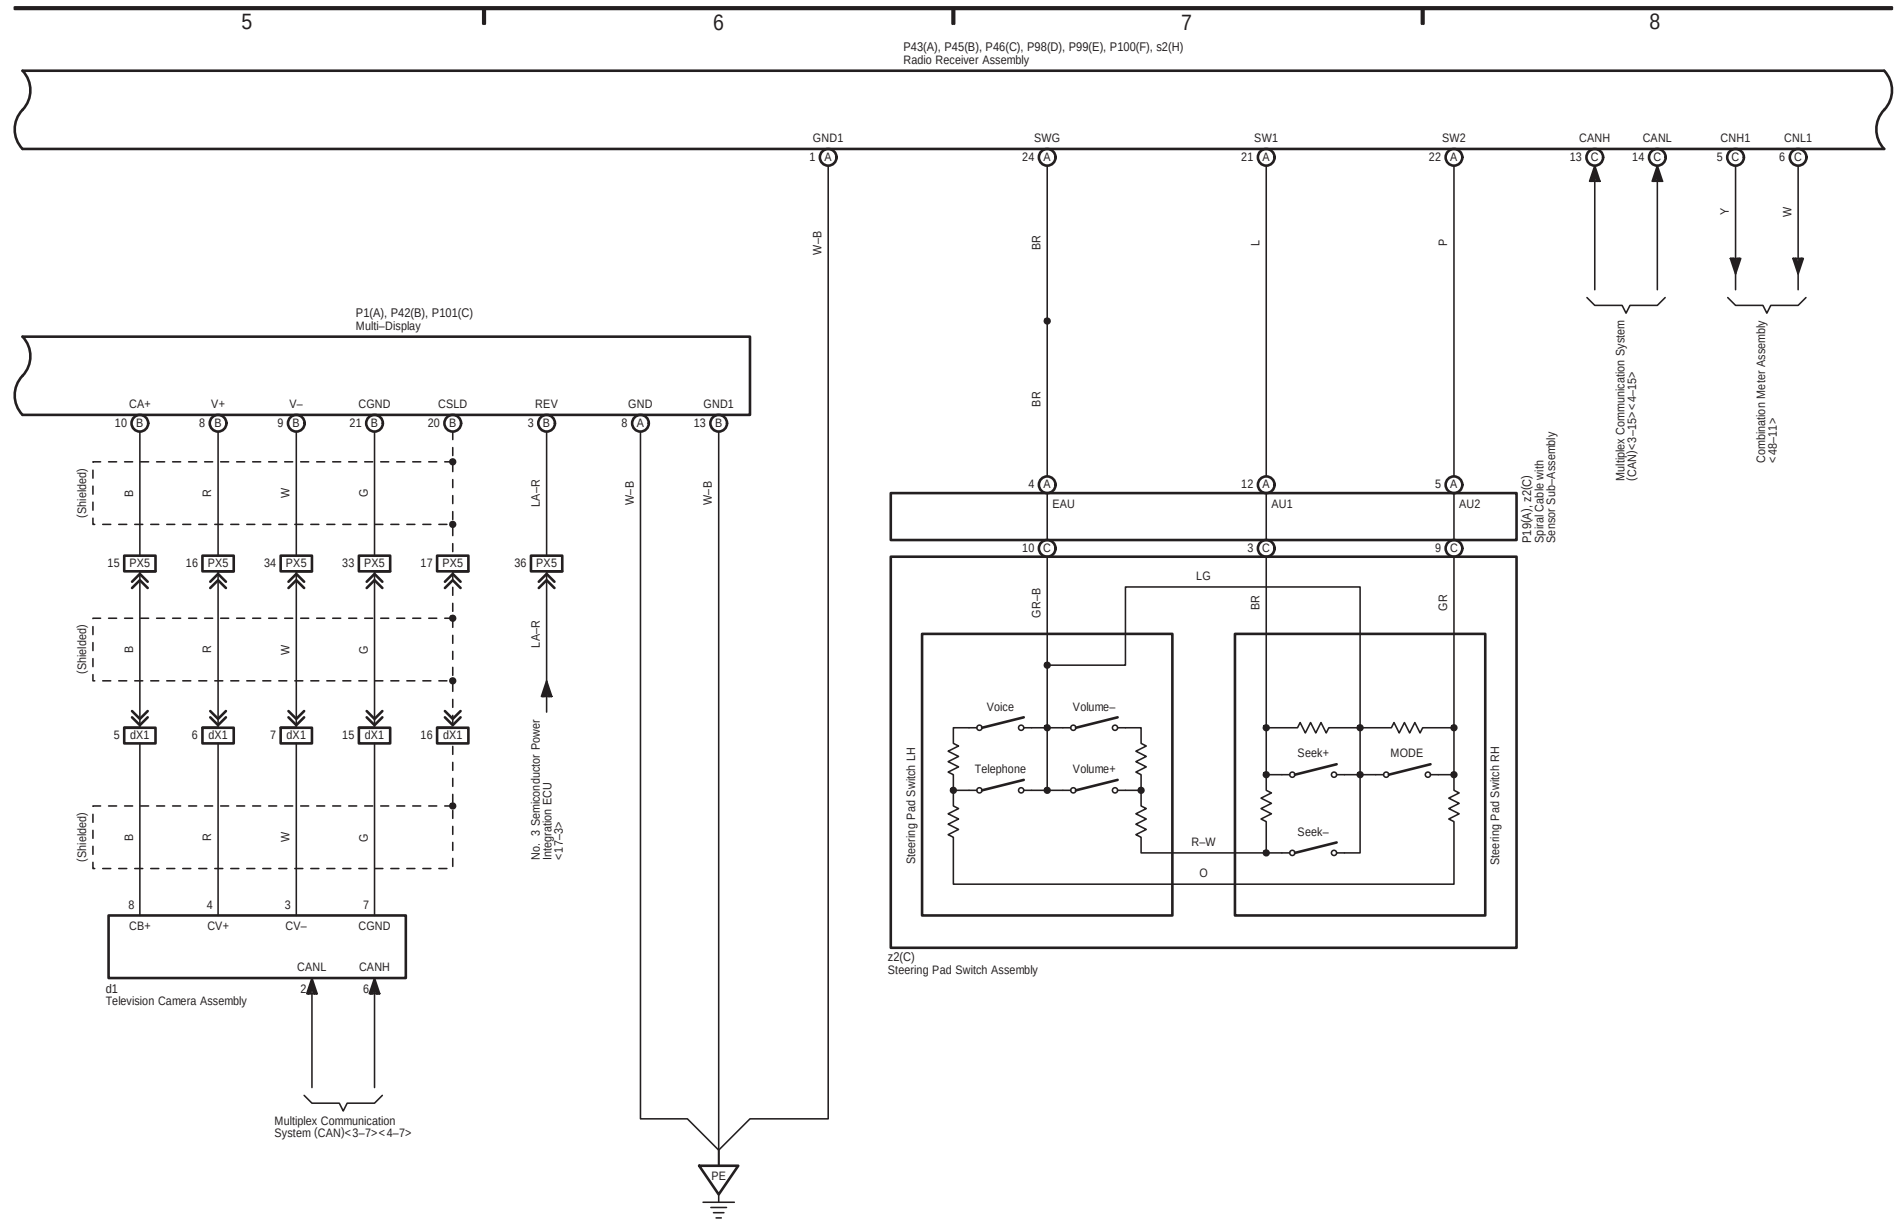


Active Noise Control, Audio System, Back Guide Monitor System, LEXUS Navigation System

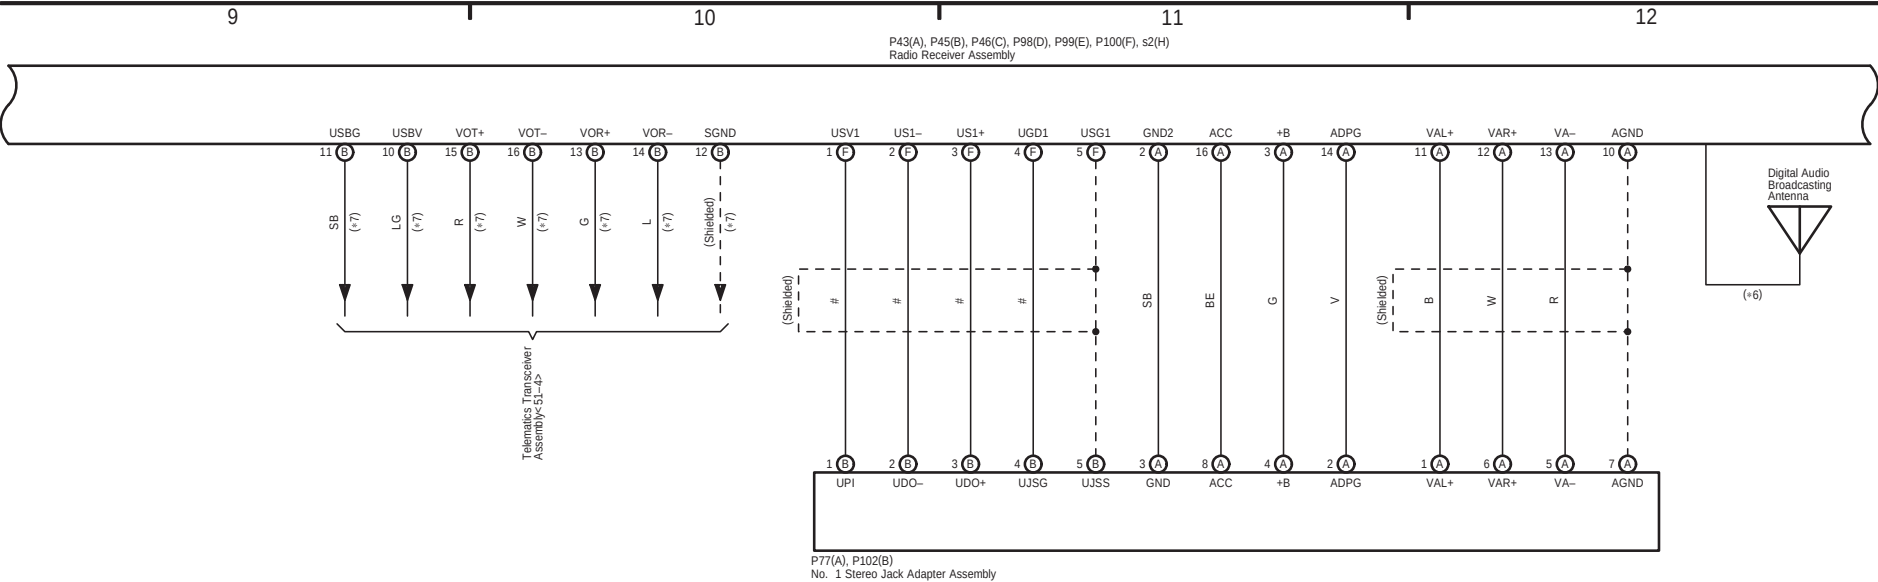

Active Noise Control, Audio System, Back Guide Monitor System, LEXUS Navigation System

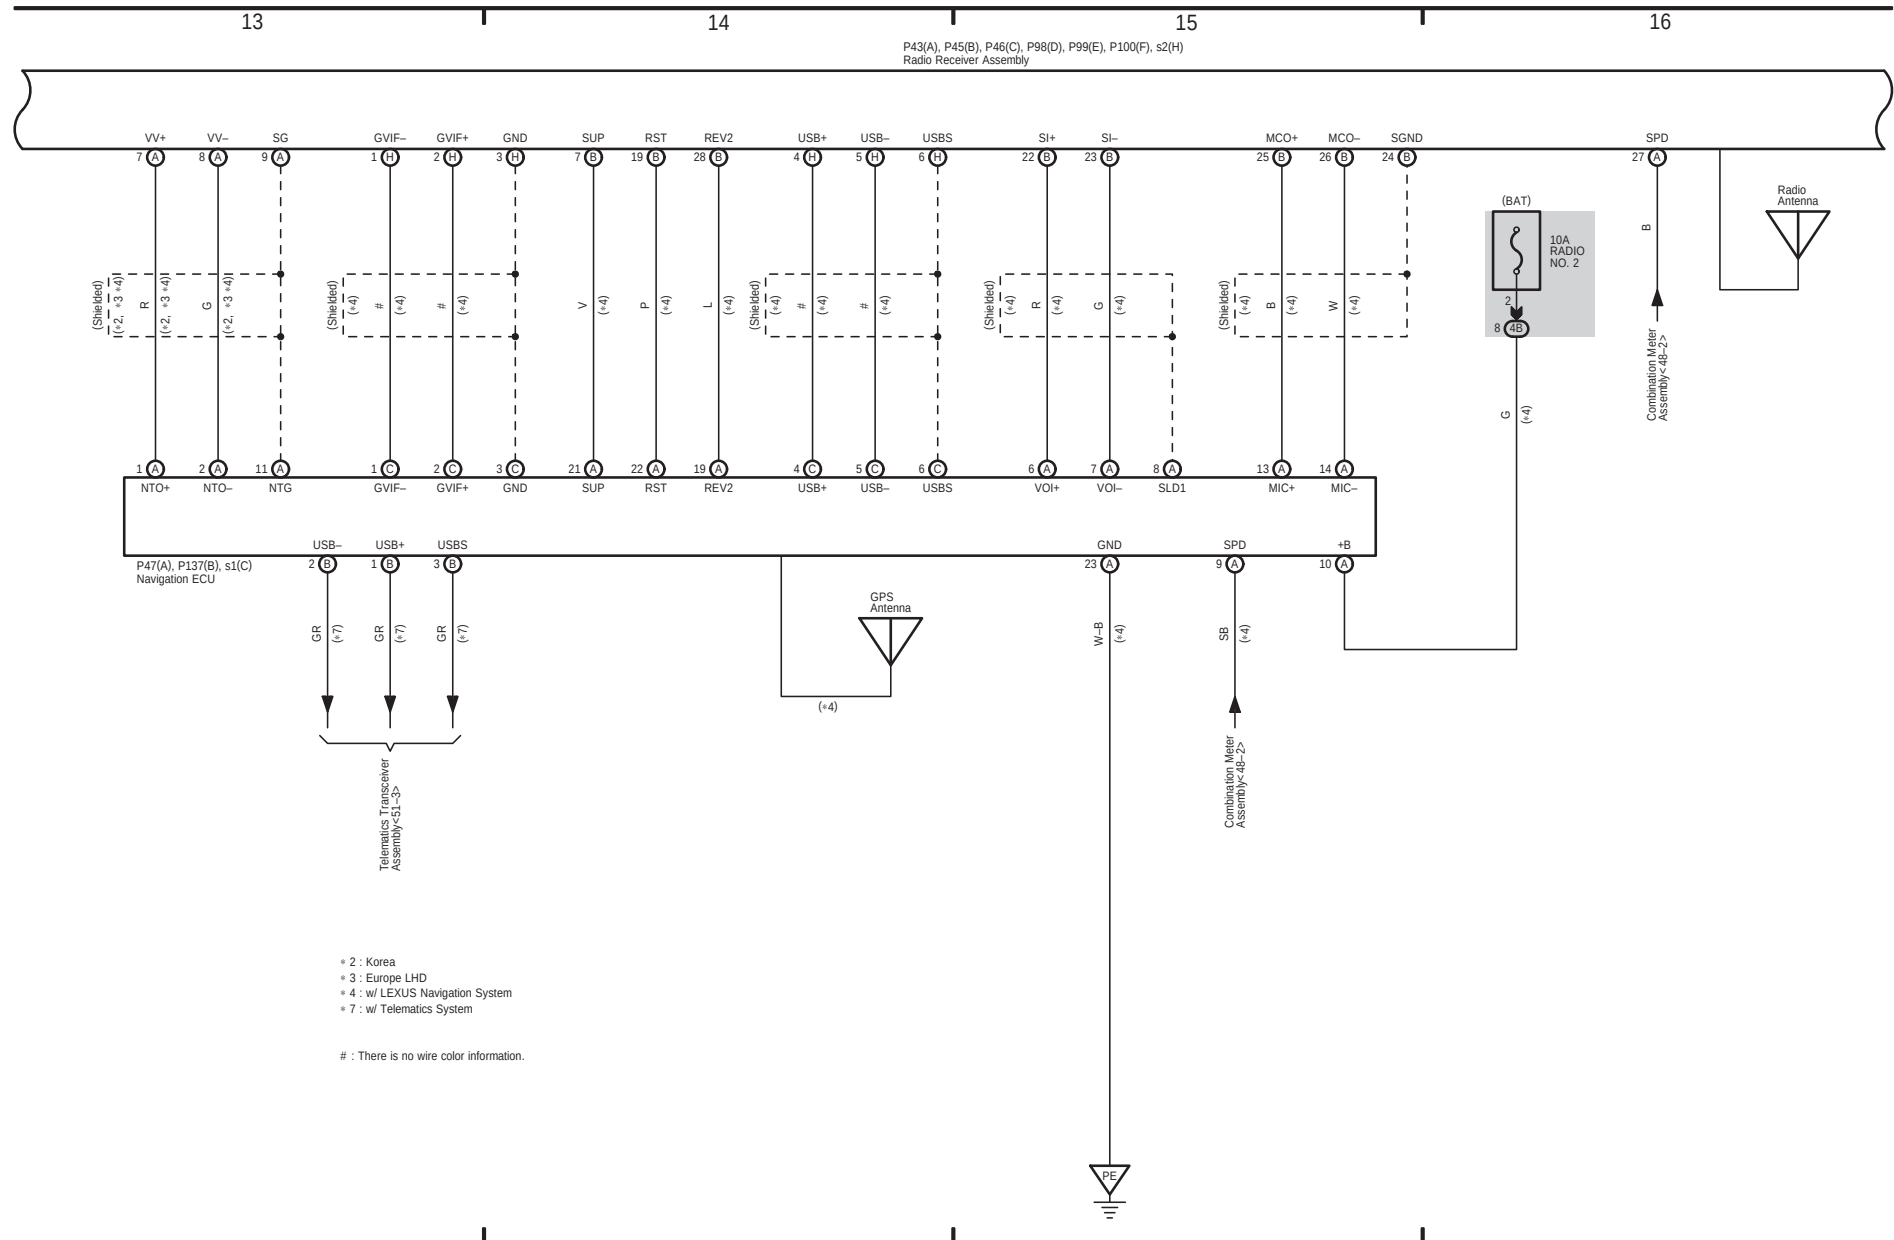


Active Noise Control, Audio System, Back Guide Monitor System, LEXUS Navigation System

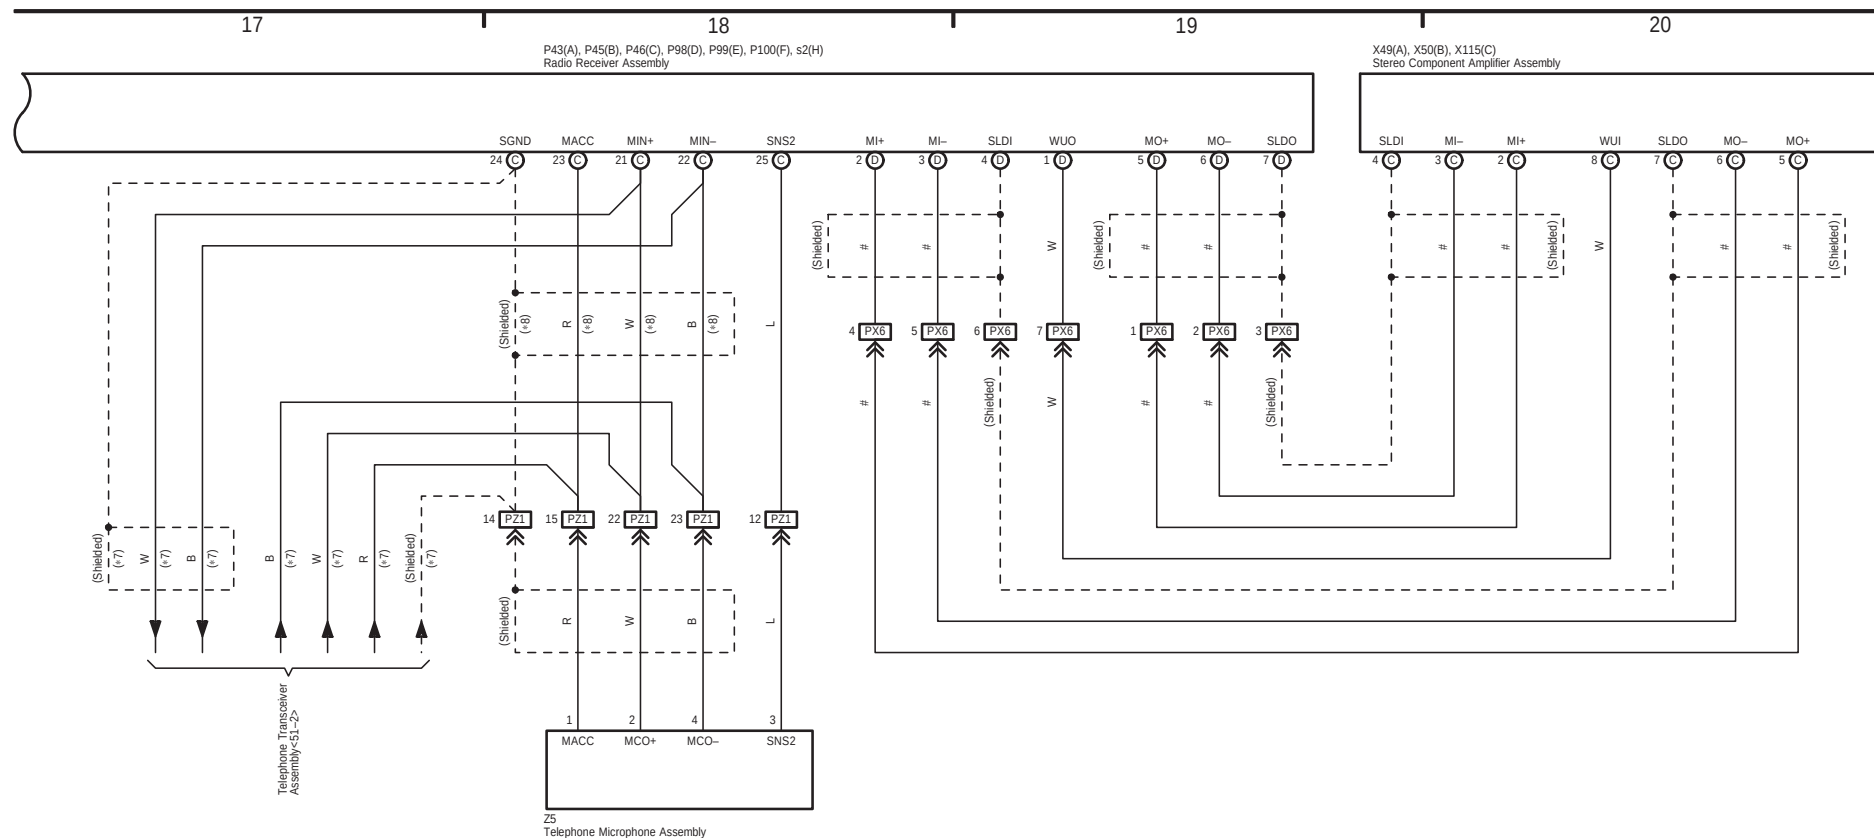

* 7 : w/ Telematics System
* 8 : w/o Telematics System

: There is no wire color information.

Active Noise Control, Audio System, Back Guide Monitor System, LEXUS Navigation System

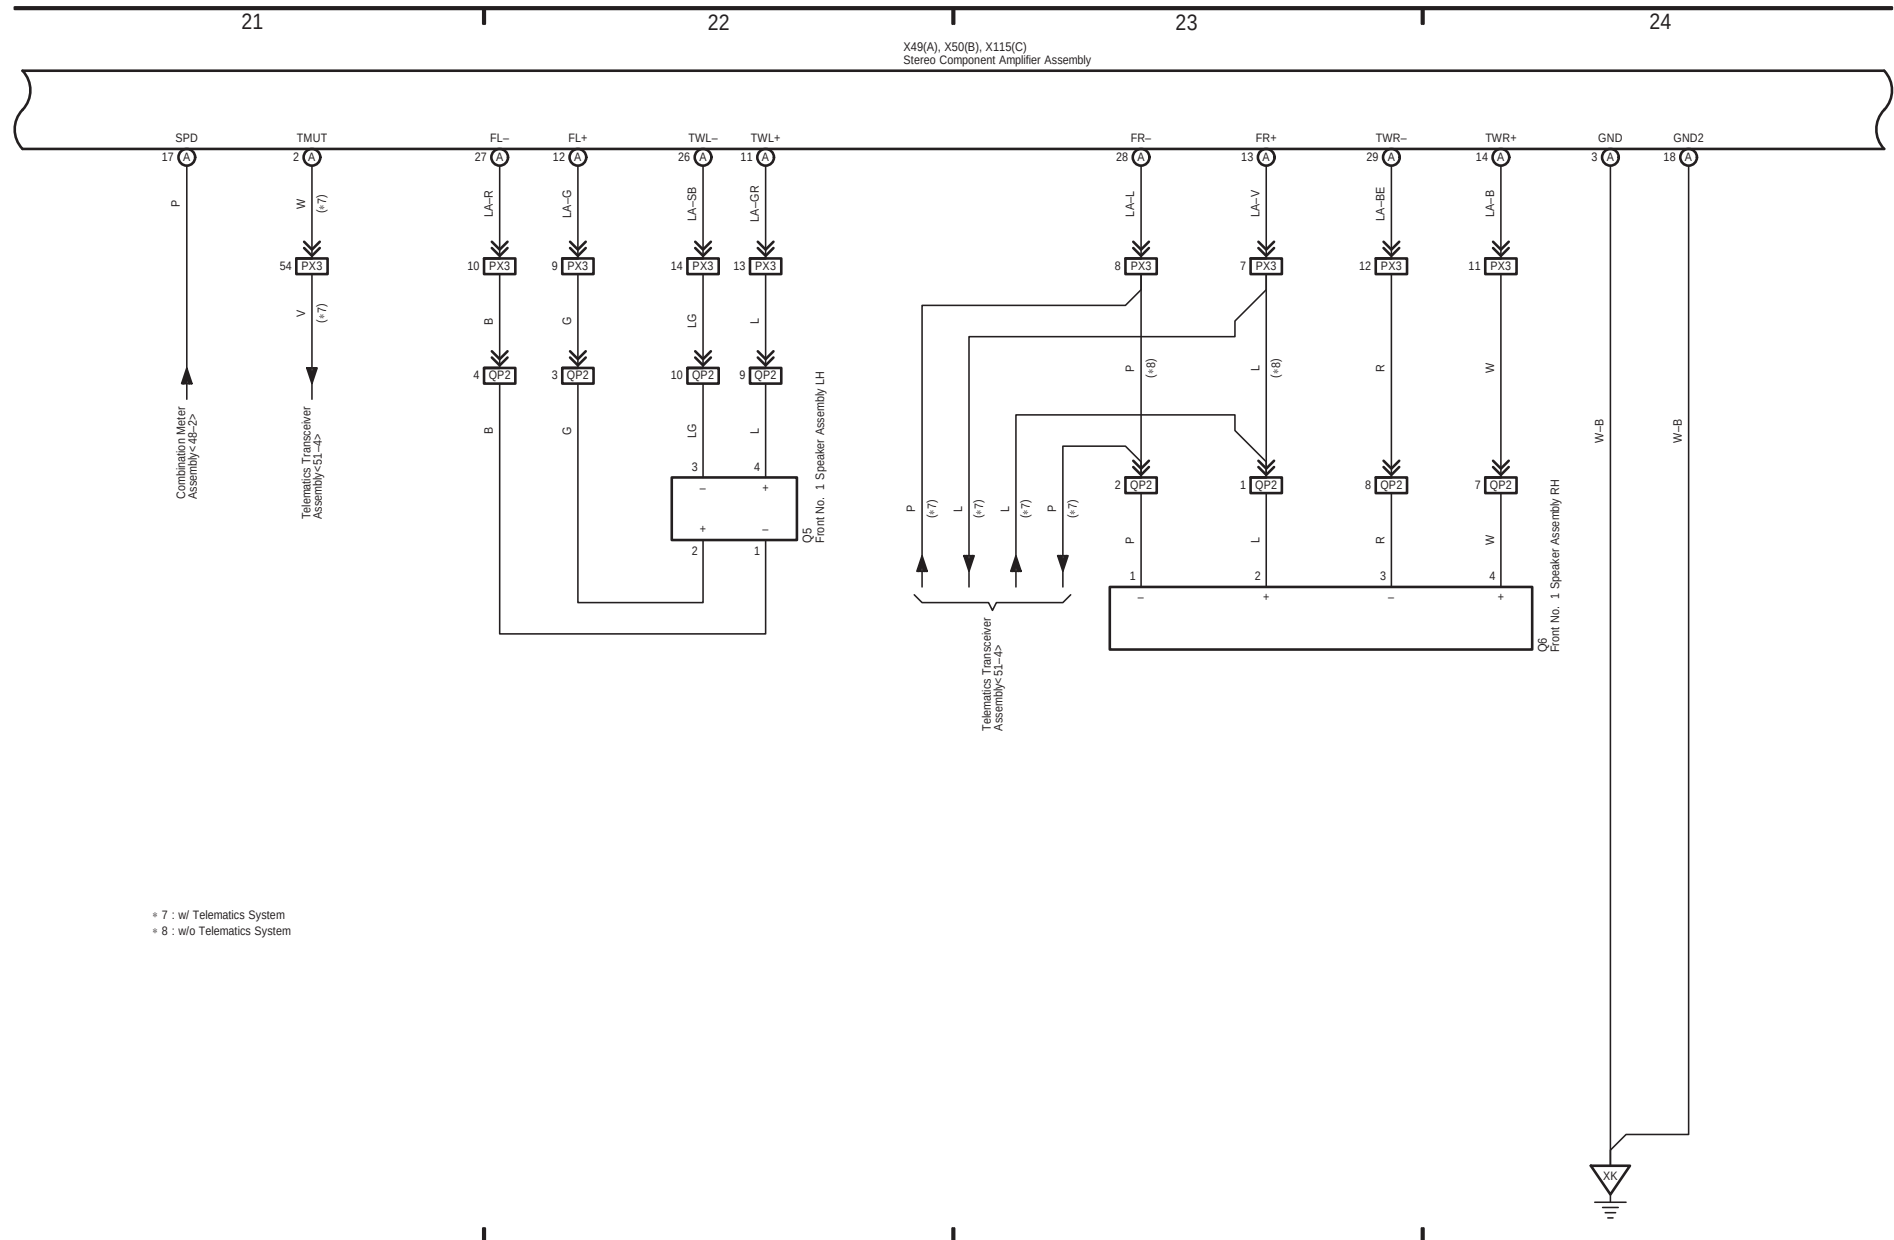

25 26 27 28

X49(A), X50(B), X115(C)
Stereo Component Amplifier Assembly

The diagram illustrates the wiring for a Stereo Component Amplifier Assembly, organized into four main sections corresponding to pins 25, 26, 27, and 28.

- Section 25 (Left):**
 - WFL+ (Pin 4) and WFL- (Pin 19):** Both connect to a speaker box labeled **S1** (No. 1 Speaker with Box Assembly LH). WFL+ connects to terminal 3 (SX1) and WFL- connects to terminal 4 (SX1). The box also has terminals 2 (WF+) and 1 (WF-).
 - WFR+ (Pin 5) and WFR- (Pin 20):** Both connect to a speaker box labeled **R1** (No. 1 Speaker with Box Assembly RH). WFR+ connects to terminal 3 (RX1) and WFR- connects to terminal 4 (RX1). The box also has terminals 2 (WF+) and 1 (WF-).
- Section 26 (Middle-Left):**
 - SL+ (Pin 8) and SL- (Pin 23):** Both connect to a speaker box labeled **X41** (No. 2 Speaker with Box Assembly LH). SL+ connects to terminal 2 (+) and SL- connects to terminal 1 (-).
- Section 27 (Middle-Right):**
 - SR+ (Pin 9) and SR- (Pin 24):** Both connect to a speaker box labeled **X40** (No. 2 Speaker with Box Assembly RH). SR+ connects to terminal 2 (+) and SR- connects to terminal 1 (-).
 - WF1+ (Pin 6) and WF1- (Pin 21):** Both connect to a speaker box labeled **X11** (No. 3 Speaker with Box Assembly). WF1+ connects to terminal 2 and WF1- connects to terminal 1.
- Section 28 (Right):**
 - CTR+ (Pin 7), CTR- (Pin 22), MR+ (Pin 10), and MR- (Pin 25):** These four pins connect to a single speaker box labeled **Q7** (Front No. 2 Speaker Assembly).
 - CTR+ connects to terminal 5 (PX5).
 - CTR- connects to terminal 6 (PX5).
 - MR+ connects to terminal 3 (PX5).
 - MR- connects to terminal 4 (PX5).
 - Y, B, R, P Signals:**
 - Y:** Connects to terminal 5 (QP2).
 - B:** Connects to terminal 6 (QP2).
 - R:** Connects to terminal 11 (QP2).
 - P:** Connects to terminal 12 (QP2).
 - Box Terminals:** The bottom of the Q7 box has terminals 2 (+), 1 (-), 4 (CTR+), and 3 (CTR-).

Q7
Front No. 2 Speaker Assembly

Active Noise Control, Audio System, Back Guide Monitor System, LEXUS Navigation System

