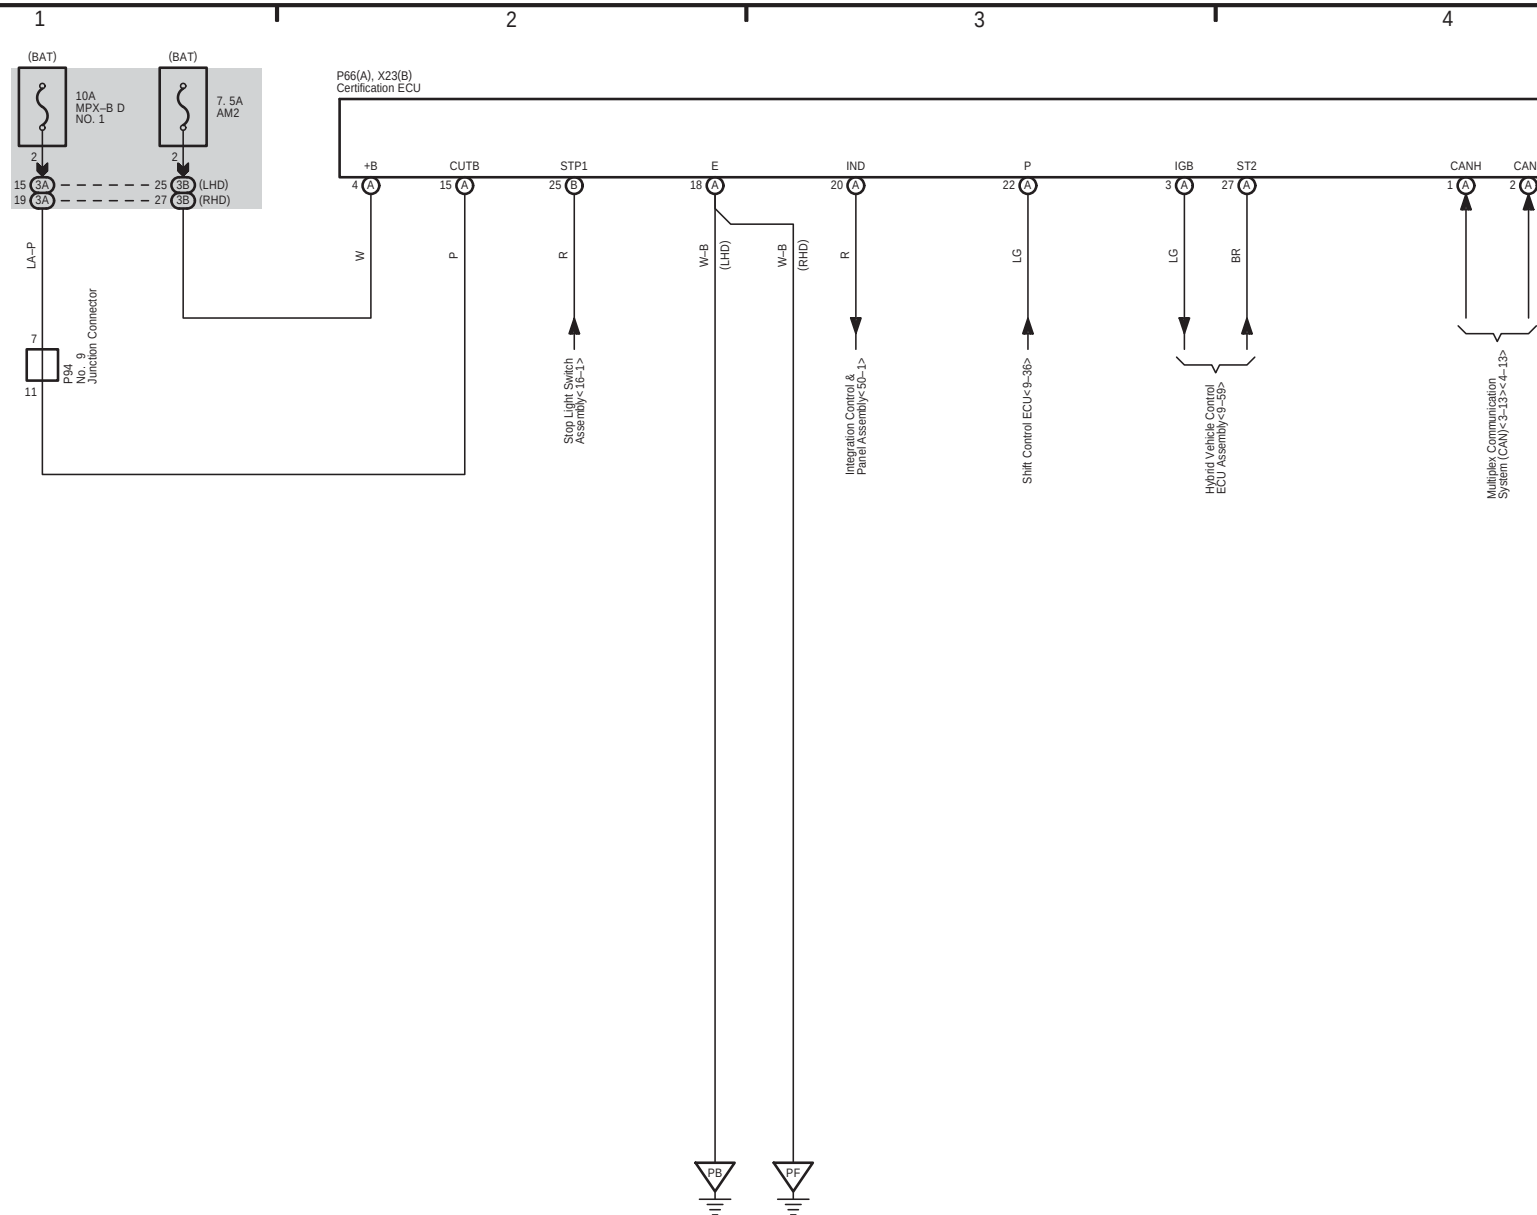
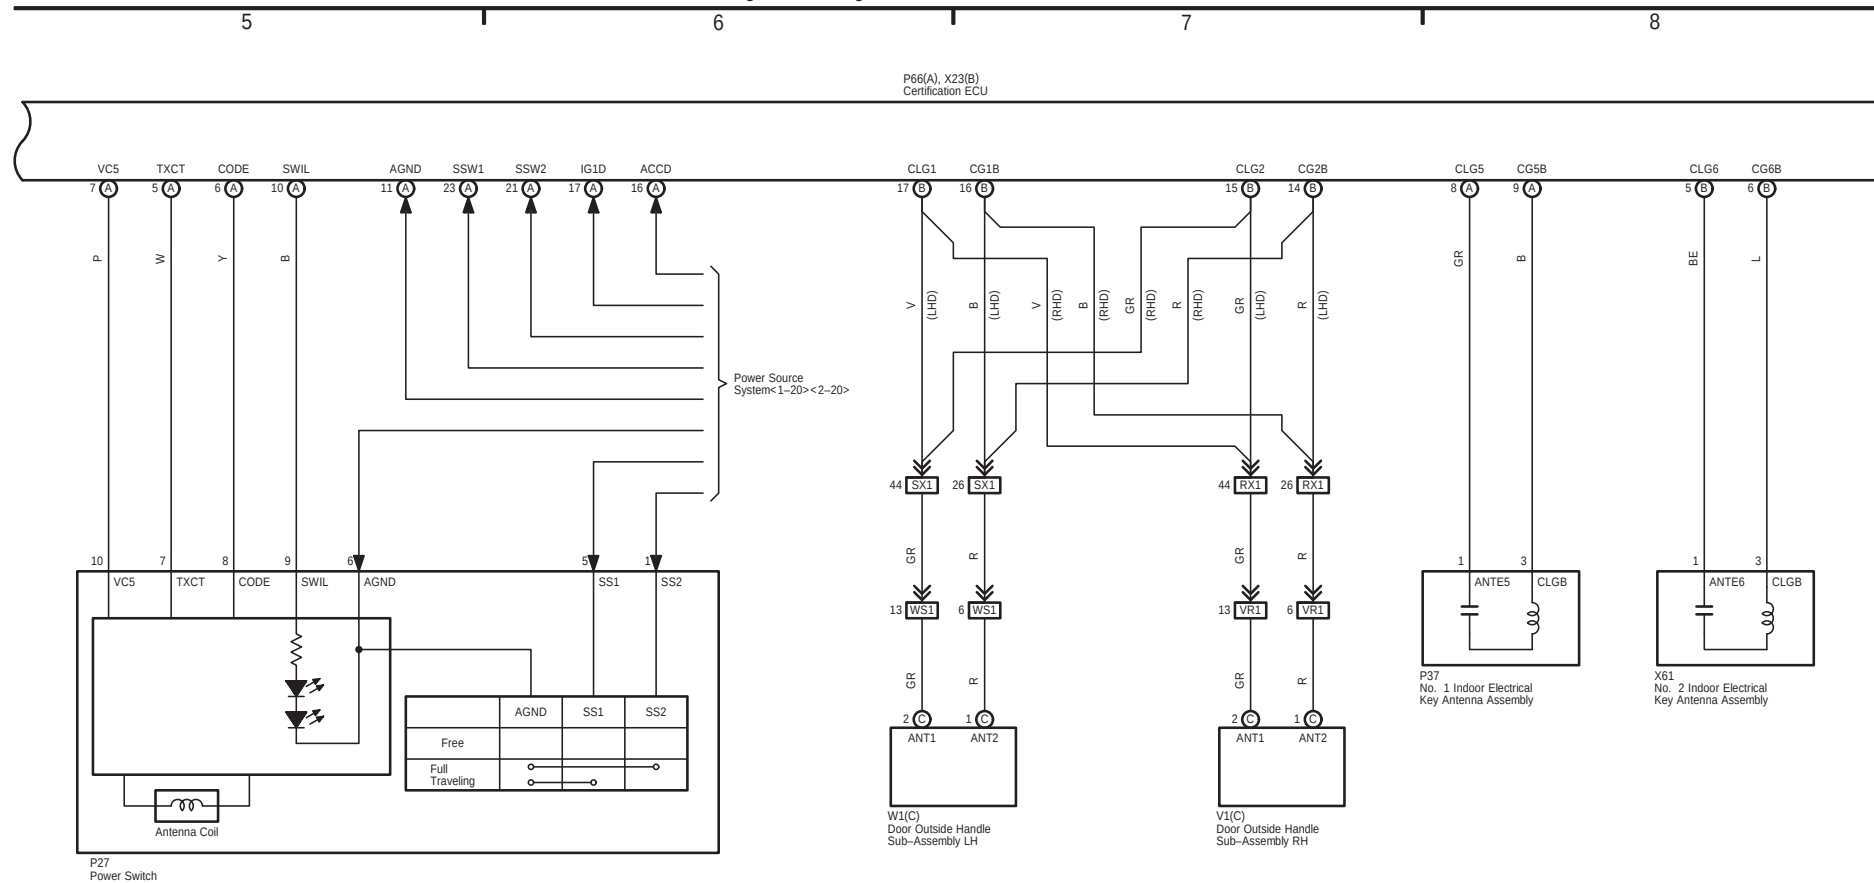


Entry & Start System, Immobiliser System,
Starting, Steering Lock, Wireless Door Lock Control

Entry & Start System, Immobiliser System,
Starting, Steering Lock, Wireless Door Lock Control

P66(A), X23(B)
Certification ECU

CLG7 11 (B) CG7B 10 (B)
W
16 DX4 34 DX4
B GR
1 ANTE7 3 CLGB
b1 No. 3 Indoor Electrical Key Antenna Assembly

CLG8 13 (B) CG8B 12 (B)
LG G
2 ANTE8 1 CLGB
X48 Electrical Key Antenna

TSW5 26 (B)
G
6 UL 1 (B) 2 (B)
z33(B) Luggage Electrical Key Switch
E 5 (A)
X69(A), z33(B) Rear Combination Light Assembly RH
L4
XL

(BAT) 5A SMART
2
22 (B) (LHD) 9 (B) (RHD)
GR
1 +B 2 LIN1
EFII EFIO GND
3 4 5
V LG
Hybrid Vehicle Control ECU Assembly<9-58>
P51 ID Code Box
LIN1 2
GND 5
BR 9
P92 No. 7 Junction Connector
4
W-B (LHD) W-B (RHD)
PE PB
L (A)

6 LC 500h (Cont' d)

Entry & Start System, Immobiliser System, Starting, Steering Lock, Wireless Door Lock Control

- * 1 : FMVSS 138 Type
- * 2 : ECE-R64 Type
- * 3 : w/ Option Connector

