

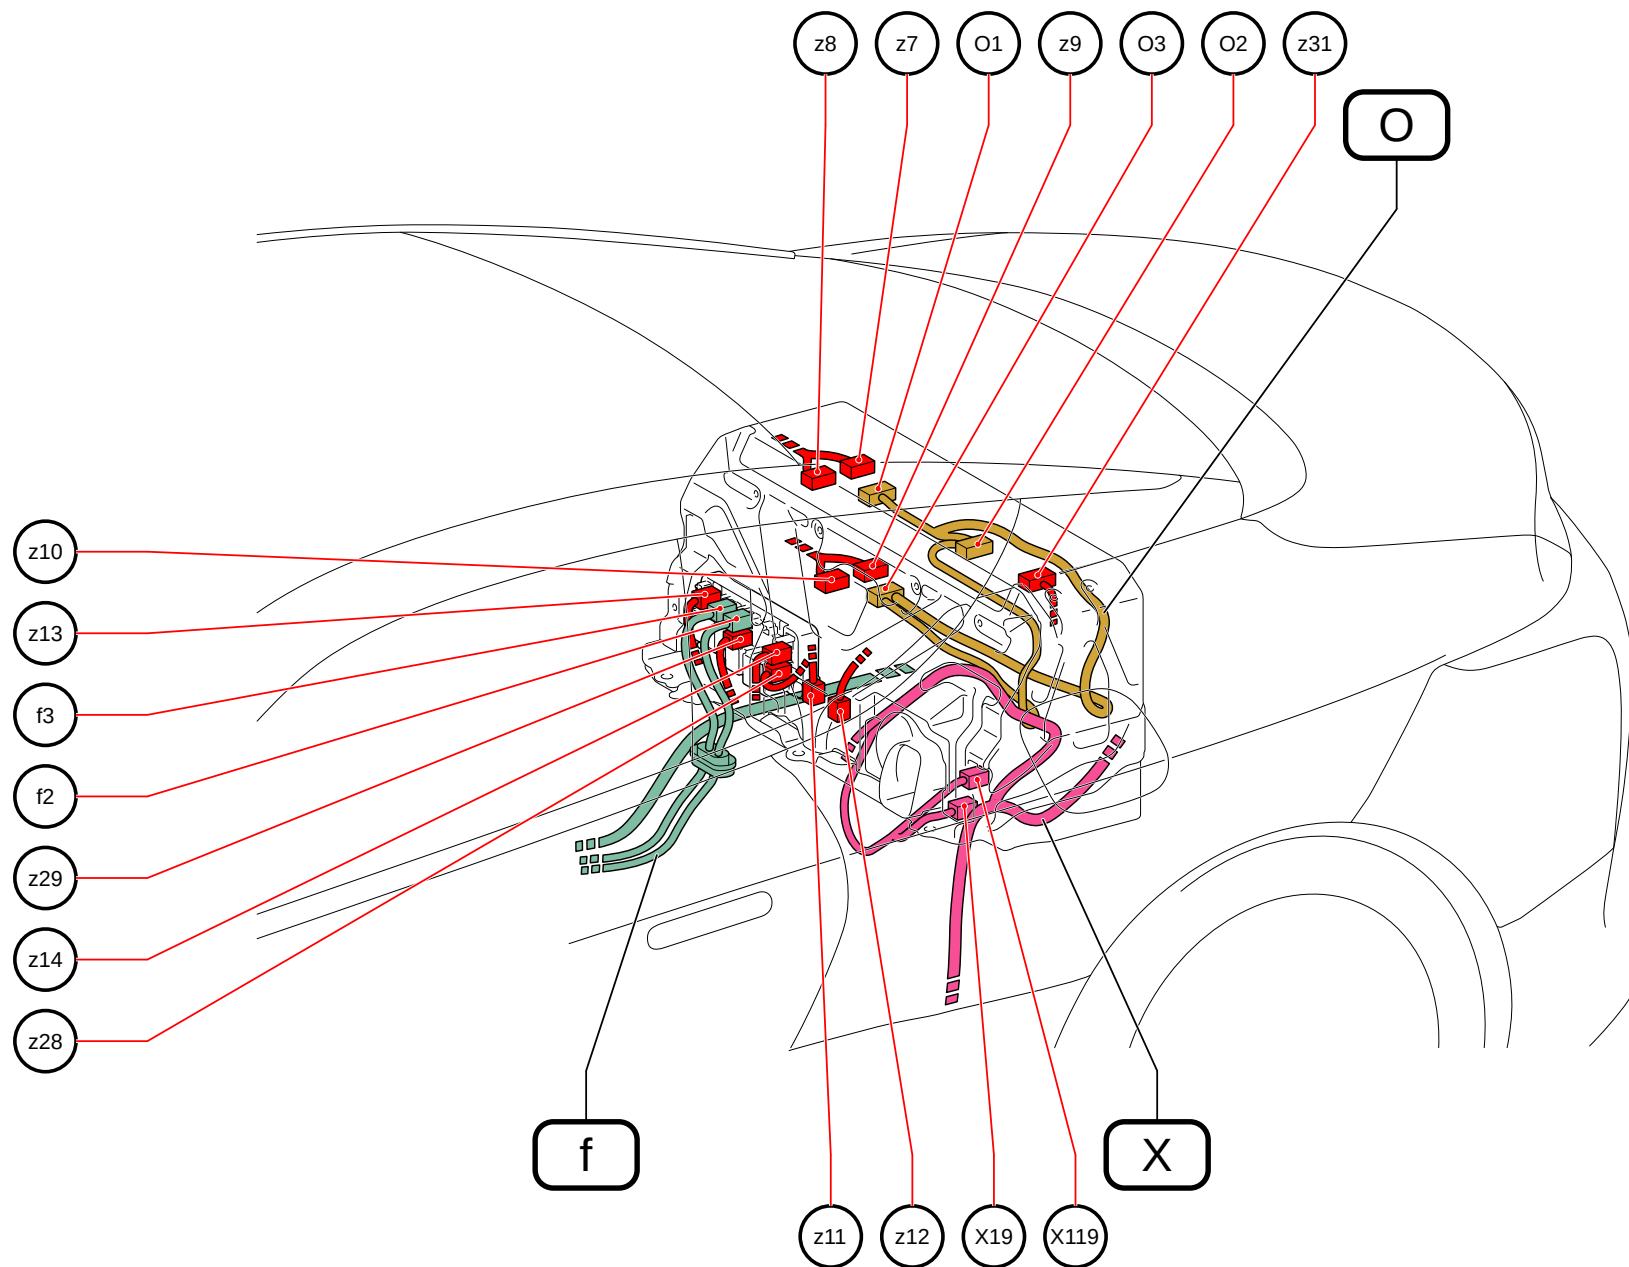
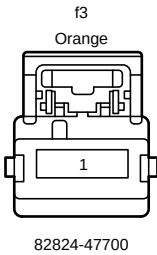
 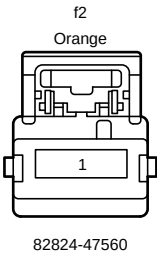
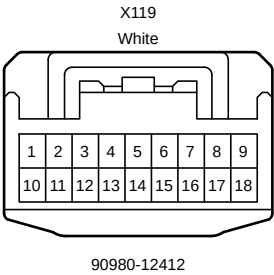

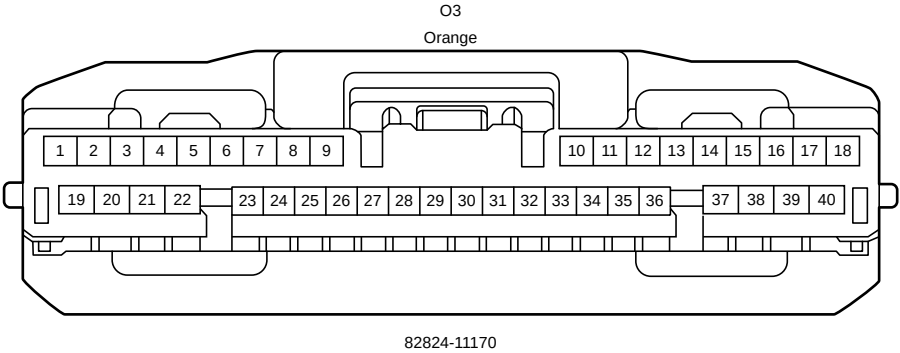








Position of Parts in Body (LHD)

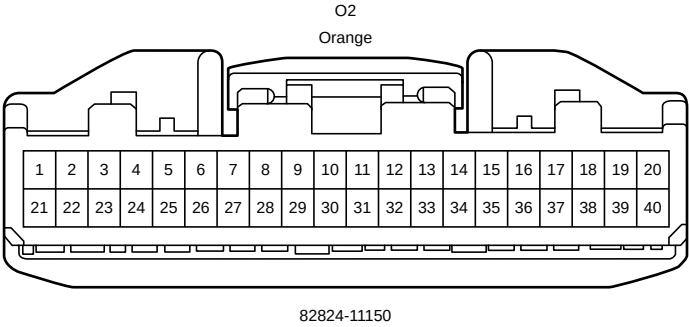

O1	Upper Battery Voltage Sensor
O2	Battery ECU Assembly
O3	Lower Battery Voltage Sensor
X19	Battery Cooling Blower Assembly
X119	HV Supply Battery Assembly
f2	HV Battery Junction Block Assembly
f3	HV Battery Junction Block Assembly
z7	Upper Battery Voltage Sensor , HV Supply Battery Assembly
z8	Upper Battery Voltage Sensor , HV Supply Battery Assembly
z9	Lower Battery Voltage Sensor , HV Supply Battery Assembly
z10	Lower Battery Voltage Sensor , HV Supply Battery Assembly
z11	Hybrid Battery Terminal Block , HV Supply Battery Assembly
z12	Hybrid Battery Terminal Block , HV Supply Battery Assembly
z13	HV Battery Junction Block Assembly , HV Supply Battery Assembly
z14	HV Battery Junction Block Assembly , HV Supply Battery Assembly
z28	HV Battery Junction Block Assembly , HV Supply Battery Assembly
z29	HV Battery Junction Block Assembly , HV Supply Battery Assembly
z31	Battery ECU Assembly , HV Supply Battery Assembly

Position of Parts in Body (LHD)

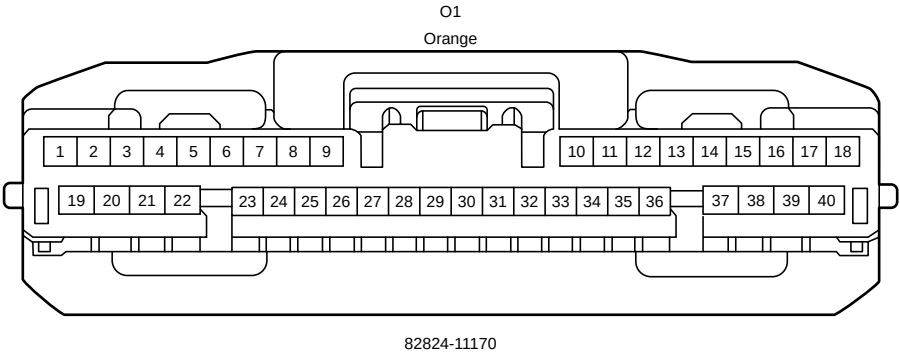

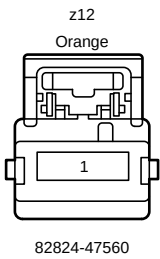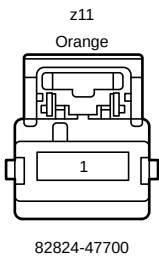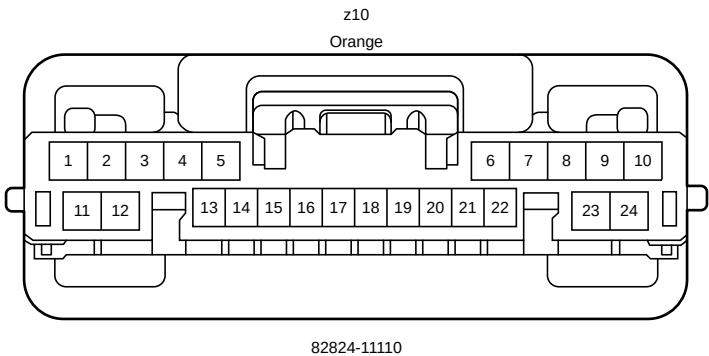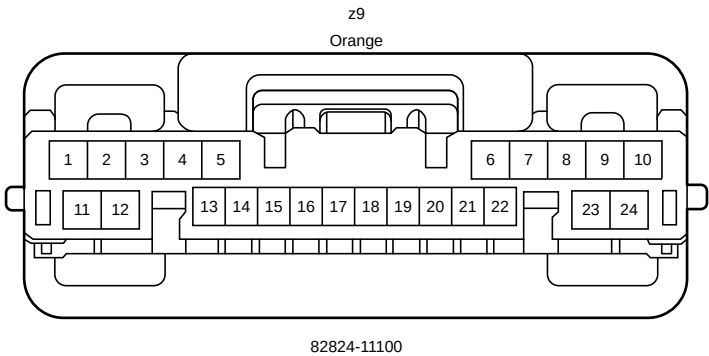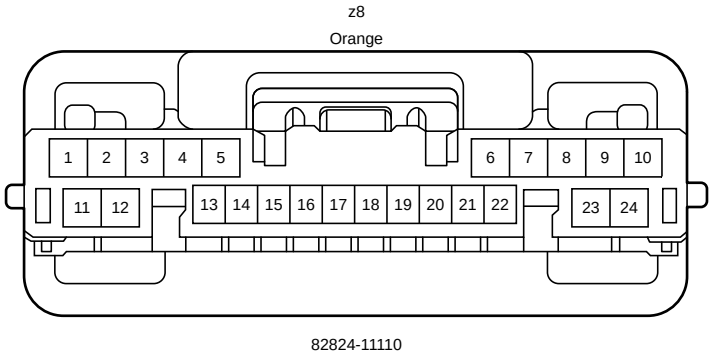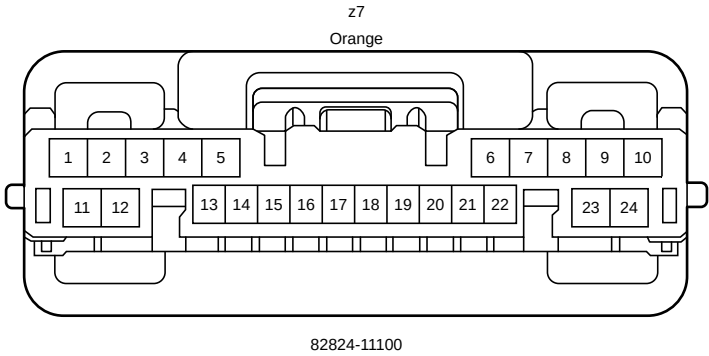

Position of Parts in Body (LHD)

