



Position of Parts in Engine Compartment (LHD)

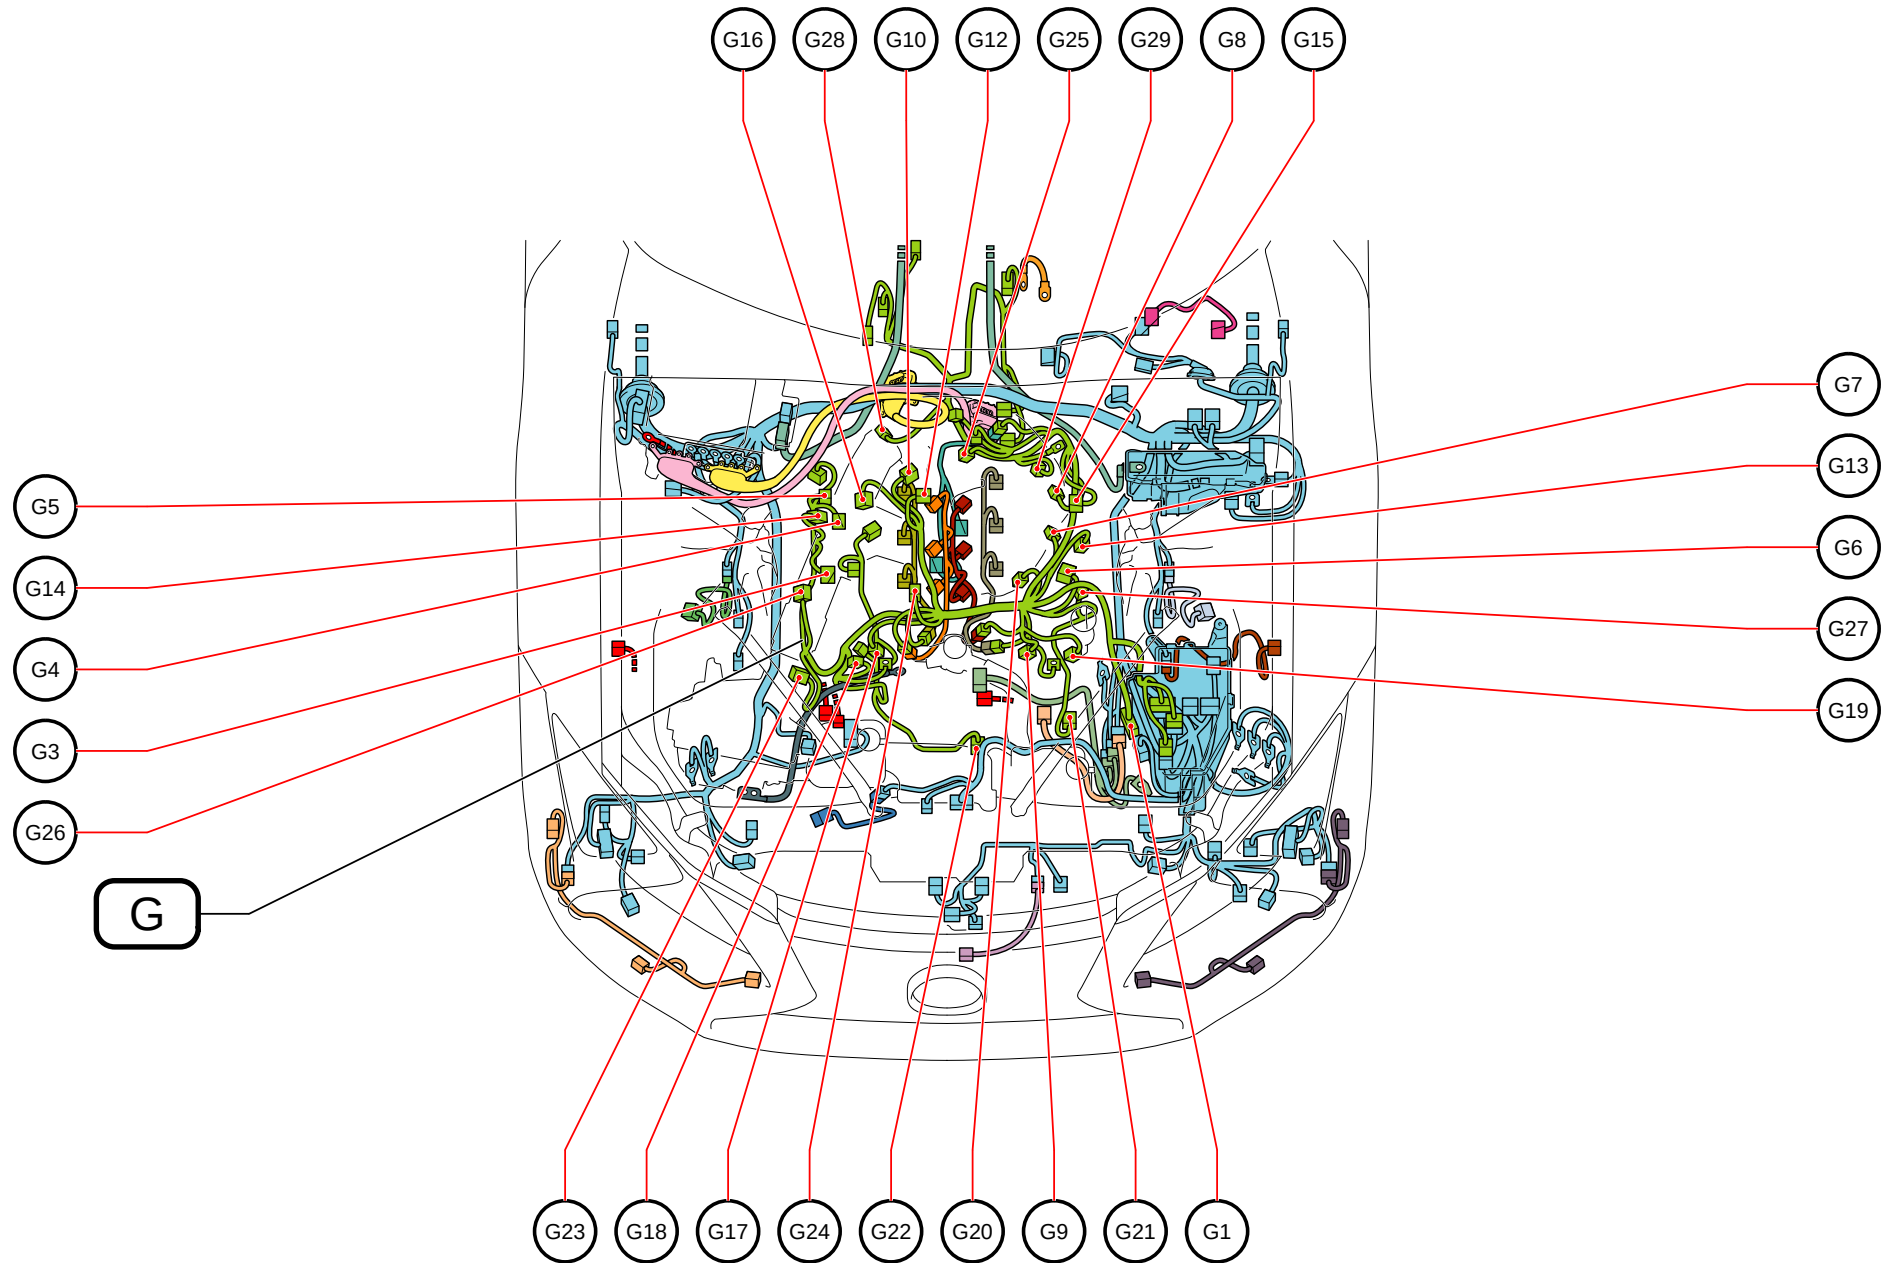


G1	ECM
G3	Ignition Coil Assembly No. 1
G4	Ignition Coil Assembly No. 3
G5	Ignition Coil Assembly No. 5
G6	Ignition Coil Assembly No. 2
G7	Ignition Coil Assembly No. 4
G8	Ignition Coil Assembly No. 6
G9	Cam Timing Oil Control Solenoid Assembly (Bank 2 Intake Side)
G10	Throttle Body with Motor Assembly
G12	Purge VSV
G13	VVT Sensor (Bank 2 Exhaust Side)
G14	VVT Sensor (Bank 1 Exhaust Side)
G15	E.F.I. Vacuum Sensor Assembly
G16	VVT Sensor (Bank 1 Intake Side)
G17	Cam Timing Oil Control Solenoid Assembly (Bank 1 Intake Side)
G18	Cam Timing Oil Control Solenoid Assembly (Bank 1 Exhaust Side)
G19	Cam Timing Oil Control Solenoid Assembly (Bank 2 Exhaust Side)
G20	VVT Sensor (Bank 2 Intake Side)
G21	Compressor with Motor Assembly
G22	Engine Oil Pressure Switch Assembly
G23	Intake Mass Air Flow Meter Sub-Assembly
G24	Fuel Pressure Sensor (Low Pressure Side) (Fuel Delivery Pipe with Sensor Assembly LH)
G25	Fuel Pressure Sensor (High Pressure Side) (Fuel Delivery Pipe with Sensor Assembly LH)
G26	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
G27	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
G28	Air Fuel Ratio Sensor (Bank 1 Sensor 2)
G29	Air Fuel Ratio Sensor (Bank 2 Sensor 2)

Position of Parts in Engine Compartment (LHD)

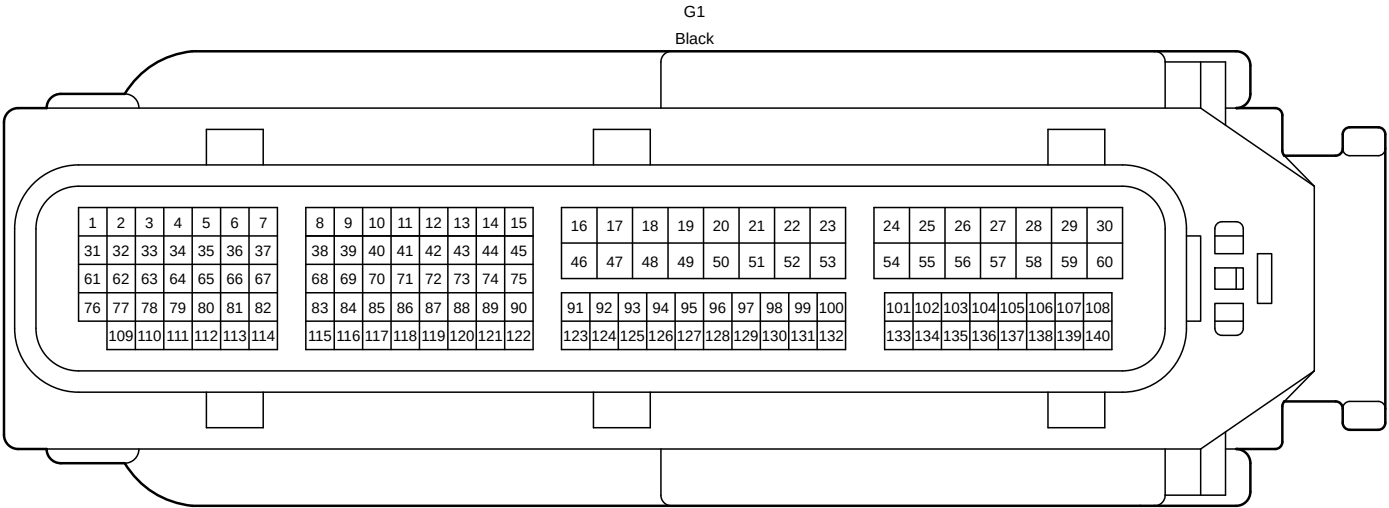

90980-12966

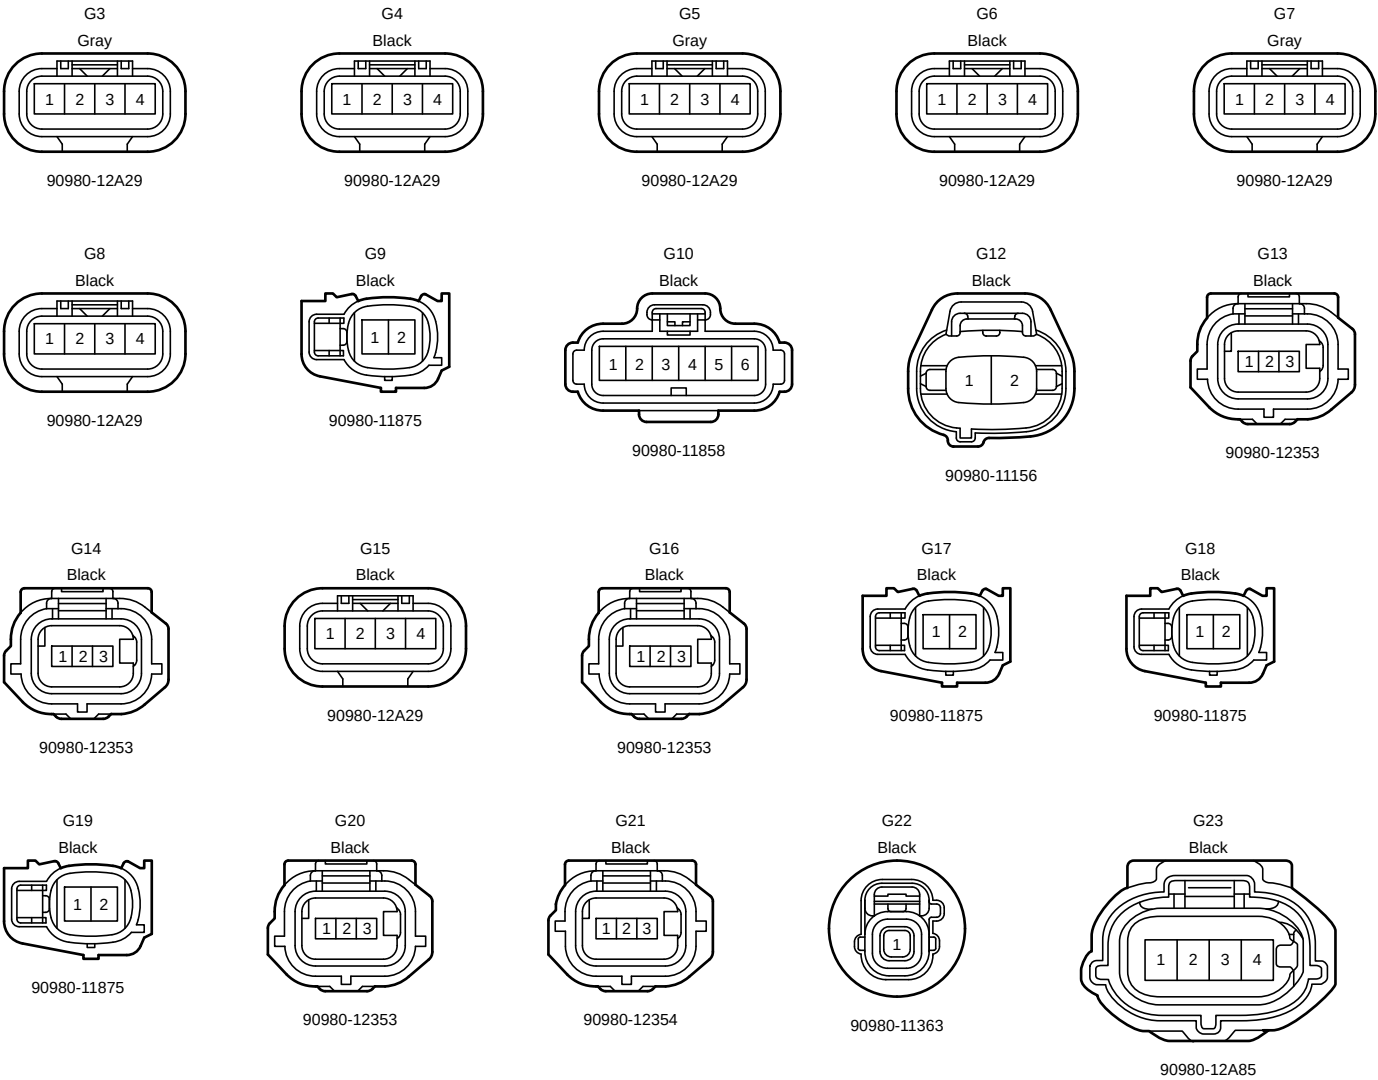

Position of Parts in Engine Compartment (LHD)

