


Position of Parts in Engine Compartment (LHD)

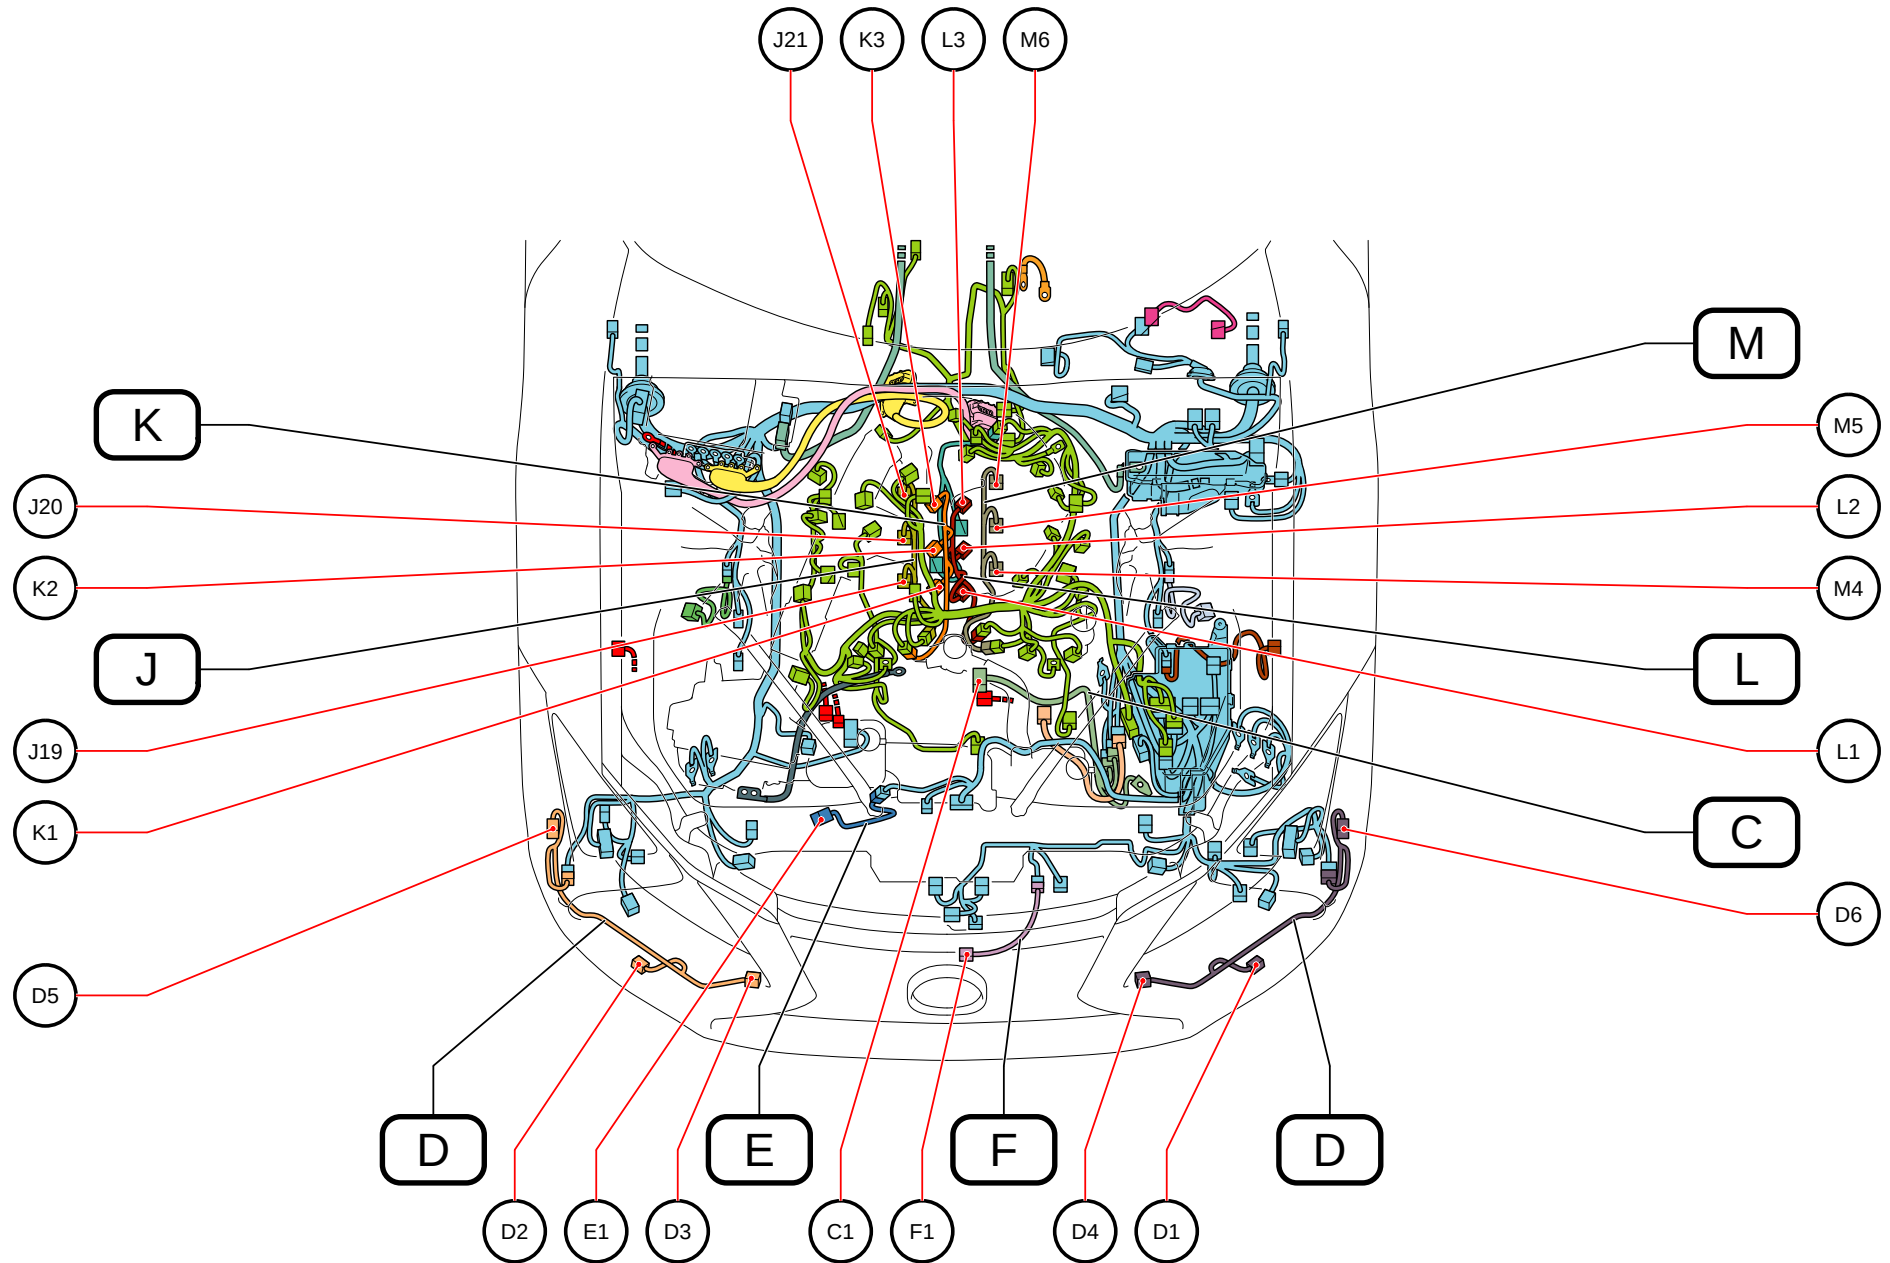

C1	Rack & Pinion Power Steering Gear Assembly
D1	Front Ultrasonic Sensor Corner LH
D2	Front Ultrasonic Sensor Corner RH
D3	Front Ultrasonic Sensor Center RH
D4	Front Ultrasonic Sensor Center LH
D5	Front Turn Signal Light Assembly RH
D6	Front Turn Signal Light Assembly LH
E1	Inverter Water Pump Assembly (with Motor)
F1	Millimeter Wave Radar Sensor Assembly
J19	Fuel Injector Assembly No. 1 (for Port Injection)
J20	Fuel Injector Assembly No. 3 (for Port Injection)
J21	Fuel Injector Assembly No. 5 (for Port Injection)
K1	Fuel Injector Assembly No. 1 (for Direct Injection)
K2	Fuel Injector Assembly No. 3 (for Direct Injection)
K3	Fuel Injector Assembly No. 5 (for Direct Injection)
L1	Fuel Injector Assembly No. 2 (for Direct Injection)
L2	Fuel Injector Assembly No. 4 (for Direct Injection)
L3	Fuel Injector Assembly No. 6 (for Direct Injection)
M4	Fuel Injector Assembly No. 2 (for Port Injection)
M5	Fuel Injector Assembly No. 4 (for Port Injection)
M6	Fuel Injector Assembly No. 6 (for Port Injection)

Position of Parts in Engine Compartment (LHD)

