


Position of Parts in Engine Compartment (LHD)











* 1:Before Sep. 2018 Production
* 2:From Sep. 2018 Production

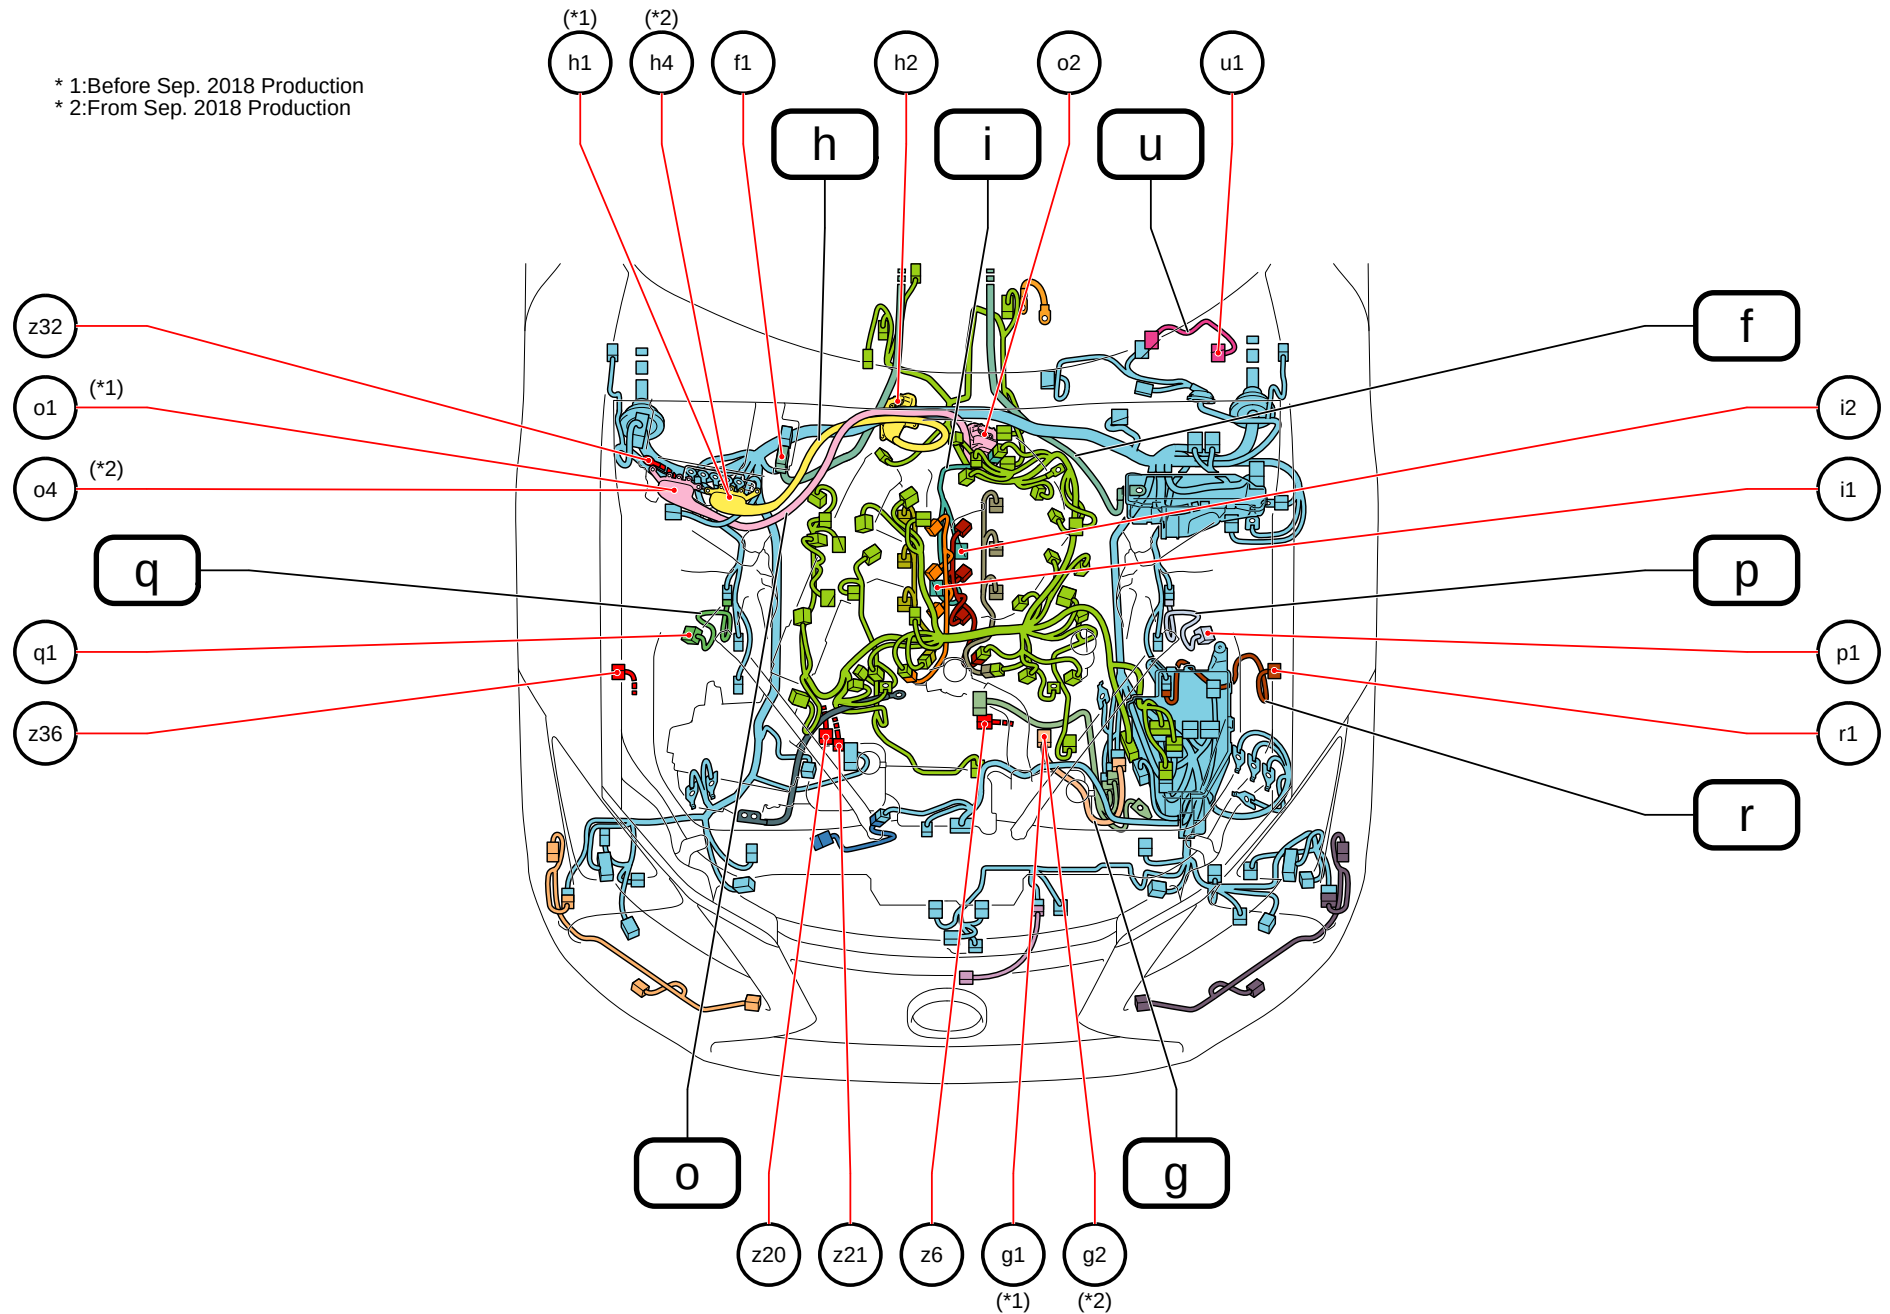

Position of Parts in Engine Compartment (LHD)

f1	Inverter with Converter Assembly
g1	Compressor with Motor Assembly
g2	Compressor with Motor Assembly
h1	Inverter with Converter Assembly
h2	Hybrid Vehicle Transmission Assembly
h4	Inverter with Converter Assembly
i1	Knock Control Sensor (Bank 1)
i2	Knock Control Sensor (Bank 2)
o1	Inverter with Converter Assembly
o2	Hybrid Vehicle Transmission Assembly
o4	Inverter with Converter Assembly
p1	Front Shock Absorber Assembly LH
q1	Front Shock Absorber Assembly RH
r1	Front Speed Sensor LH (Front Axle Hub Sub-Assembly LH)
u1	Windshield Wiper Motor Assembly
z6	Steering Torque Sensor (Rack & Pinion Power Steering Gear Assembly) , Rack & Pinion Power Steering Gear Assembly
z20	Oil Pump Motor Controller , Oil Pump with Motor Assembly
z21	Oil Pump Motor Controller , Oil Pump with Motor Assembly
z32	Inverter Bus-Bar Plate Sub-Assembly , Fusible Link Block Assembly No. 1
z36	Front Speed Sensor RH (Front Axle Hub Sub-Assembly RH) , Front Skid Control Sensor Wire RH

Position of Parts in Engine Compartment (LHD)

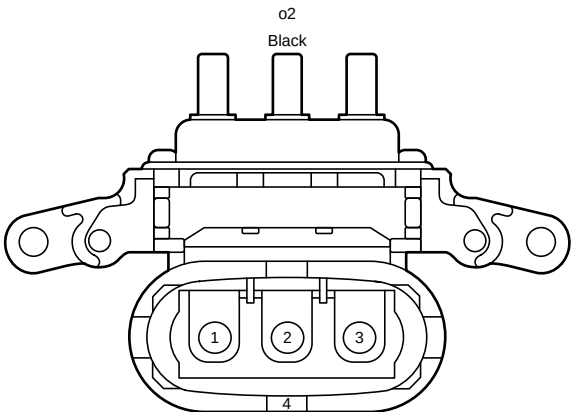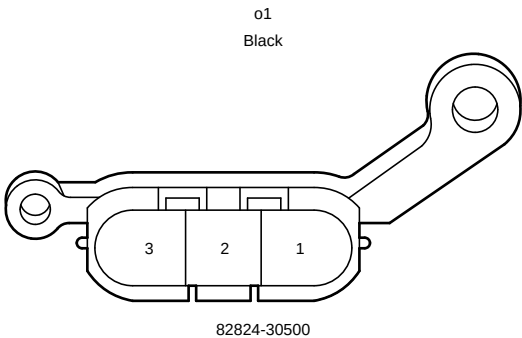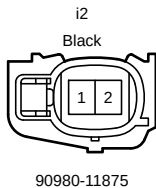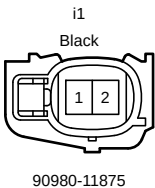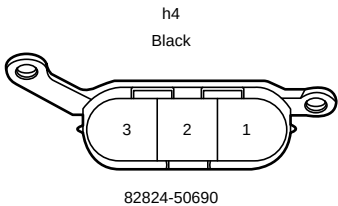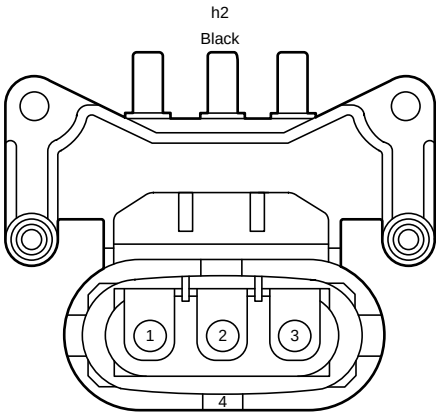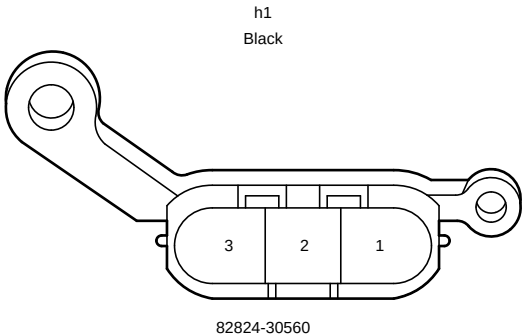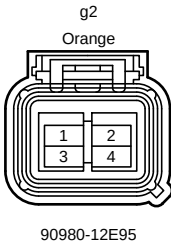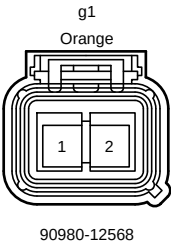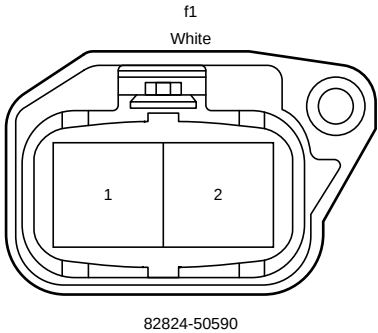

Position of Parts in Engine Compartment (LHD)

