
 
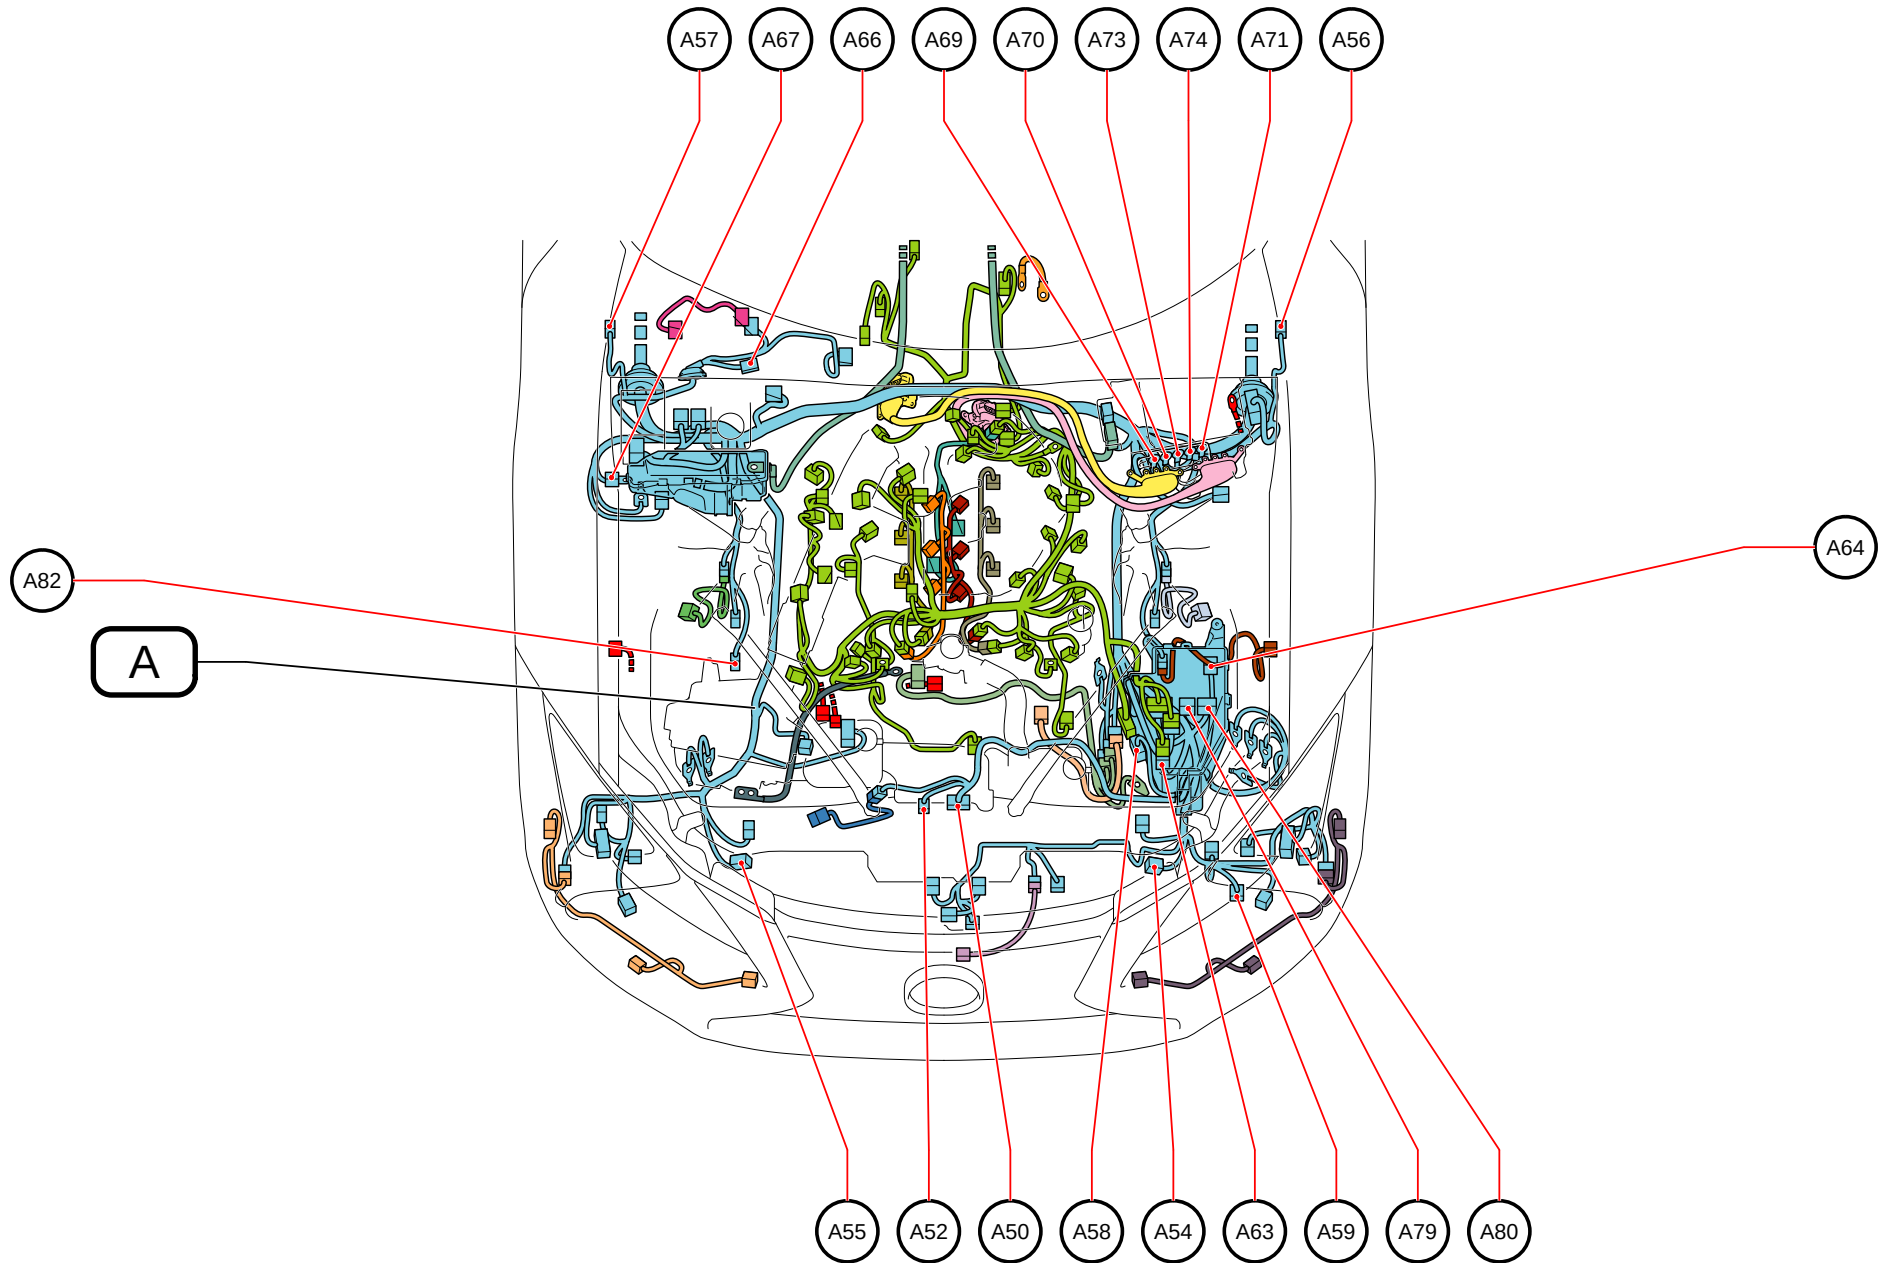

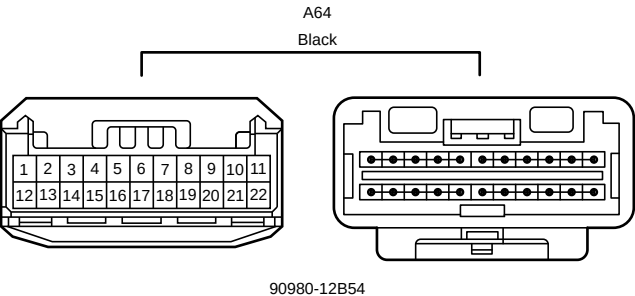
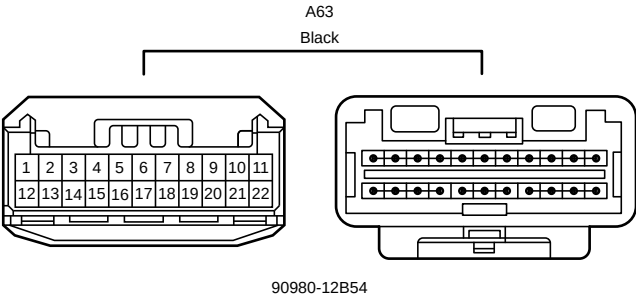
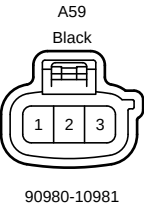
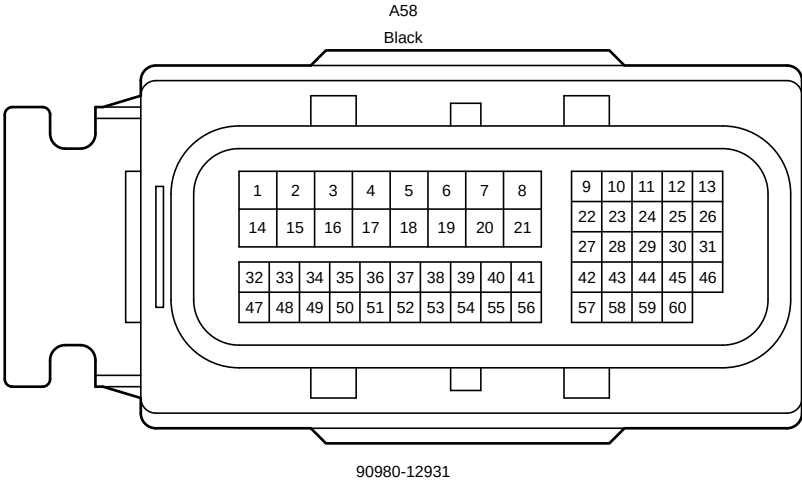
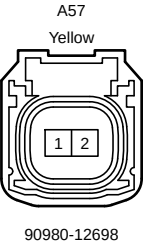
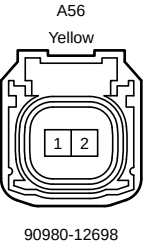
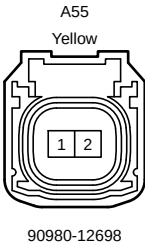
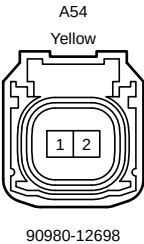


Position of Parts in Engine Compartment (RHD)

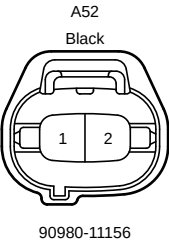

A50 Fan with Motor Assembly
A52 Fan with Motor Assembly
A54 Pop Up Hood Lifter Assembly LH
A55 Pop Up Hood Lifter Assembly RH
A56 No. 2 Pop Up Hood Lifter Assembly LH
A57 No. 2 Pop Up Hood Lifter Assembly RH
A58 ECM
A59 Headlight Cleaner Motor and Pump Assembly
A63 No. 1 Junction Connector
A64 No. 2 Junction Connector
A66 Front Wiper Deicer (Windshield Glass)
A67 No. 2 Ground Junction Connector
A69 Fusible Link Block Assembly No. 1
A70 Fusible Link Block Assembly No. 1
A71 Fusible Link Block Assembly No. 1
A73 Fusible Link Block Assembly No. 1
A74 Fusible Link Block Assembly No. 1
A79 No. 1 Semiconductor Power Integration ECU
A80 No. 1 Semiconductor Power Integration ECU
A82 Front Skid Control Sensor Wire RH

Position of Parts in Engine Compartment (RHD)

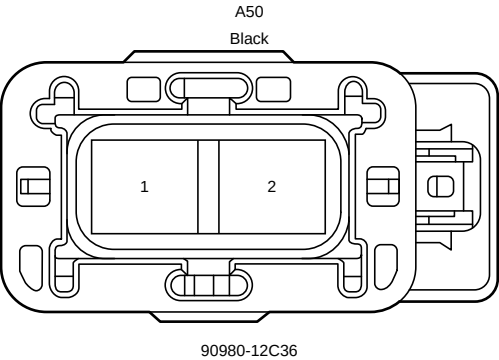

Position of Parts in Engine Compartment (RHD)

