



Position of Parts in Instrument Panel (RHD)

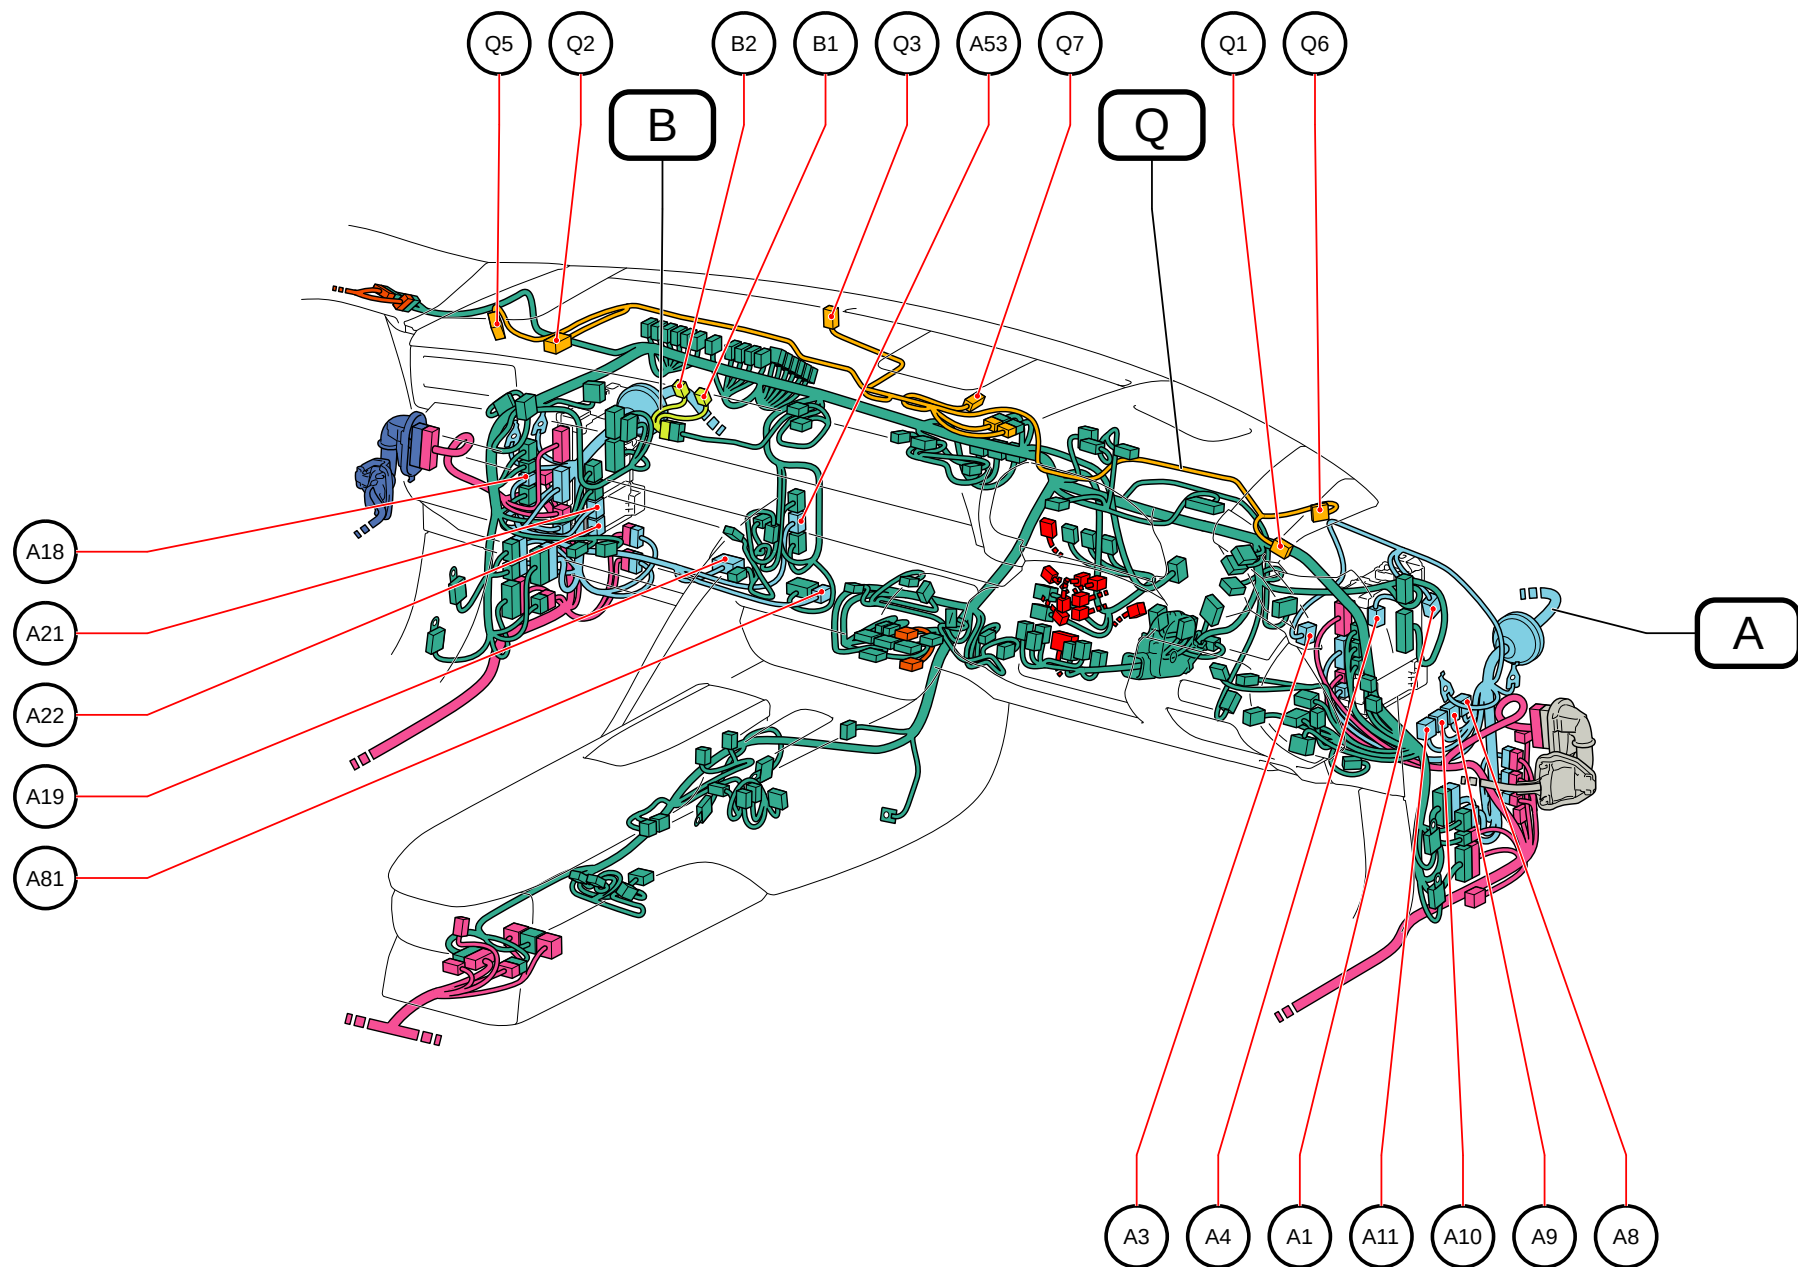


Position of Parts in Instrument Panel (RHD)

A1	Accelerator Pedal Sensor Assembly
A3	Brake Pedal Stroke Sensor Assembly
A4	Stop Light Switch Assembly
A8	Skid Control ECU Assembly
A9	Skid Control ECU Assembly
A10	Skid Control ECU Assembly
A11	Skid Control ECU Assembly
A18	Front Steering Control ECU
A19	Blower Motor with Fan Sub-Assembly
A21	Hybrid Vehicle Control ECU Assembly
A22	Hybrid Vehicle Control ECU Assembly
A53	Shift Control ECU
A81	No. 2 Semiconductor Power Integration ECU
B1	Instrument Panel Passenger Airbag without Door Assembly
B2	Instrument Panel Passenger Airbag without Door Assembly
Q1	No. 1 Instrument Panel Register Assembly
Q2	No. 2 Instrument Panel Register Assembly
Q3	Automatic Light Control Sensor
Q5	Front No. 1 Speaker Assembly LH
Q6	Front No. 1 Speaker Assembly RH
Q7	Front No. 2 Speaker Assembly


Position of Parts in Instrument Panel (RHD)

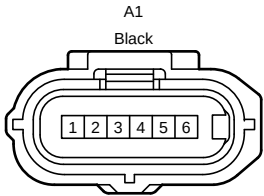


90980-12831

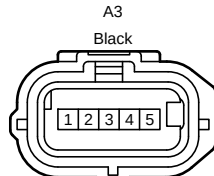


90980-12292

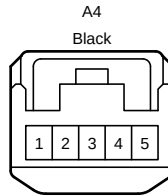


90980-12366

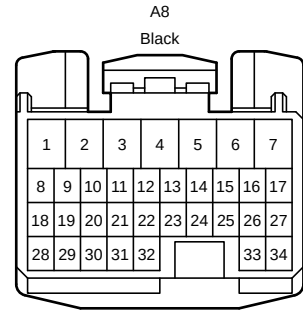


90980-12527

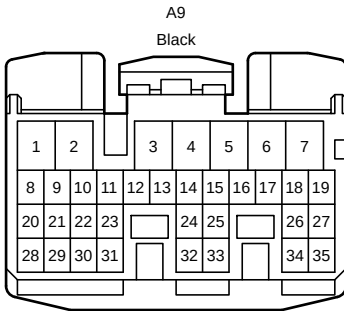


90980-12528

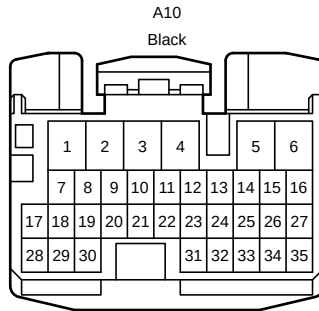


90980-12529

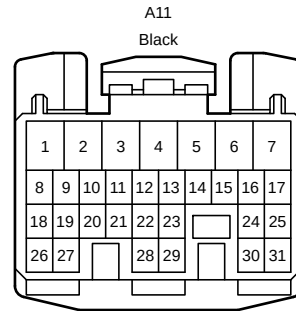


90980-12525

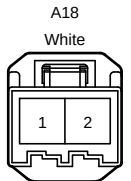


82824-30590

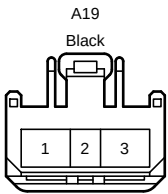


90980-11667

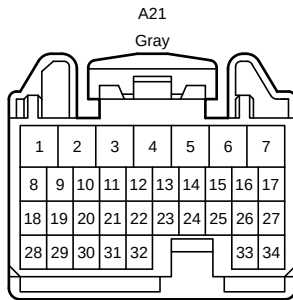


90980-12430

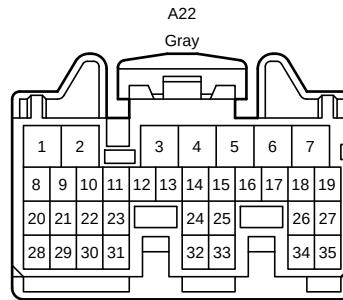


90980-12428

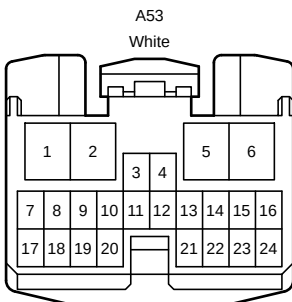


90980-12560

 


90980-10995

 


90980-12224

 


90980-12219

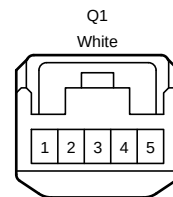


90980-12366

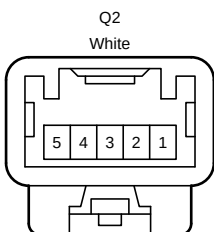


90980-12365

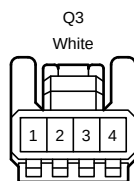


82824-50130

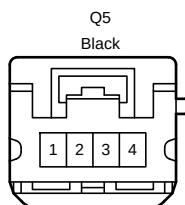

90980-12733

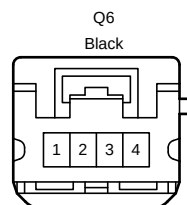

90980-12733

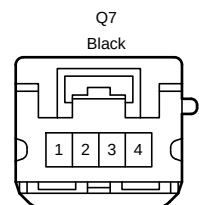

90980-12733