



Position of Parts in Seat (LHD)

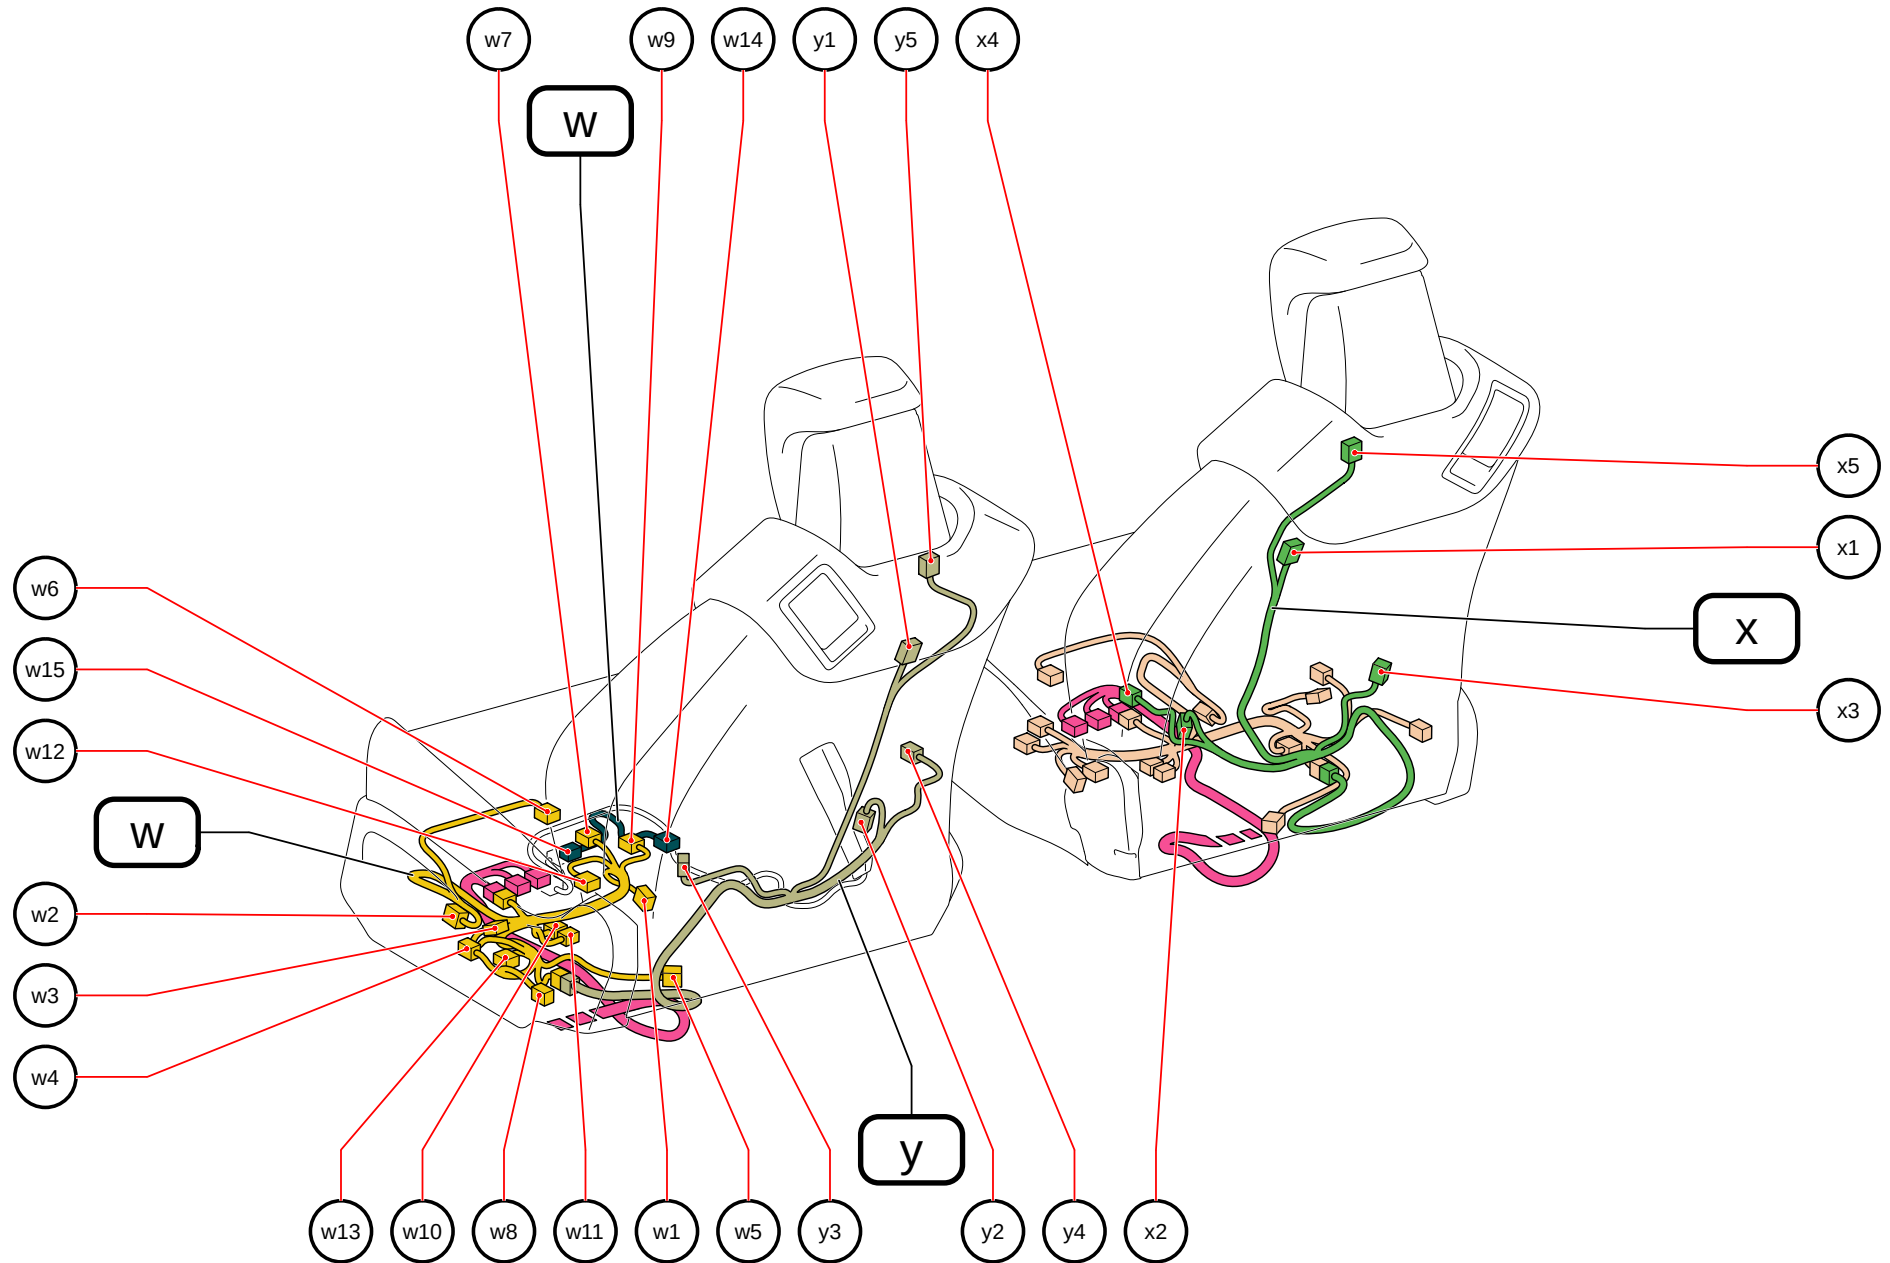


Position of Parts in Seat (LHD)

w1	Power Seat Slide Motor LH (Front Seat Adjuster Assembly LH)
w2	Power Seat Tilt Motor LH (Front Seat Adjuster Assembly LH)
w3	Power Seat Lift Motor LH (Front Seat Adjuster Assembly LH)
w4	Front Power Seat Switch LH
w5	Seat Heater LH (Front Seat Cushion Heater Assembly LH)
w6	Seat Cushion Climate Control Blower Assembly LH
w7	Front Seat Inner Belt Assembly LH
w8	Limit Switch Assembly LH (Outer)
w9	Seat Heater Control Sub-Assembly LH
w10	Position Control ECU Assembly LH
w11	Position Control ECU Assembly LH
w12	Position Control ECU Assembly LH
w13	No. 11 Junction Connector
w14	Seat Position Airbag Sensor LH
w15	Front Seat Inner Belt Assembly LH
x1	Seat Back Climate Control Blower RH
x2	Power Seat Reclining Motor RH (Front Seat Back Frame Sub-Assembly RH)
x3	Lumbar Support Adjuster Assembly RH
x4	Limit Switch Assembly RH (Inner)
x5	Front Seat Headrest Assembly RH
y1	Seat Back Climate Control Blower LH
y2	Power Seat Reclining Motor LH (Front Seat Back Frame Sub-Assembly LH)
y3	Lumbar Support Adjuster Assembly LH
y4	Limit Switch Assembly LH (Inner)
y5	Front Seat Headrest Assembly LH


Position of Parts in Seat (LHD)

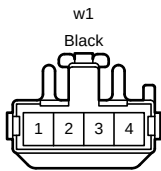


90980-12335

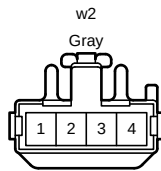


90980-12335

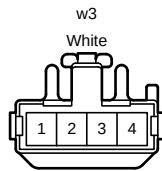


90980-12335

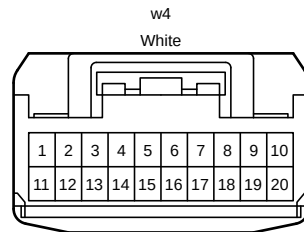


90980-12460

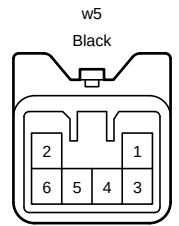


90980-10796

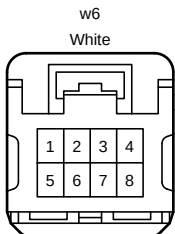


90980-12735

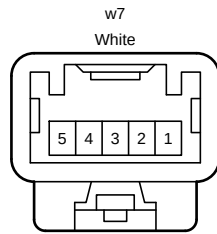


90980-12365

 


90980-11736

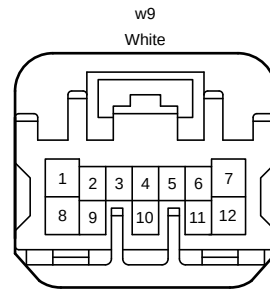


90980-12812

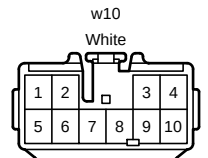


90980-10997

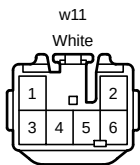


90980-10996

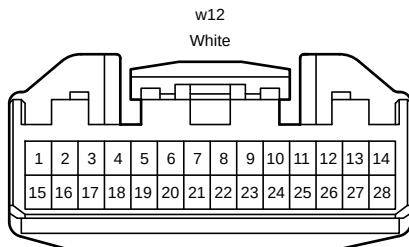


90980-12555

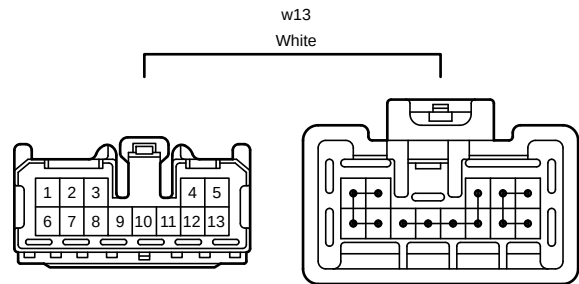


90980-12346

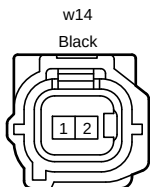


90980-12416

 


90980-11155

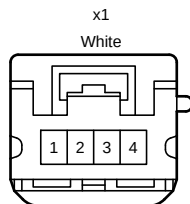


90980-12733

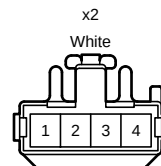


90980-12335

 


90980-12341

 


90980-11736

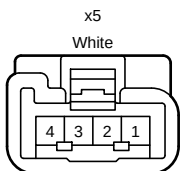


90980-11012

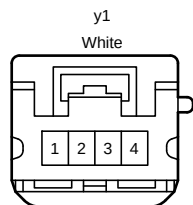


90980-12733

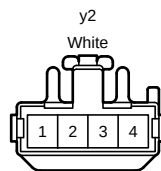


90980-12335

 

90980-12341

 

90980-11736

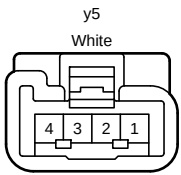

90980-11012