


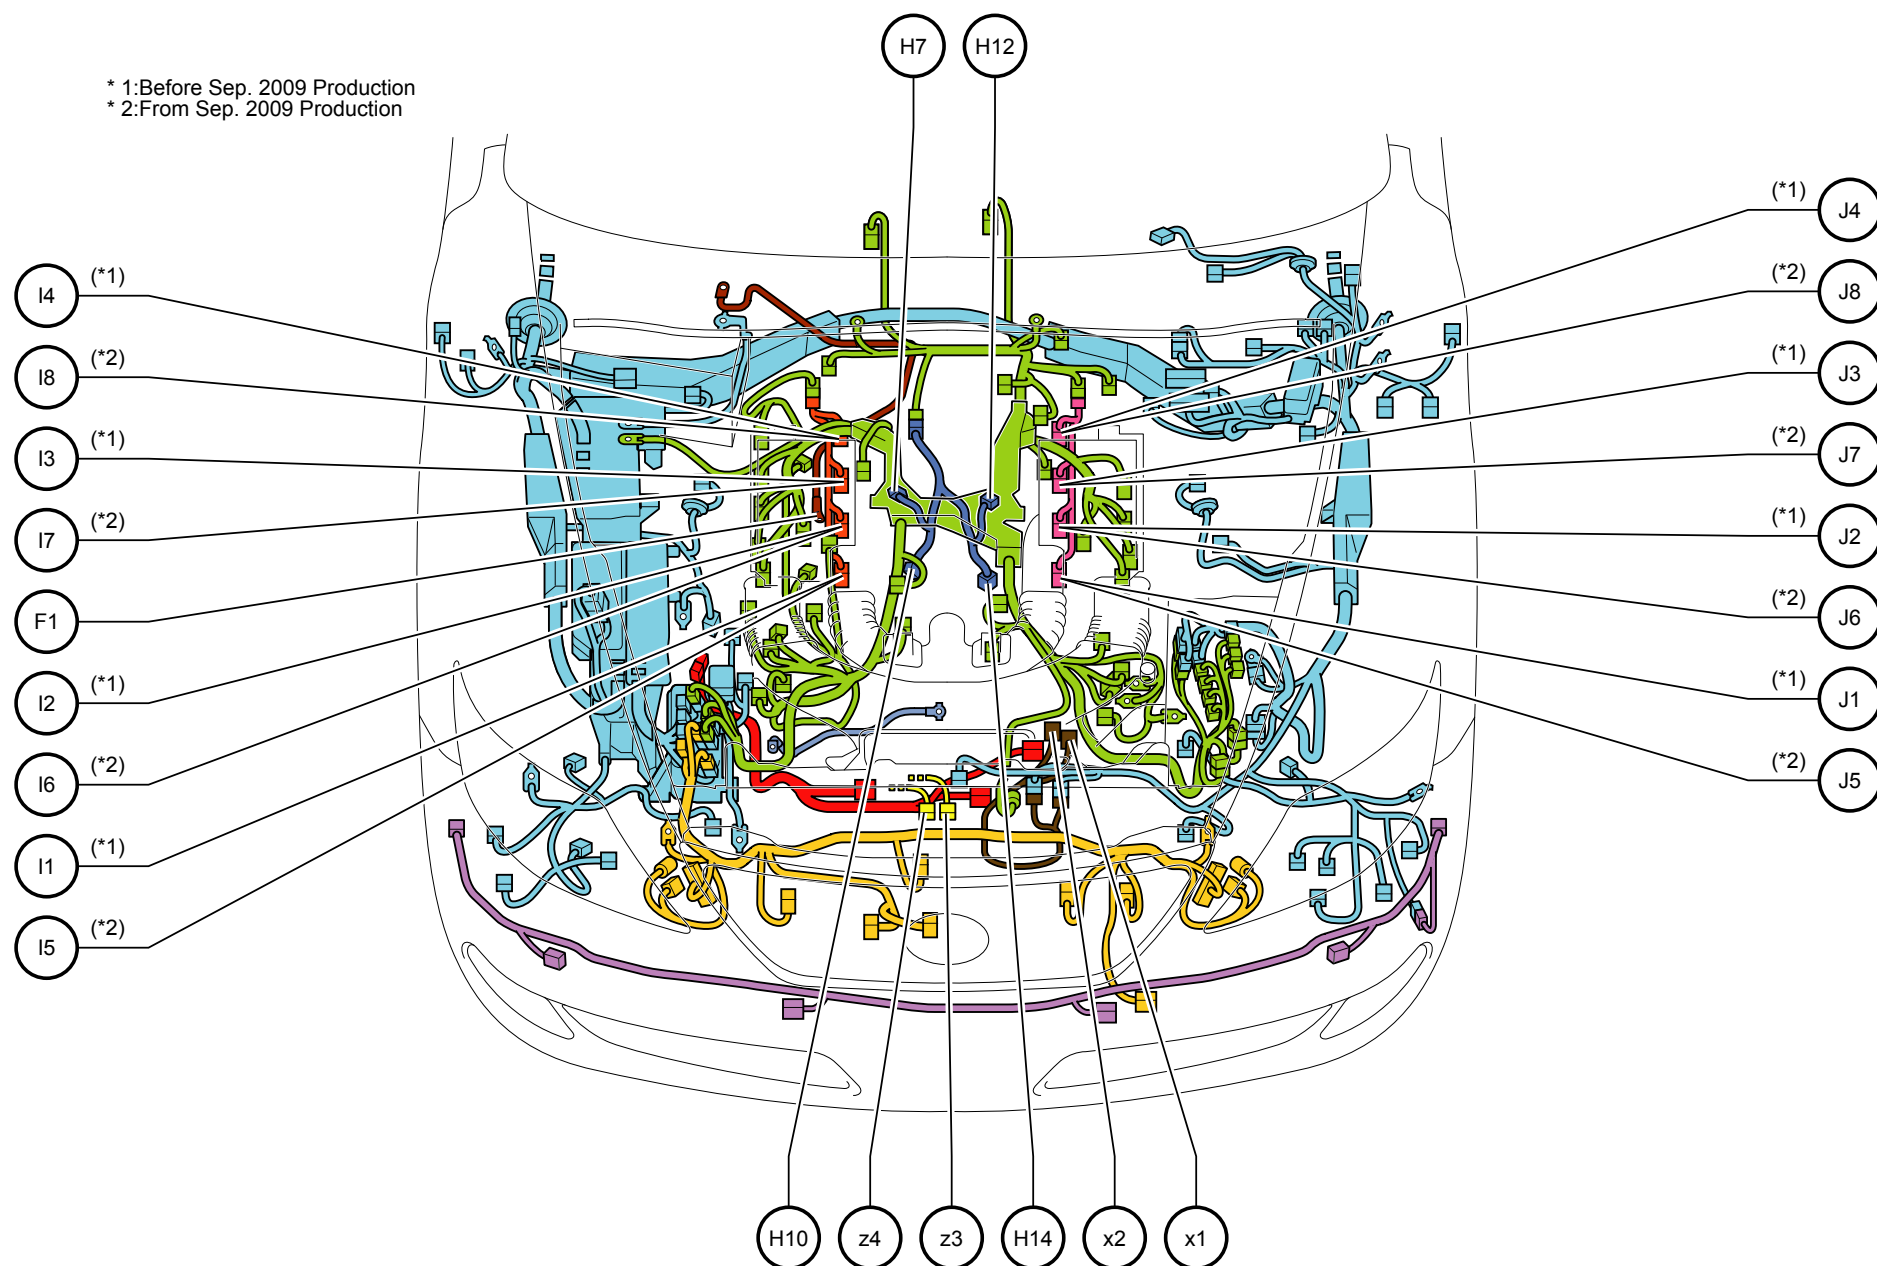

F 1 Starter

H 7 Knock Sensor (Bank 2 Sensor 2)

H 10 Knock Sensor (Bank 2 Sensor 1)

H 12 Knock Sensor (Bank 1 Sensor 2)

H 14 Knock Sensor (Bank 1 Sensor 1)

I 1 Fuel Injector (for Port Injection No. 2)

I 2 Fuel Injector (for Port Injection No. 4)

I 3 Fuel Injector (for Port Injection No. 6)

I 4 Fuel Injector (for Port Injection No. 8)

I 5 Fuel Injector (for Port Injection No. 2)

I 6 Fuel Injector (for Port Injection No. 4)

I 7 Fuel Injector (for Port Injection No. 6)

I 8 Fuel Injector (for Port Injection No. 8)

J 1 Fuel Injector (for Port Injection No. 1)

J 2 Fuel Injector (for Port Injection No. 3)

J 3 Fuel Injector (for Port Injection No. 5)

J 4 Fuel Injector (for Port Injection No. 7)

J 5 Fuel Injector (for Port Injection No. 1)

J 6 Fuel Injector (for Port Injection No. 3)

J 7 Fuel Injector (for Port Injection No. 5)

J 8 Fuel Injector (for Port Injection No. 7)

x 1 VGRS Actuator

 
x 2 VGRS Actuator

z 3 Fan Control ECU , Cooling Fan Motor (Main)

z 4 Fan Control ECU , Cooling Fan Motor (Sub)


Position of Parts in Engine Compartment <LHD 1UR-FE Before Sep. 2012 Production>

F 1



(RHD 4WD, LHD From Sep. 2008 Production)

 
F 1



(RHD 2WD, LHD Before Sep. 2008 Production)


H 7

 Black




H 10

 Black




H 12

 Gray




H 14

 Gray




I 1

Black

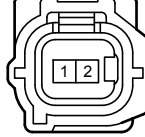

I 2

Black

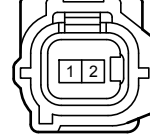


I 3

Black




I 4

Black

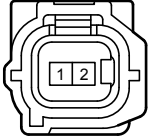


I 5

Black

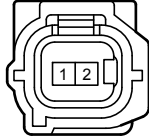


I 6

Black

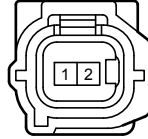

I 7

Black

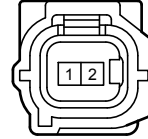

I 8

Black



J 1

Black




J 2

Black




J 3

Black

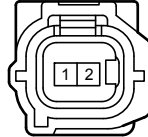


J 4

Black

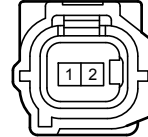


J 5

Black

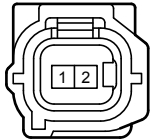


J 6

Black

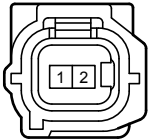


J 7

Black

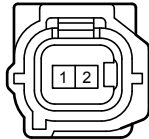


J 8

Black

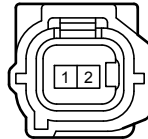


x 1

Gray

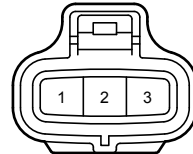


x 2

White

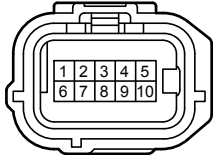

z 3

Gray

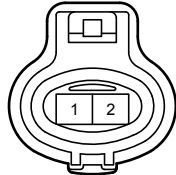

z 4

Gray

