



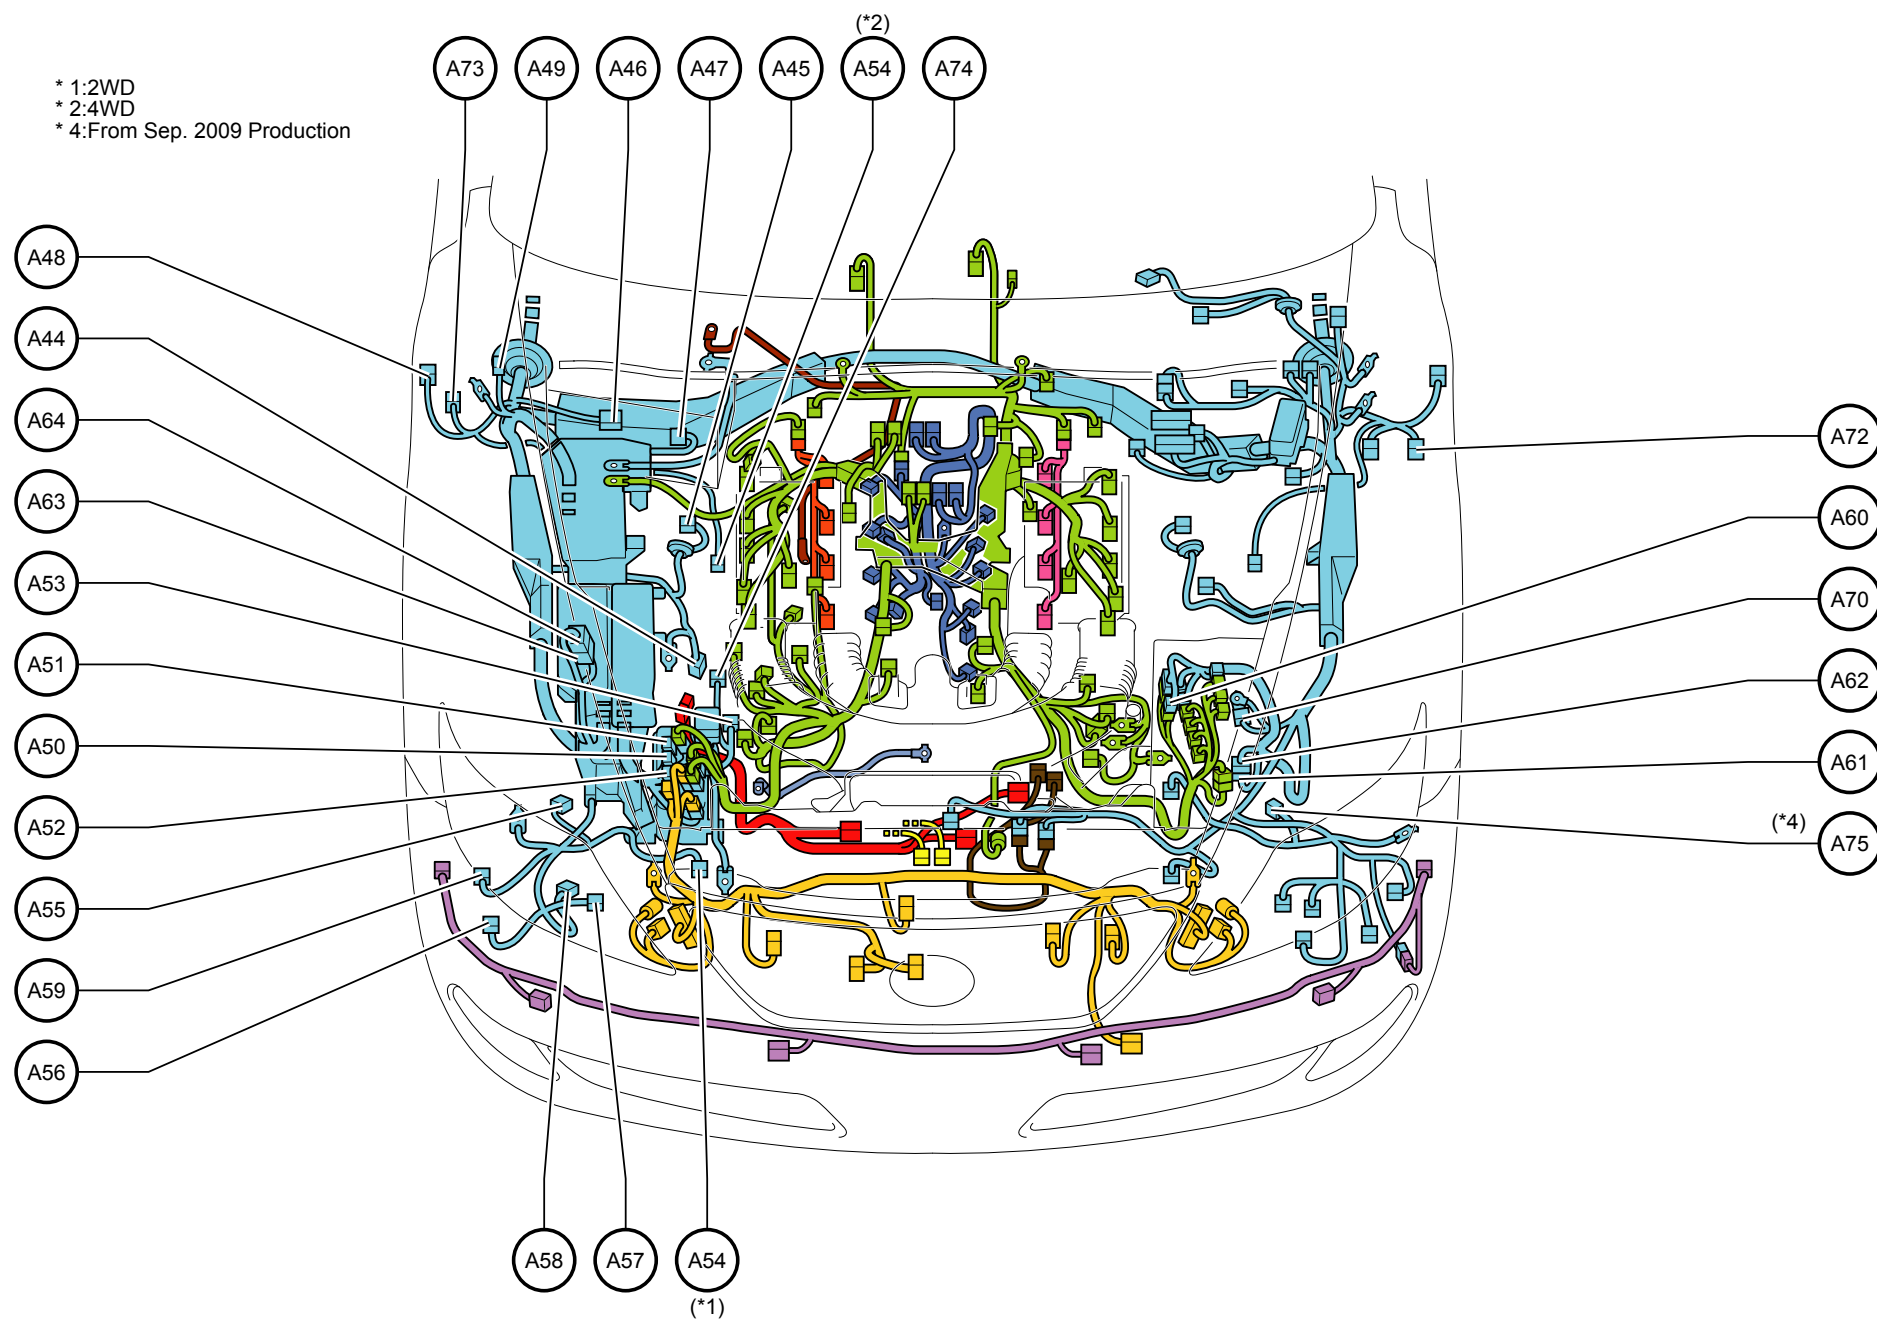


- A 44 Power Steering ECU
- A 45 Front Suspension Control Actuator RH
- A 46 Power Steering DC/DC Converter
- A 47 Power Steering DC/DC Converter
- A 48 Side Turn Signal Light RH
- A 49 Battery Current Sensor
- A 50 Front Controller
- A 51 Front Controller
- A 52 Front Controller
- A 53 Front Airbag Sensor RH
- A 54 Front Height Control Sensor RH
- A 55 Front Pad Wear Indicator Switch RH , Front Speed Sensor RH
- A 56 Height Control Exhaust Valve
- A 57 Height Control Compressor Motor
- A 58 Fog Light RH
- A 59 Front Height Control Valve
- A 60 Junction Connector
- A 61 Junction Connector
- A 62 Junction Connector
- A 63 Junction Connector
- A 64 Junction Connector
- A 70 Junction Connector
- A 72 Tire Pressure Warning Antenna (Front LH)
- A 73 Tire Pressure Warning Antenna (Front RH)
- A 74 Noise Filter
- A 75 Front Speed Sensor LH , Front Pad Wear Indicator LH


A 44
Black

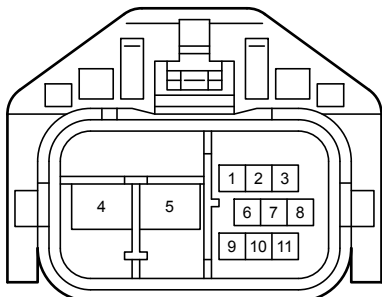


A 45
Black

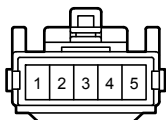


A 46
Black

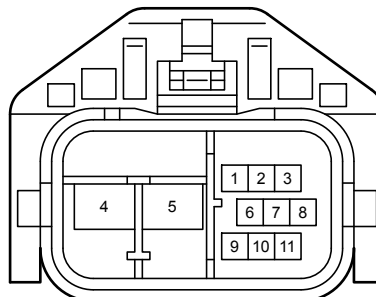


A 47
Black

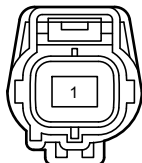


A 48
Gray

 


A 49
Black

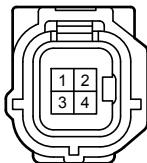


A 50
White

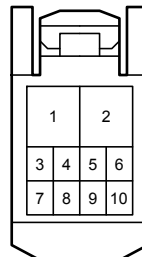


A 51
White

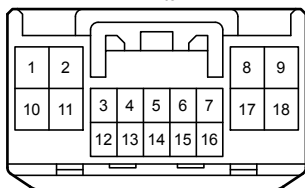


A 52
White

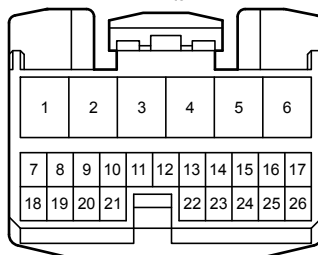


A 53
Yellow

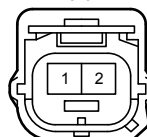


A 54
Black

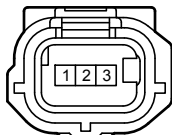

A 55
Gray

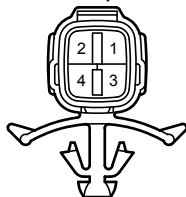

A 56
Black

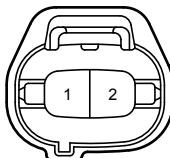

A 57
Gray




A 58
Brown




A 59
Black



A 60
Blue

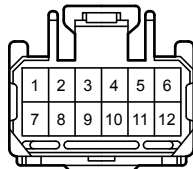


A 61
Black

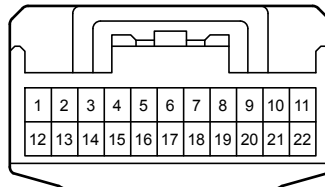


Position of Parts in Engine Compartment <LHD 1UR-FSE Before Sep. 2012 Production>


A 62
Blue

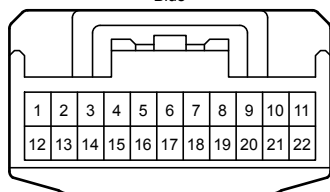


A 63
Black

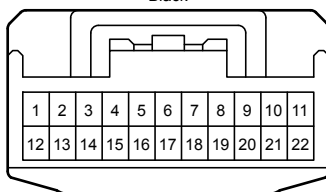

A 64
Black

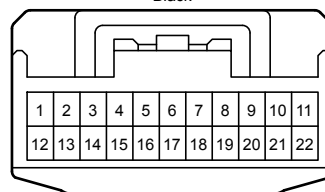

A 70
Gray

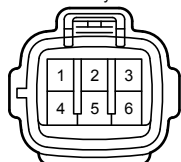


A 72
Black



A 73
Black



A 74
Gray

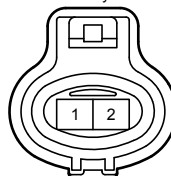

A 75
Black

