

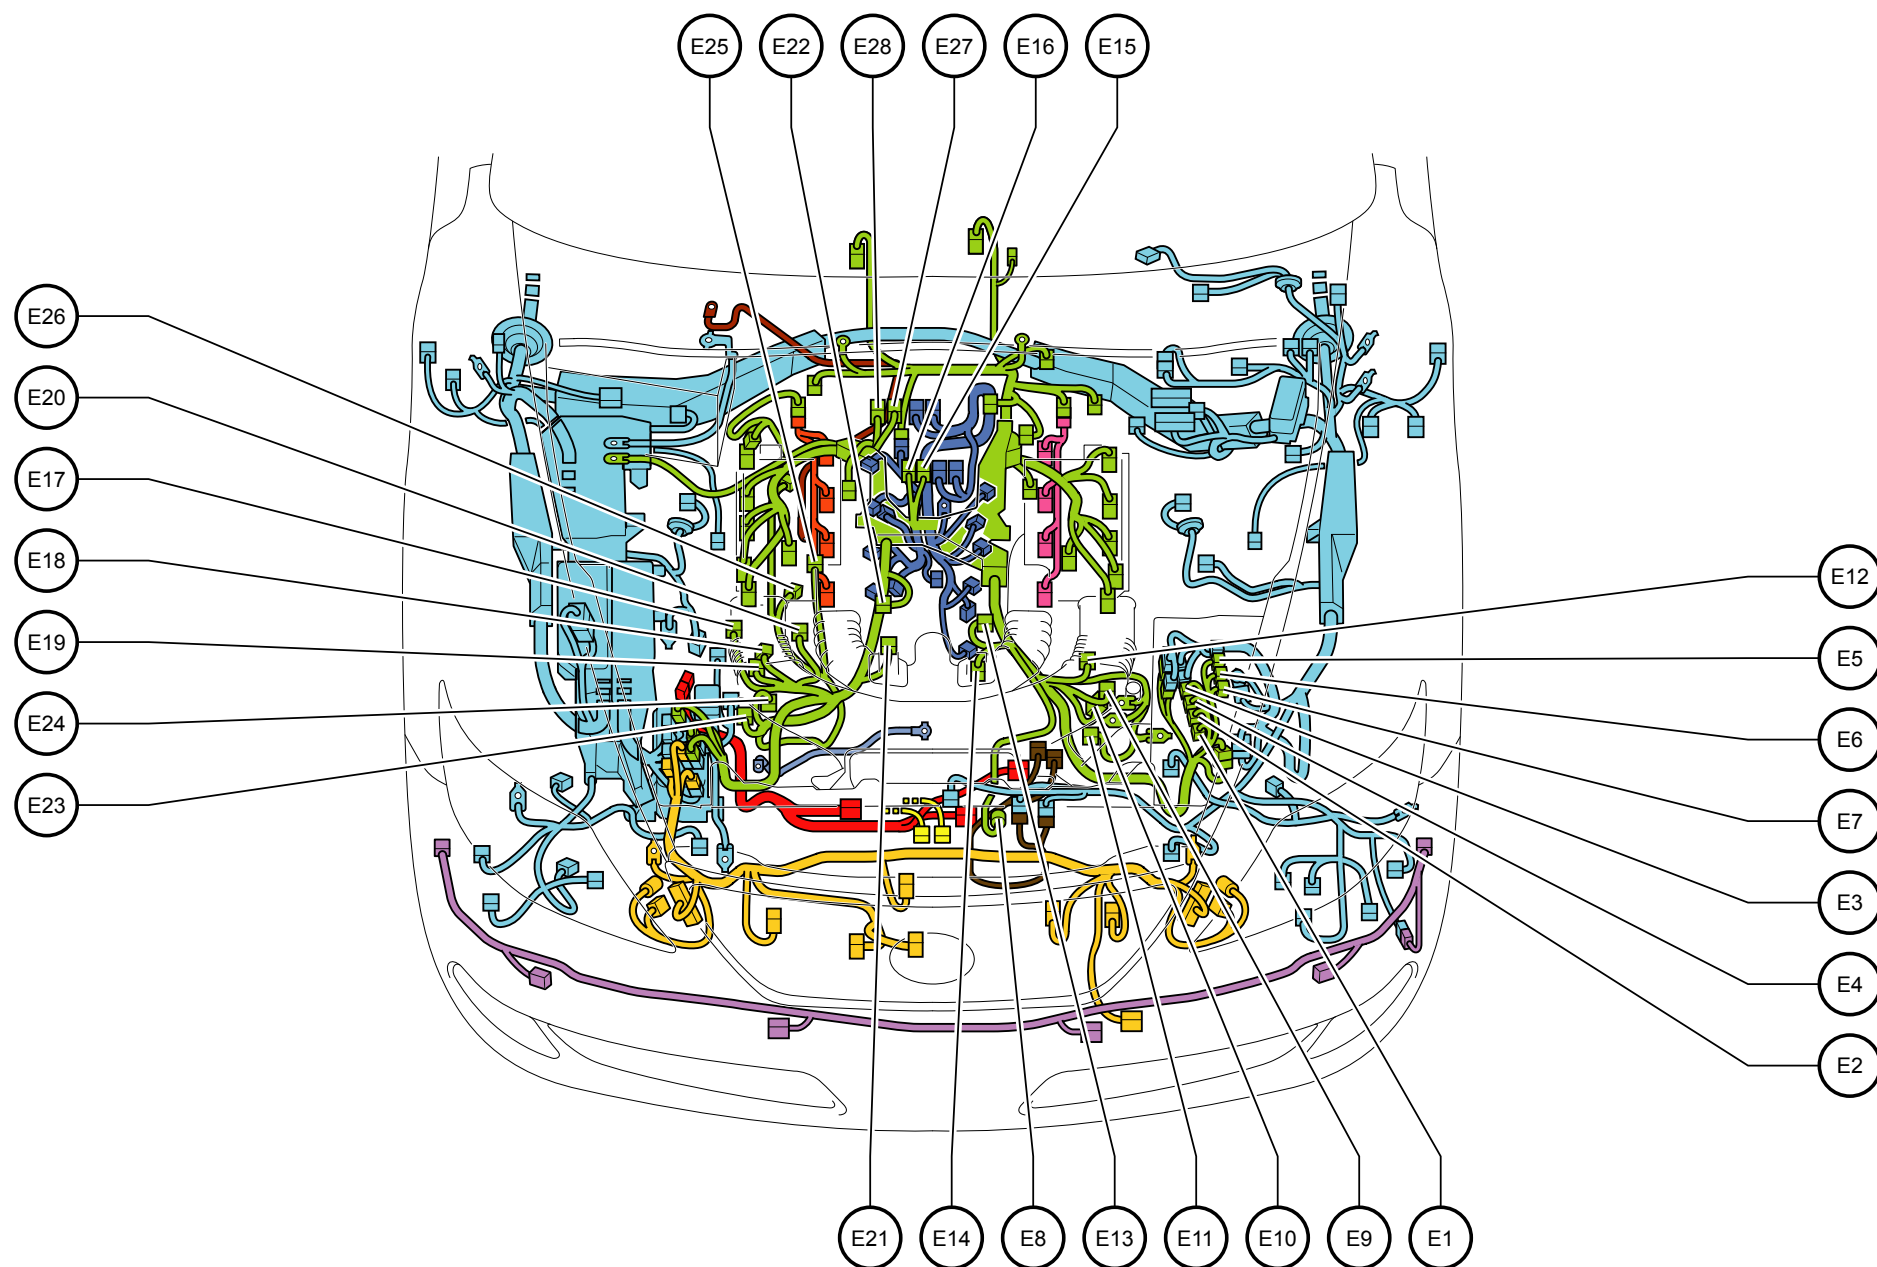
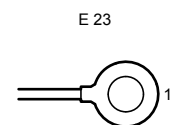
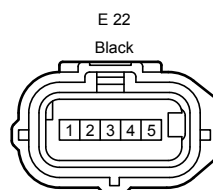
 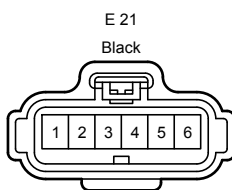
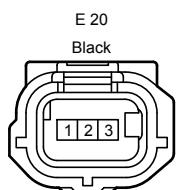

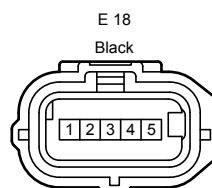
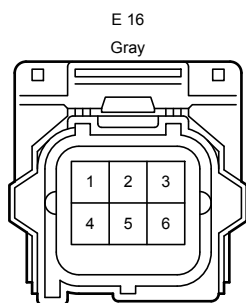
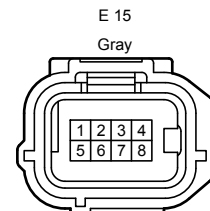
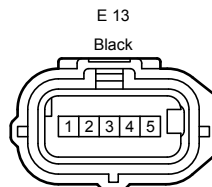
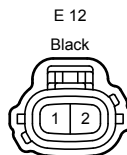
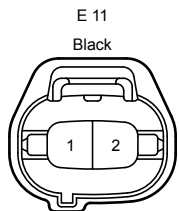
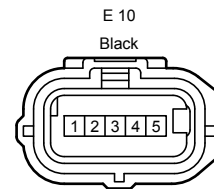
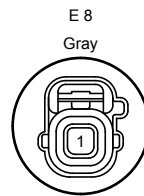
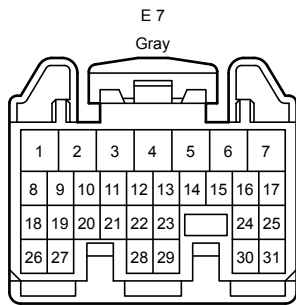
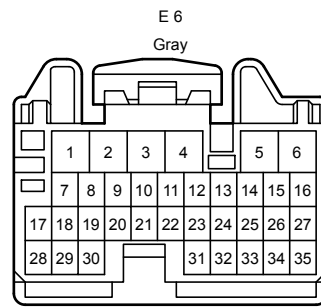
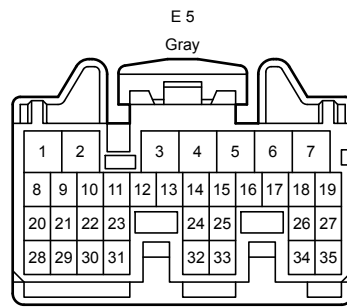
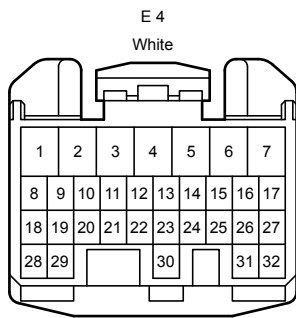
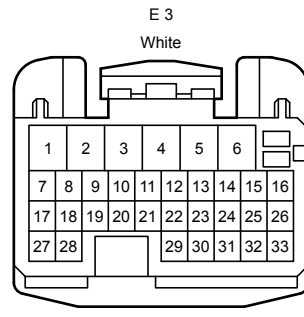


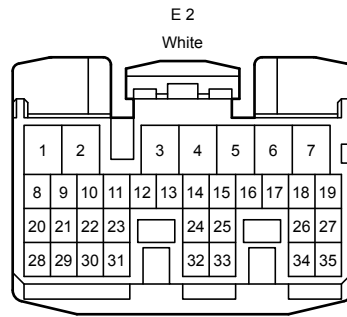

- E 1 Engine ECU
- E 2 Engine ECU
- E 3 Engine ECU
- E 4 Engine ECU
- E 5 Transmission Control ECU
- E 6 Transmission Control ECU
- E 7 Transmission Control ECU
- E 8 Oil Pressure Switch
- E 9 Camshaft Control Motor (Bank 1)
- E 10 Camshaft Control Motor (Bank 1)
- E 11 A/C Compressor
- E 12 Camshaft Timing Oil Control Valve (Bank 1)
- E 13 Air Flow Meter (Bank 1)
- E 14 Engine Coolant Temperature Sensor
- E 15 Injector Driver (No. 1)
- E 16 Injector Driver (No. 1)
- E 17 Camshaft Timing Oil Control Valve (Bank 2)
- E 18 Camshaft Control Motor (Bank 2)
- E 19 Camshaft Control Motor (Bank 2)
- E 20 Camshaft Position Sensor
- E 21 Throttle Position Sensor
- E 22 Air Flow Meter (Bank 2)
- E 23 Alternator
- E 24 Alternator
- E 25 Starter
- E 26 Engine Oil Level Sensor
- E 27 Injector Driver (No. 2)
- E 28 Injector Driver (No. 2)

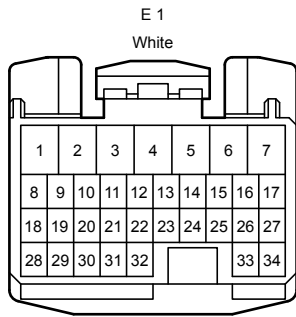

(Before Sep. 2009 Production)

E 23



E 24

Black



E 25

Black




E 26

Gray



E 27

Gray

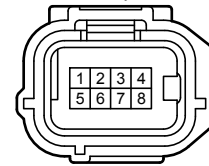

E 28

Gray

