



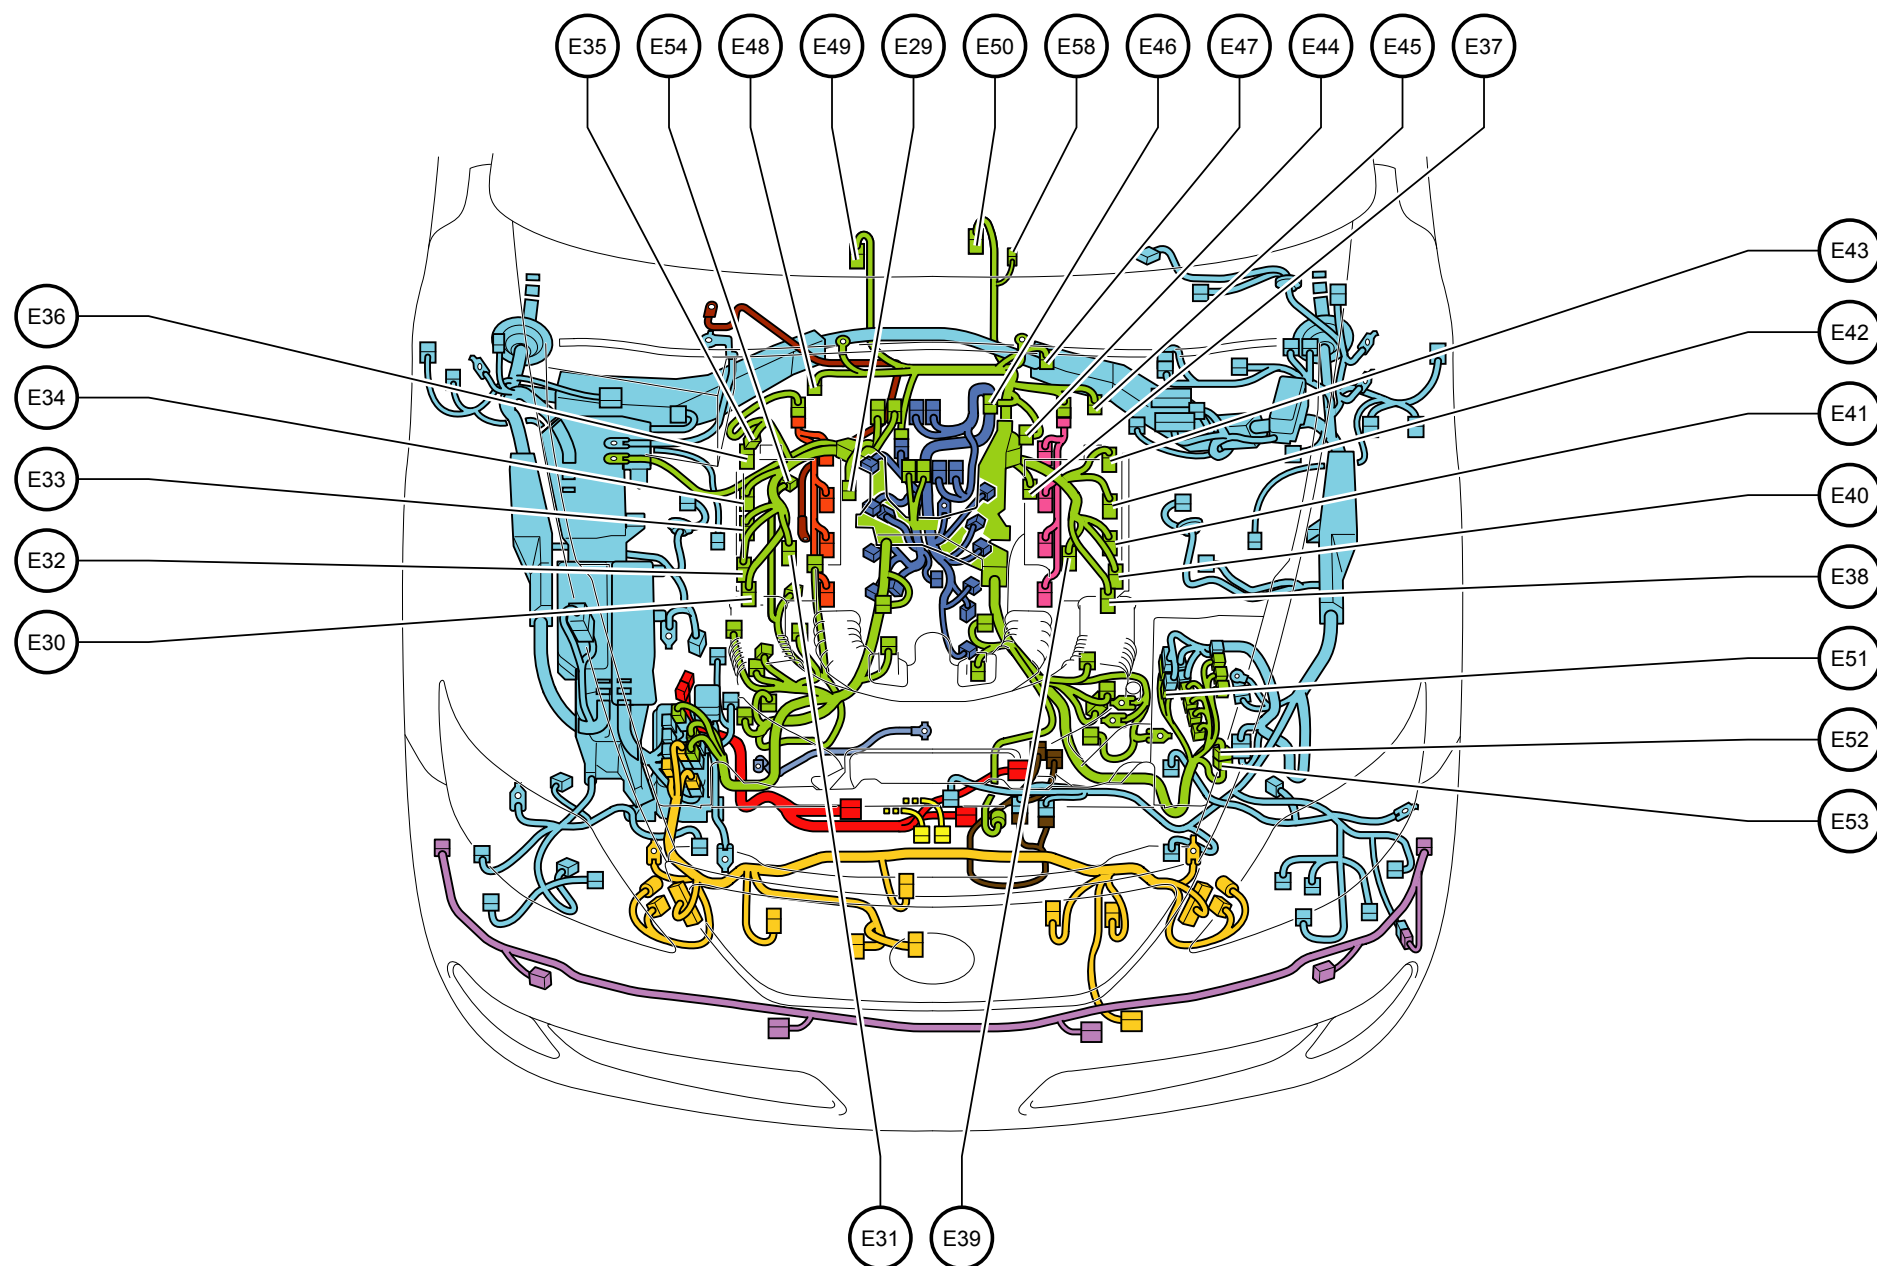


- E 29 Noise Filter (Ignition Bank 2)
- E 30 Ignition Coil (No. 2)
- E 31 VVT Sensor (Bank 2 Intake Side)
- E 32 VVT Sensor (Bank 2 Exhaust Side)
- E 33 Ignition Coil (No. 4)
- E 34 Ignition Coil (No. 6)
- E 35 Spill Control Valve (Bank 2)
- E 36 Ignition Coil (No. 8)
- E 37 Noise Filter (Ignition Bank 1)
- E 38 Ignition Coil (No. 1)
- E 39 VVT Sensor (Bank 1 Intake Side)
- E 40 VVT Sensor (Bank 1 Exhaust Side)
- E 41 Ignition Coil (No. 3)
- E 42 Ignition Coil (No. 5)
- E 43 Spill Control Valve (Bank 1)
- E 44 Purge VSV
- E 45 Ignition Coil (No. 7)
- E 46 Intake Air Control Valve Actuator
- E 47 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 48 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 49 Park/Neutral Position Switch
- E 50 Automatic Transmission
- E 51 Junction Connector
- E 52 Junction Connector
- E 53 Junction Connector
- E 54 Crankshaft Position Sensor
- E 58 Heated Oxygen Sensor (Bank 1 Sensor 2)

Position of Parts in Engine Compartment <LHD 1UR-FSE Before Sep. 2012 Production>

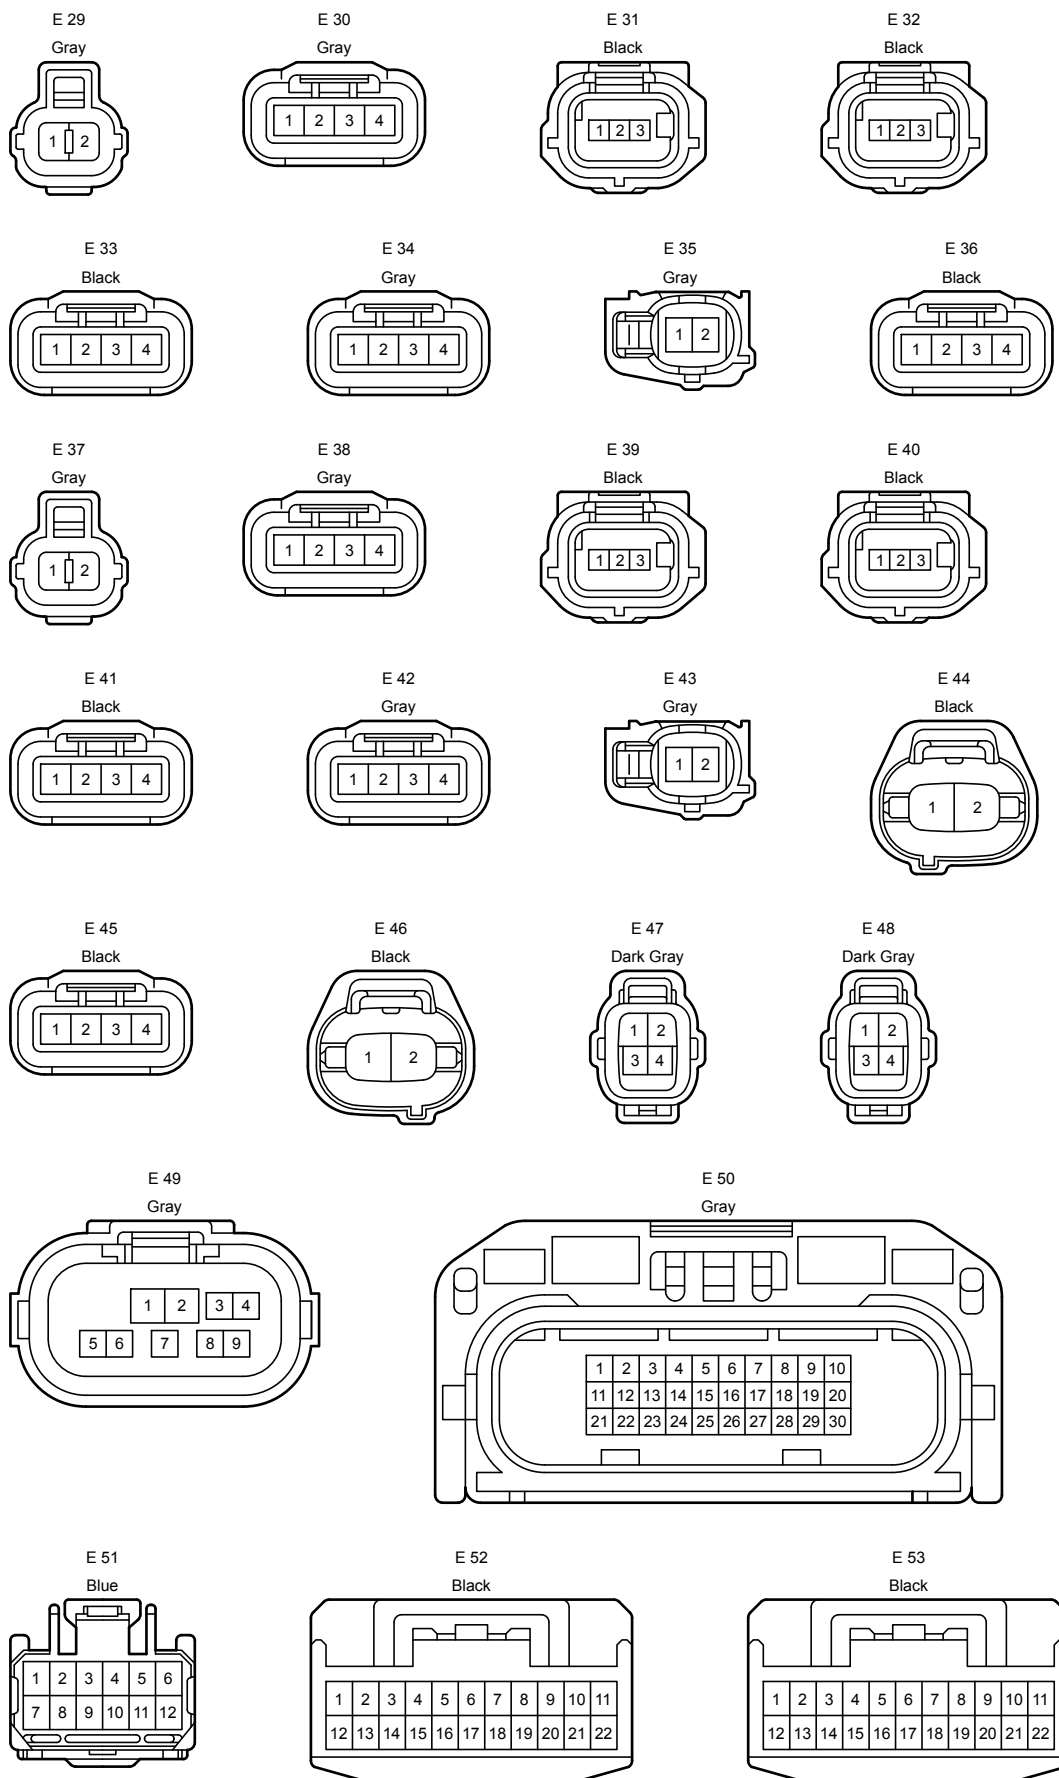

E 54

Black

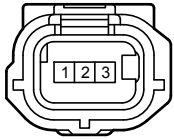

E 58

Dark Gray

