



Position of Parts in Body <RHD Before Sep. 2012 Production>

- \* 3: From Jan. 2007 Production
- \* 8: Before Sep. 2008 Production
- \* 9: Before Sep. 2009 Production
- \* 10: From Sep. 2009 Production

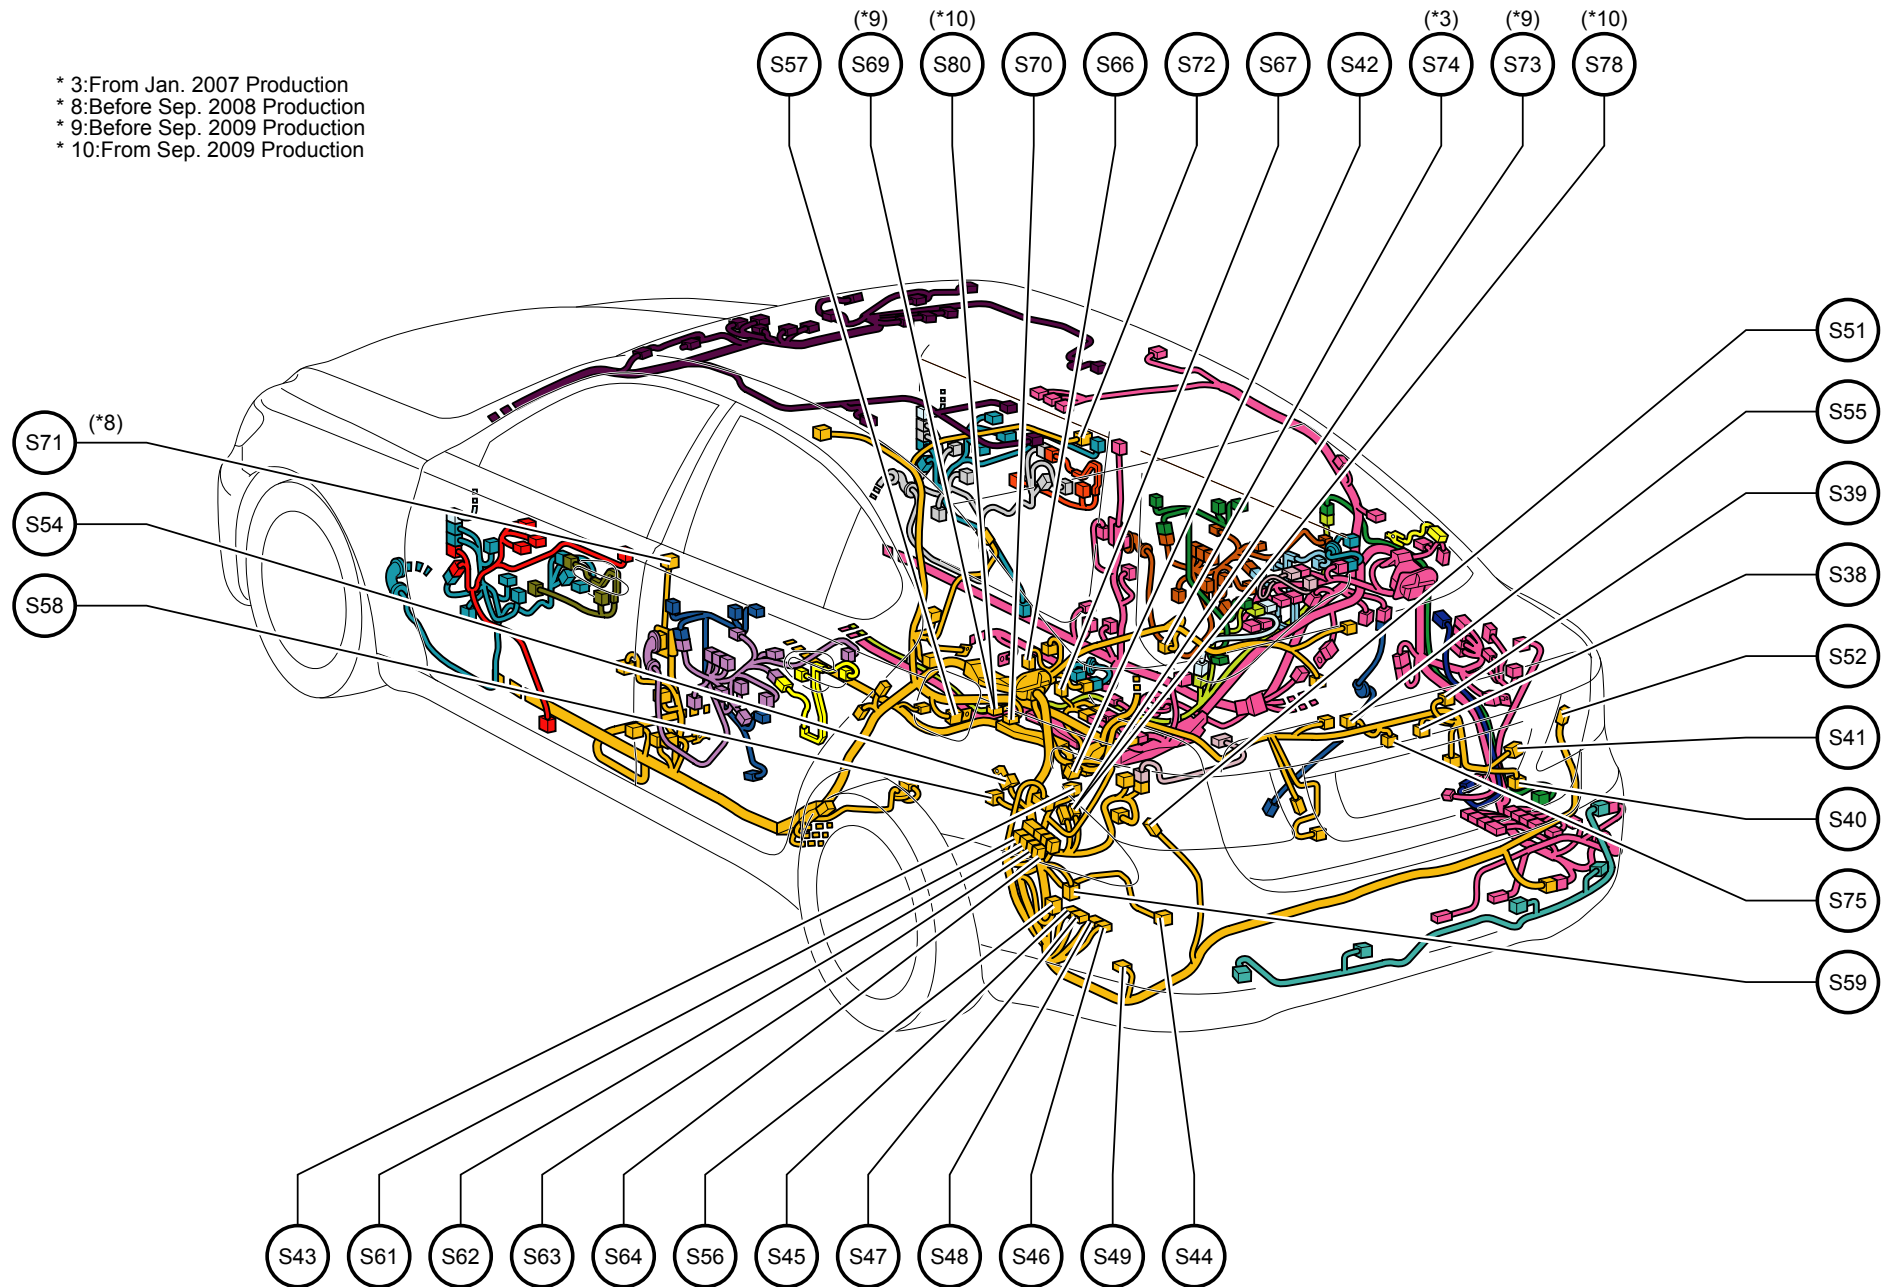

- S 38 Luggage Electrical Key Switch
- S 39 Luggage Compartment Door Lock Cylinder
- S 40 Power Trunk Lid Switch
- S 41 Rear Combination Light RH
- S 42 Fuel Lid Opener Motor
- S 43 Power Trunk Lid Control ECU
- S 44 Luggage Electrical Key Antenna (Inner)
- S 45 Seat Belt Control ECU
- S 46 Parking Brake ECU
- S 47 Seat Belt Control ECU
- S 48 Parking Brake ECU
- S 49 Brake Control Power Supply
- S 51 Rear Combination Light LH
- S 52 Rear Combination Light RH
- S 54 Junction Connector
- S 55 Junction Connector
- S 56 Junction Connector
- S 57 Junction Connector
- S 58 Junction Connector
- S 59 Junction Connector
- S 61 Rear Junction Block ECU
- S 62 Rear Junction Block ECU
- S 63 Rear Junction Block ECU
- S 64 Rear Junction Block ECU
- S 66 Rear Tension Reducer LH
- S 67 Rear Seat Inner Belt Switch LH
- S 69 Ottoman Reclining Motor
- S 70 Ottoman Reclining Sensor
- S 71 Shoulder Belt Anchor LH
- S 72 Tire Pressure Warning Antenna (Roof Header)
- S 73 Rear Height Control Sensor LH , Rear Speed Sensor LH
- S 74 Cooling Box Illumination Light
- S 75 License Plate Light
- S 78 Rear Height Control Sensor LH , Rear Pad Wear Indicator Switch LH , Rear Speed Sensor LH
- S 80 Ottoman Reclining Motor and Sensor LH

Position of Parts in Body <RHD Before Sep. 2012 Production>

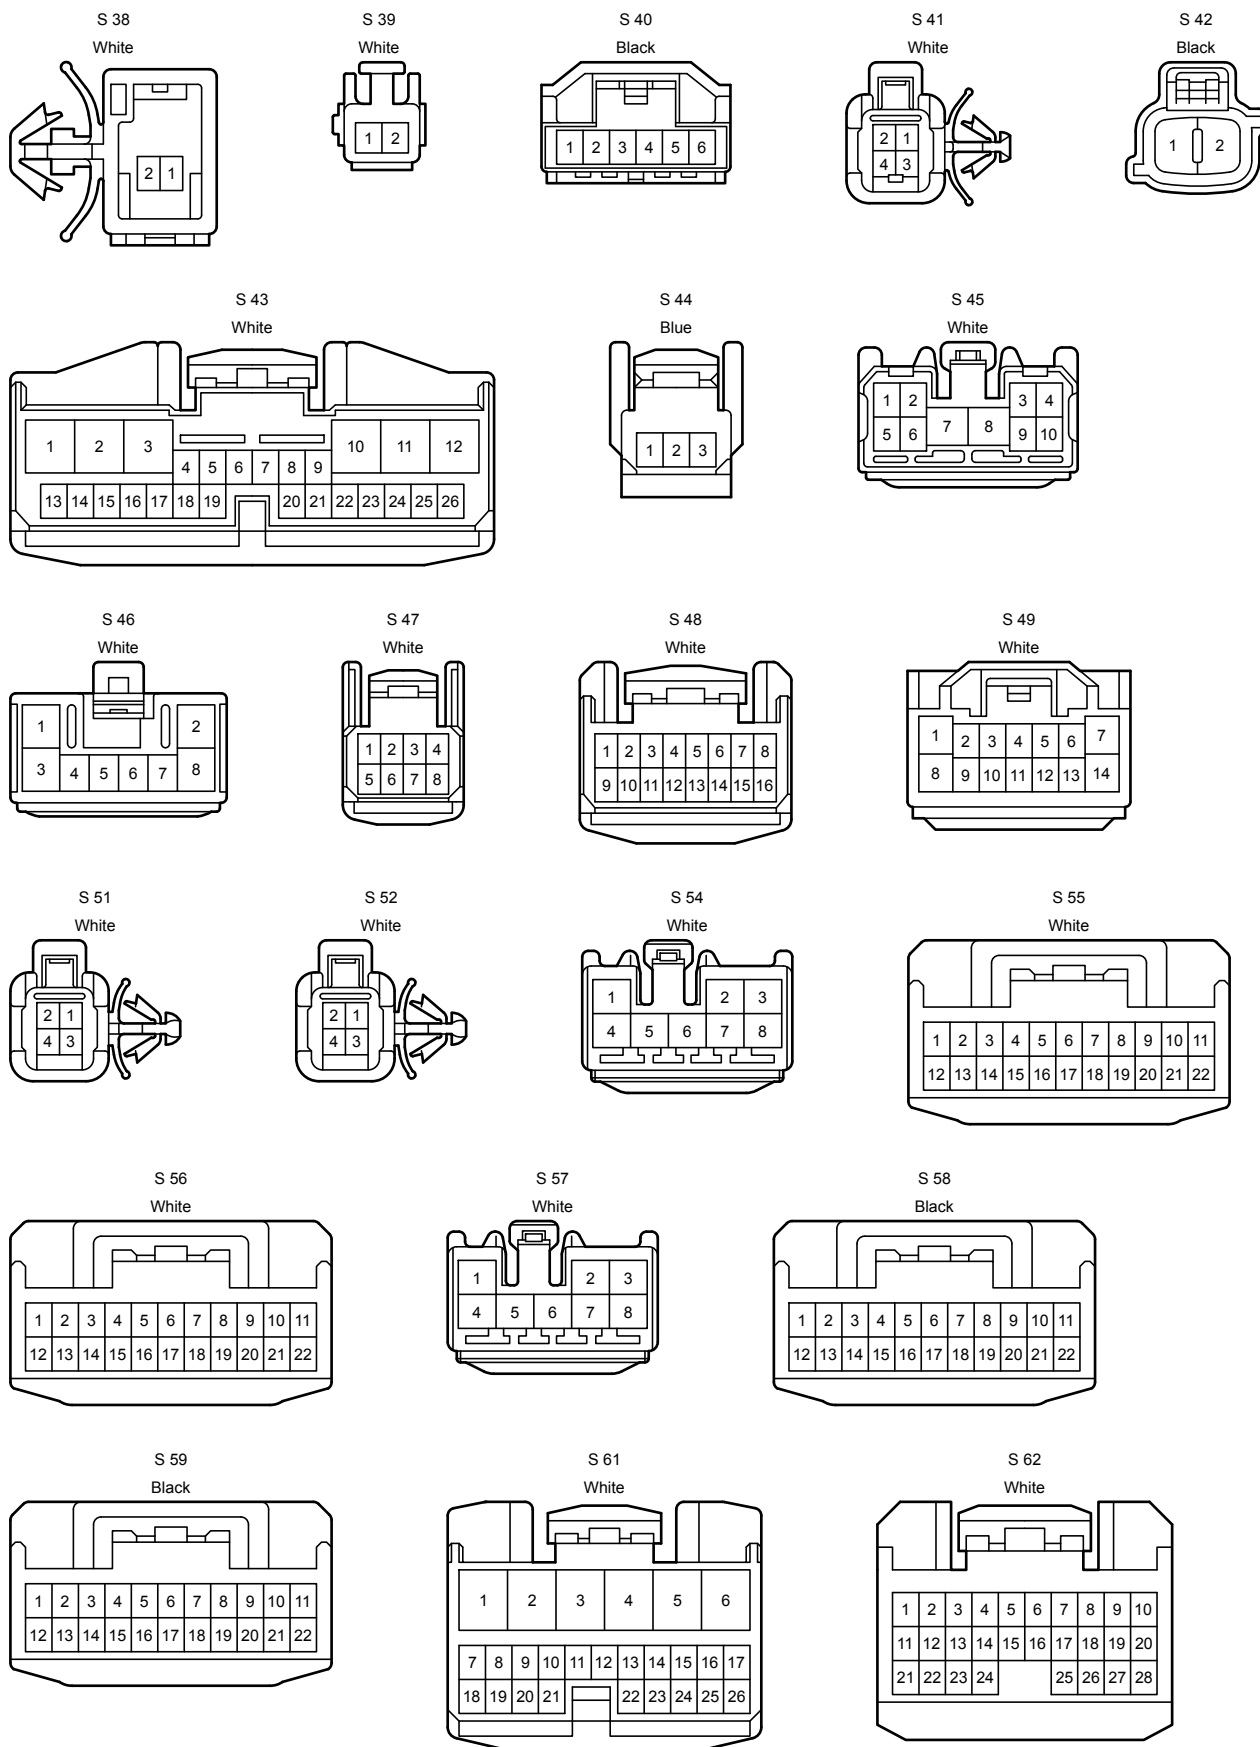

Position of Parts in Body <RHD Before Sep. 2012 Production>

