


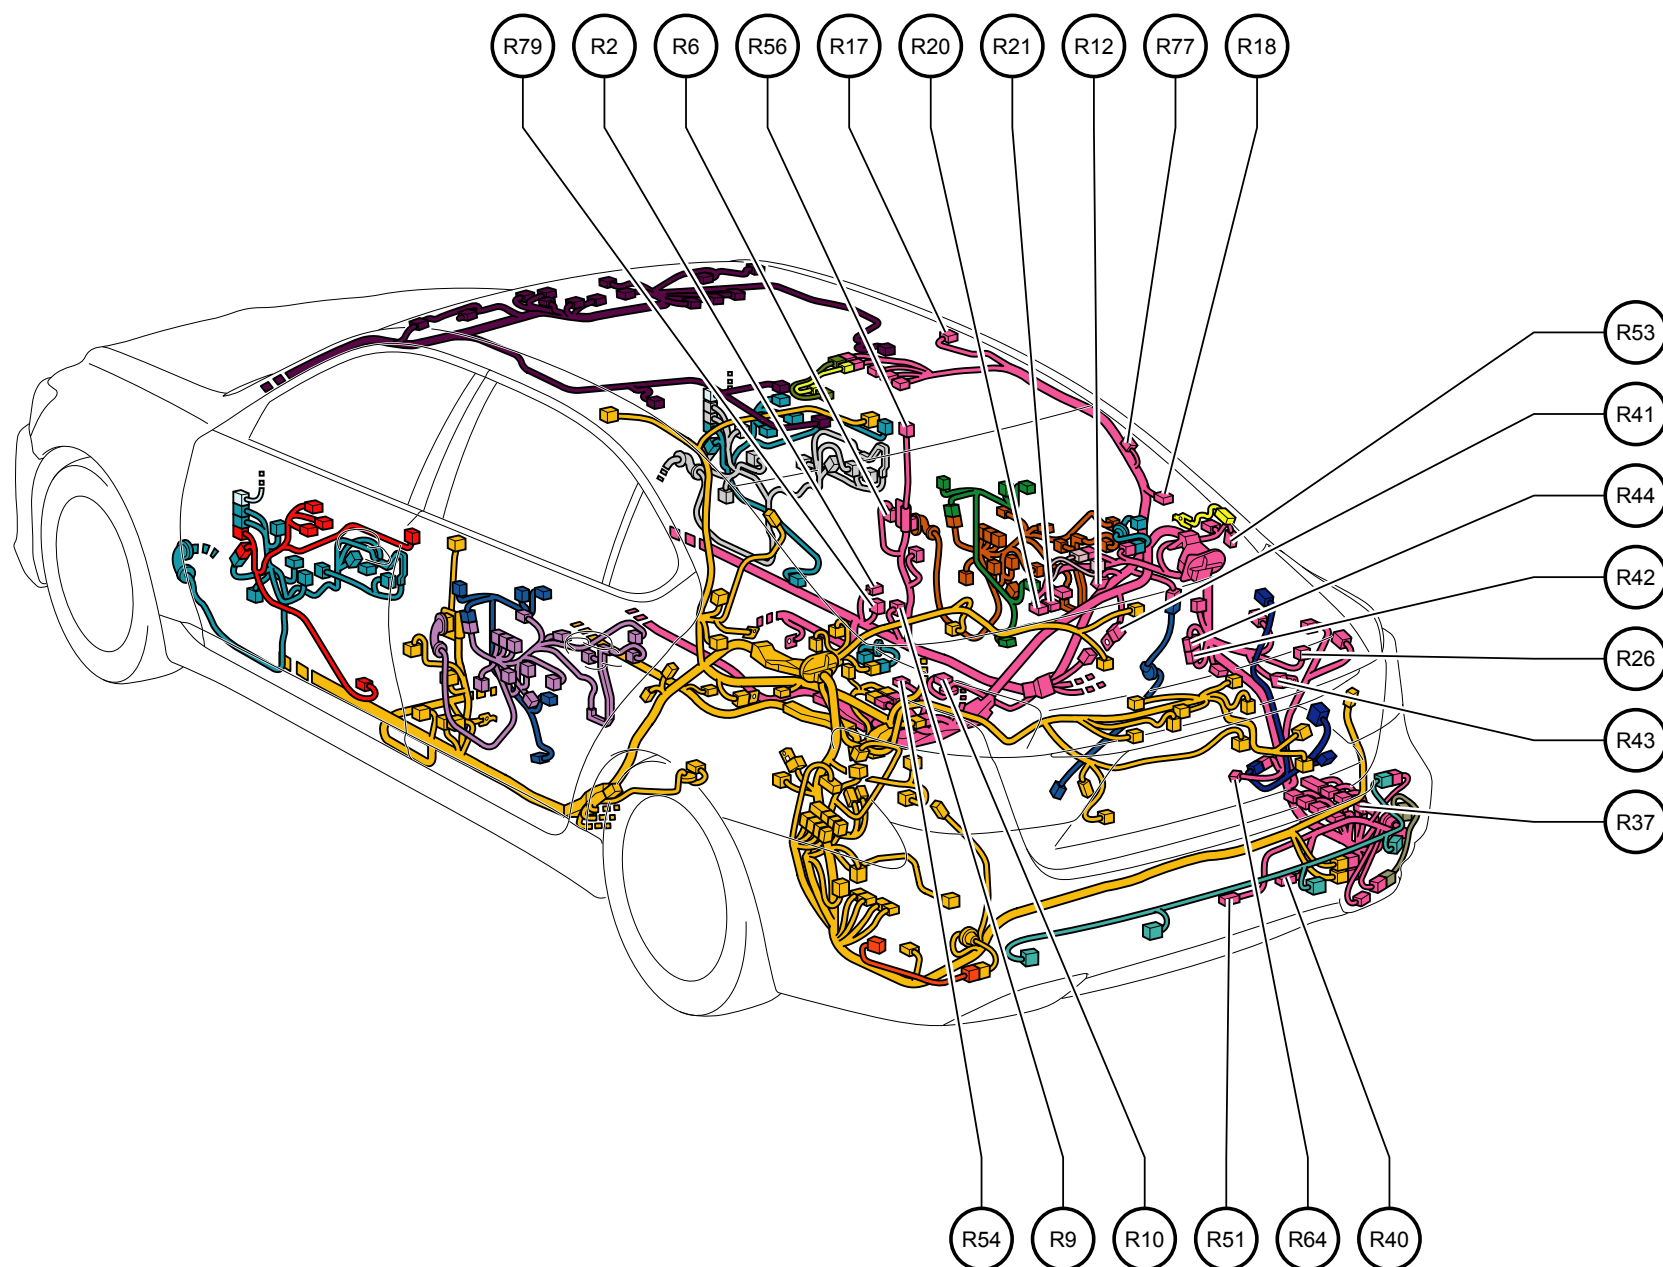

R 2 Front Pre-Crash Seat Belt Motor RH
R 6 Front Door Courtesy Switch RH
R 9 Front Tension Reducer RH
R 10 Fuel Sender Gauge (Sub)
R 12 Rear Door Courtesy Switch RH
R 17 Curtain Shield Airbag Squib Circuit RH
R 18 Rear Speaker RH
R 20 Woofer
R 21 Rear Clearance Warning Buzzer
R 26 Rear Acceleration Sensor
R 37 Door Control Receiver
R 40 Luggage Electrical Key Antenna (Outside)
R 41 Junction Connector
R 42 Junction Connector
R 43 Junction Connector
R 44 Junction Connector
R 51 Rear Center Millimeter Wave Radar Sensor
R 53 Rear Tension Reducer RH
R 54 Rear Seat Inner Belt Switch RH
R 56 Shoulder Belt Anchor RH
R 64 Rear Height Control Sensor RH , Rear Pad Wear Indicator Switch RH , Rear Speed Sensor RH
R 77 Electrical Key Antenna
R 79 Front Pretensioner RH

Position of Parts in Body <RHD From Sep. 2012 Production>

