 
 
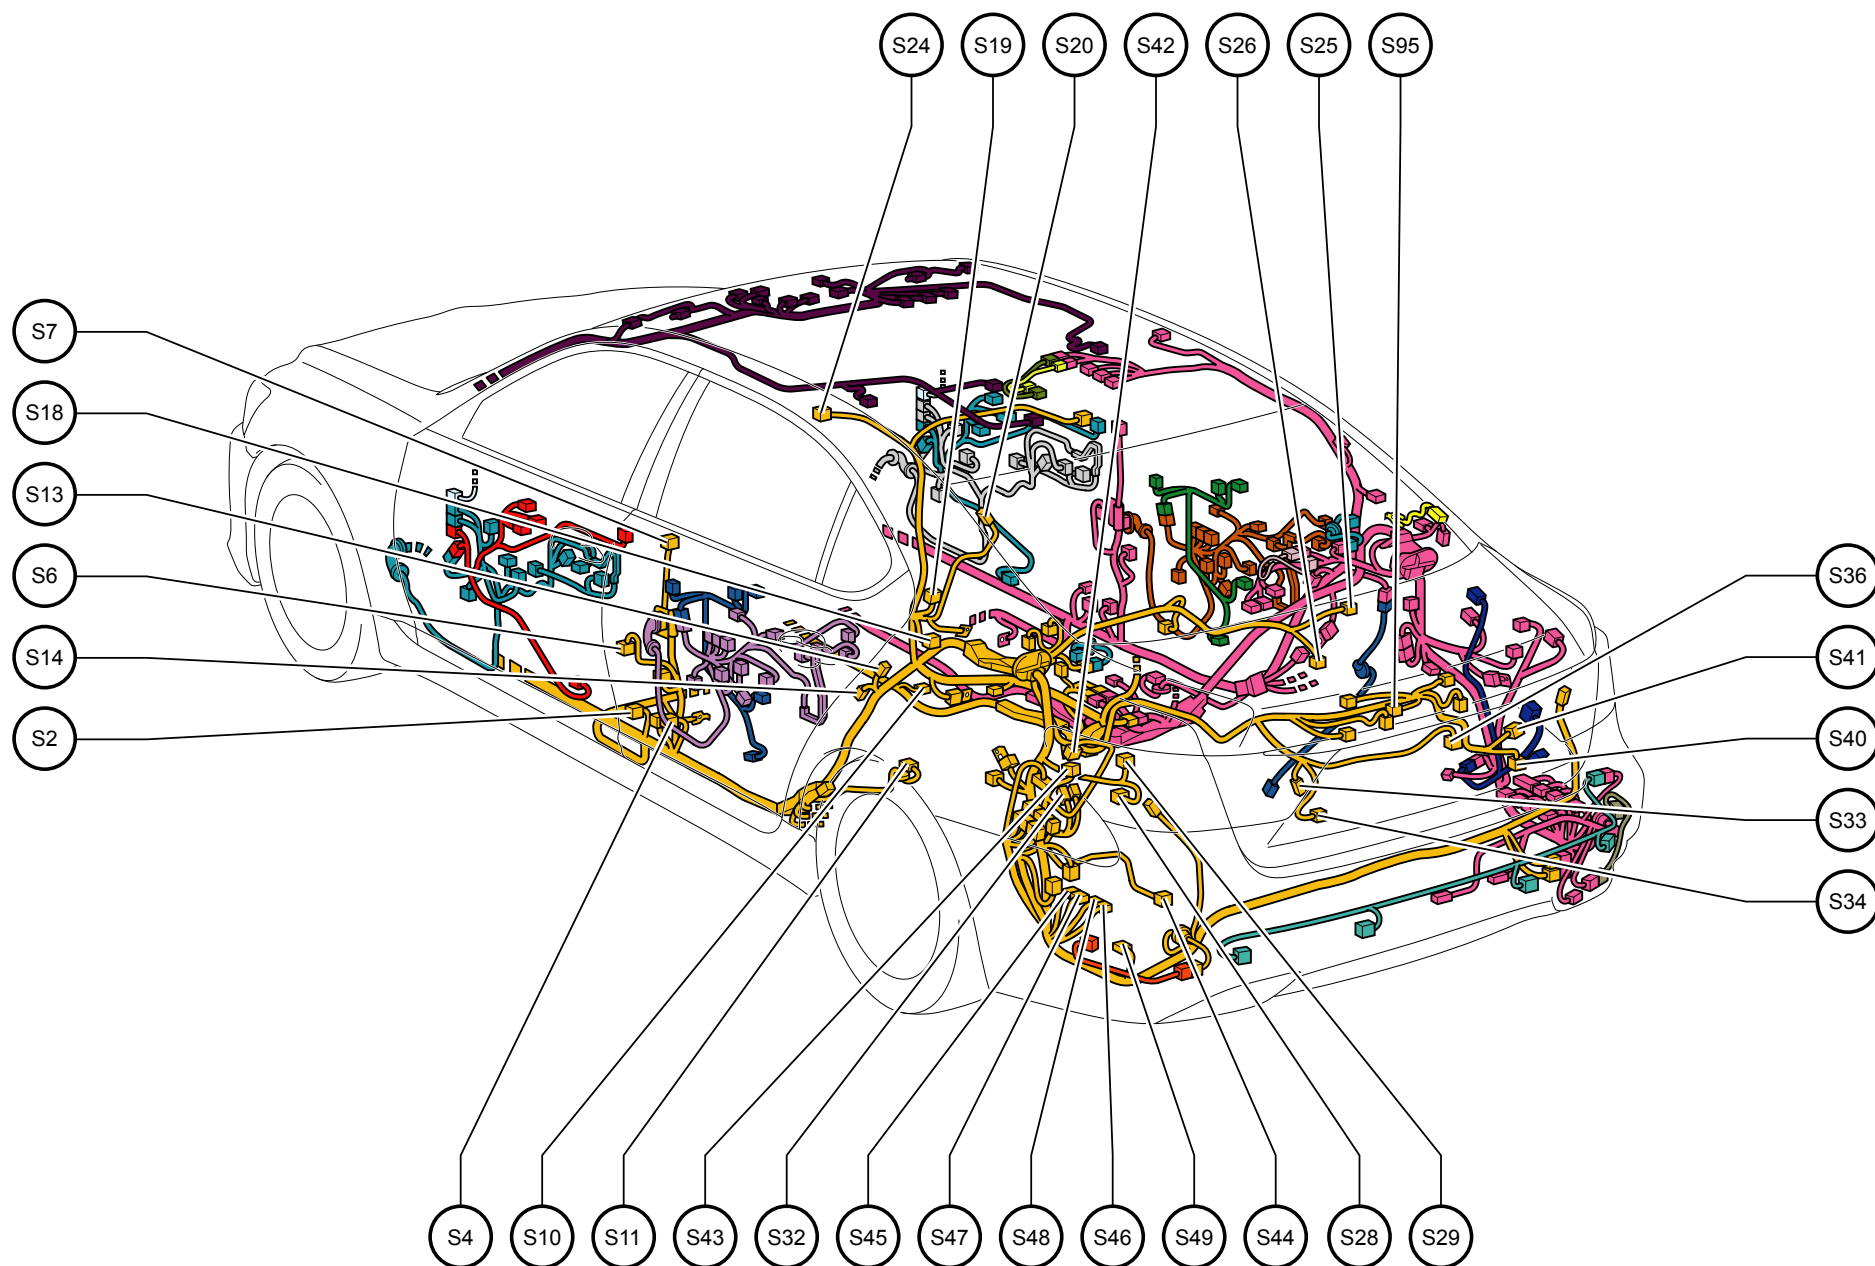 
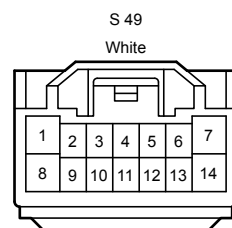 
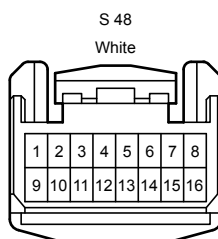 
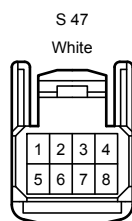 
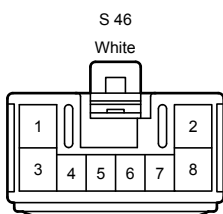 
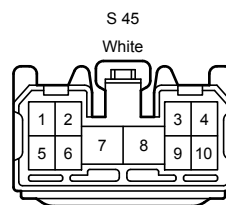 
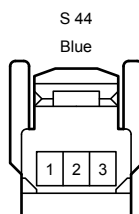 
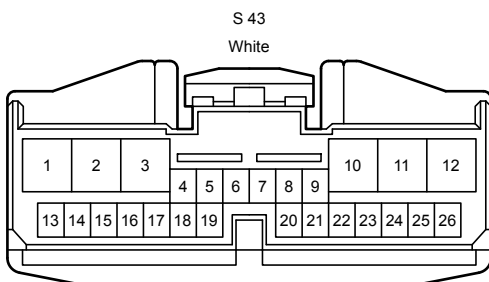 
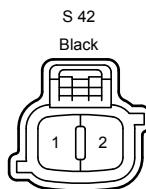 
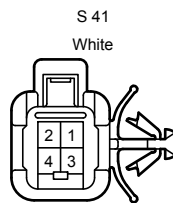 
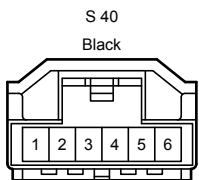 
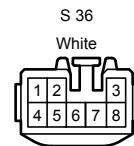 
 
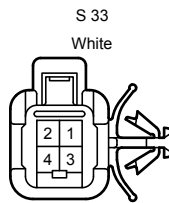 
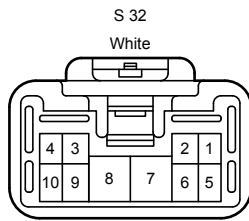 
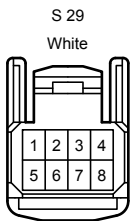 
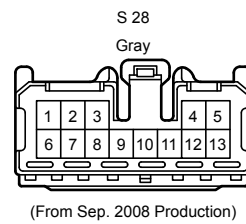 
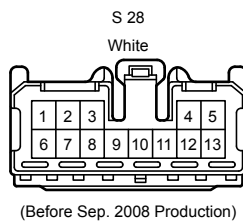 
 
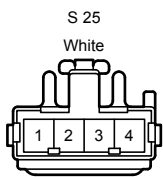 
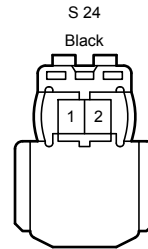 
 
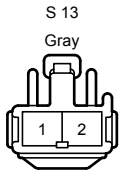 
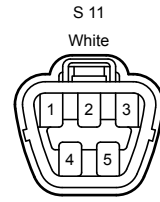 
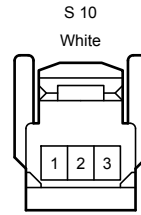 
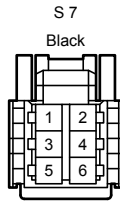 




S 2 Front Tension Reducer LH
S 4 Front Pre-Crash Seat Belt Motor LH
S 6 Front Door Courtesy Switch LH
S 7 Shoulder Belt Anchor LH
S 10 Electrical Key Oscillator (Rear)
S 11 Fuel Sender Gauge
S 13 Noise Filter (High Mounted Stop Light)
S 14 Rear Door Courtesy Switch LH
S 18 Rear Speaker LH
S 19 Noise Filter (Rear Window Defogger)
S 20 High Mounted Stop Light
S 24 Curtain Shield Airbag Squib Circuit LH
S 25 Rear Sunshade
S 26 Luggage Room Light
S 28 Rear A/C Blower Assembly
S 29 Seat Vibration ECU
S 32 Parking Brake Actuator
S 33 Rear Combination Light LH
S 34 Luggage Compartment Door Light
S 36 Luggage Closer Motor
S 40 Power Trunk Lid Switch
S 41 Rear Combination Light RH
S 42 Fuel Lid Opener Motor
S 43 Power Trunk Lid Control ECU
S 44 Luggage Electrical Key Antenna (Inner)
S 45 Seat Belt Control ECU
S 46 Parking Brake ECU
S 47 Seat Belt Control ECU
S 48 Parking Brake ECU
S 49 Brake Control Power Supply
S 95 Junction Connector

Position of Parts in Body <RHD From Sep. 2012 Production>



S 95

Black

