


























Position of Parts in Seat <LHD Front Seat Before Sep. 2012 Production>

- * 1:w/ Ottoman
- * 2:w/o Ottoman
- * 5:Before Sep. 2009 Production

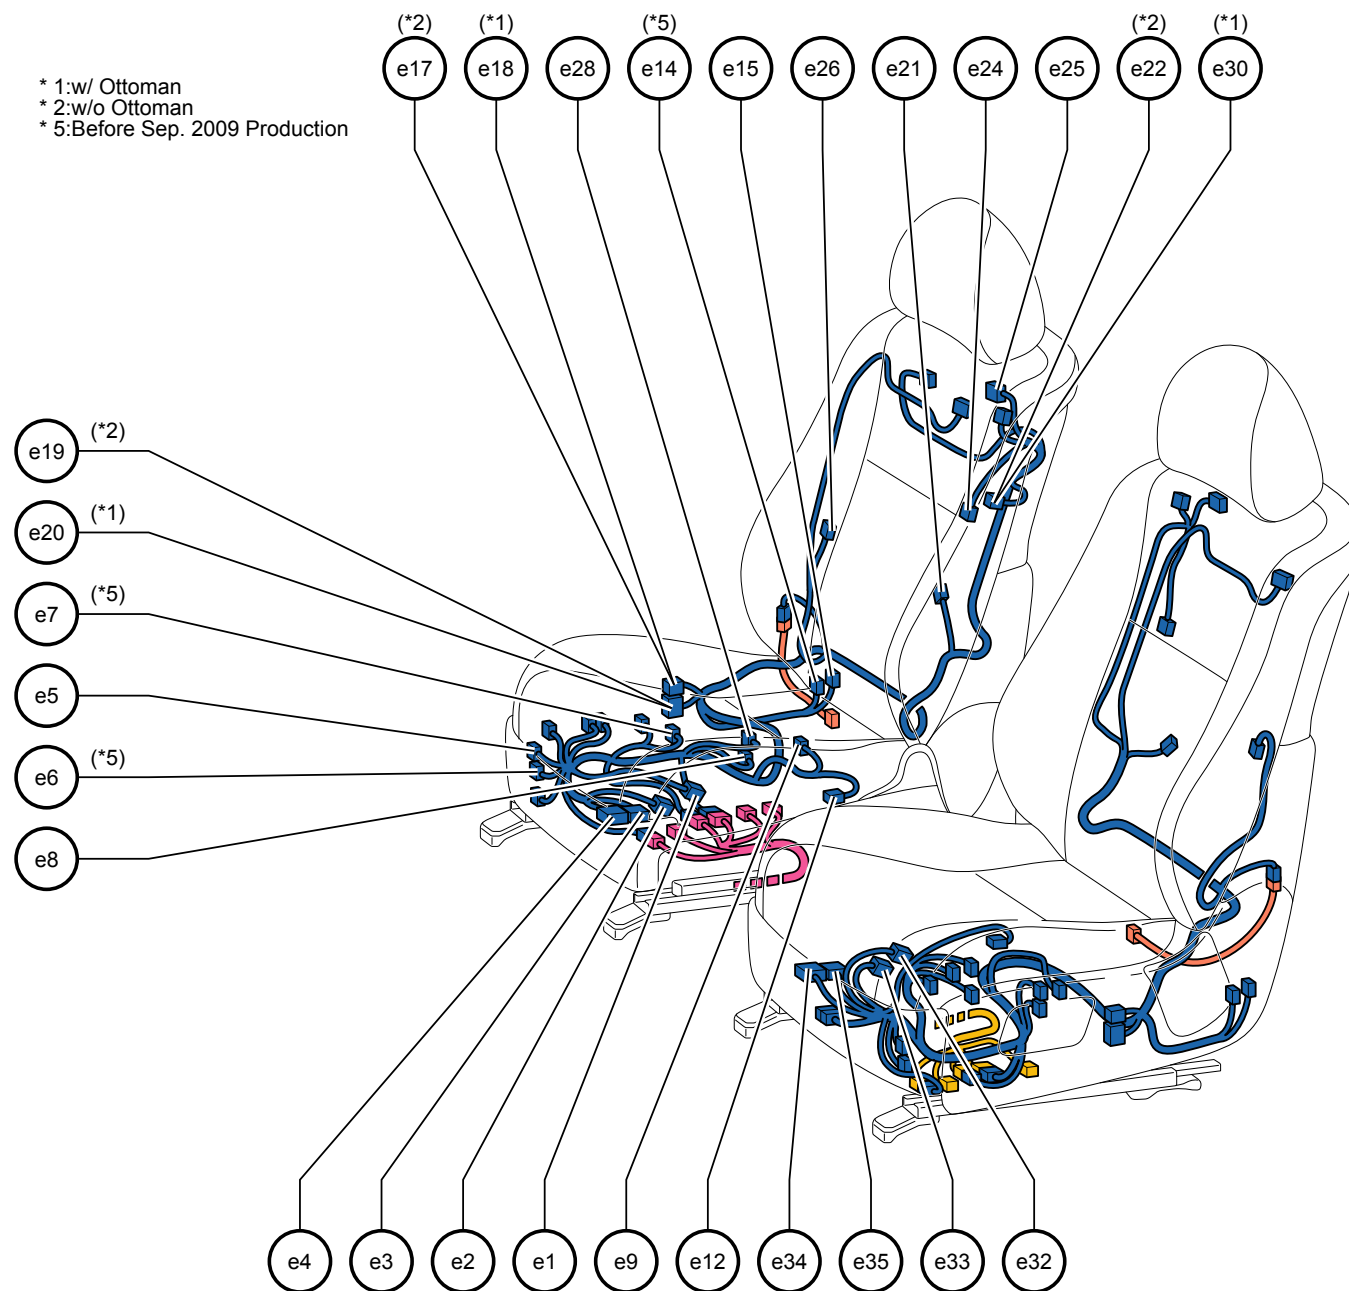

- e 1 Front Seat Climate Fan Motor RH (Seat Cushion)
- e 2 Front Seat Climate Controller RH (Seat Cushion)
- e 3 Front Seat Climate Control ECU RH
- e 4 Front Seat Climate Control ECU RH
- e 5 Front Power Seat Position Sensor RH (Slide Position)
- e 6 Front Power Seat Position Motor RH (Slide Position)
- e 7 Front Power Seat Position Motor RH (Vertical Position)
- e 8 Front Power Seat Position Motor RH (Lift Position)
- e 9 Front Seat Heater RH
- e 12 Front Seat Inner Belt Switch RH
- e 14 Front Power Seat Position Motor RH (Reclining Position)
- e 15 Front Power Seat Position Sensor RH (Reclining Position)
- e 17 Front Power Seat Switch RH
- e 18 Front Power Seat Control ECU and Switch RH
- e 19 Front Power Seat Switch RH
- e 20 Front Power Seat Control ECU and Switch RH
- e 21 Front Seat Climate Controller RH (Seat Back)
- e 22 Front Power Seat Switch
- e 24 Front Lumbar Support Motor (Forward-Back)
- e 25 Front Headrest Motor and Position Sensor RH
- e 26 Front Headrest Motor RH
- e 28 Front Power Seat Position Sensor RH (Lift Position)
- e 30 Front Power Seat Switch
- e 32 Front Seat Climate Fan Motor LH (Seat Cushion)
- e 33 Front Seat Climate Controller LH (Seat Cushion)
- e 34 Front Seat Climate Control ECU LH
- e 35 Front Seat Climate Control ECU LH

        Position of Parts in Seat <LHD Front Seat Before Sep. 2012 Production>

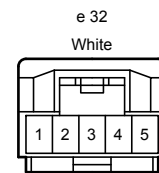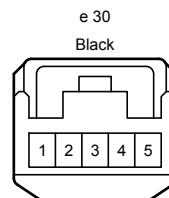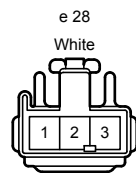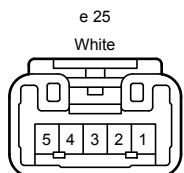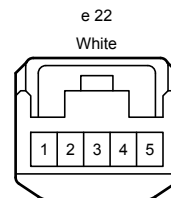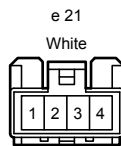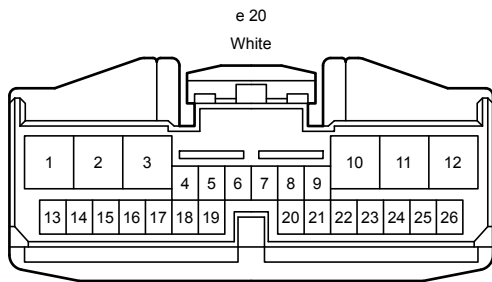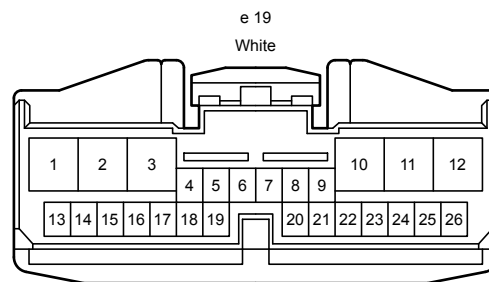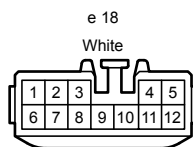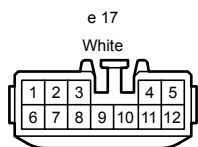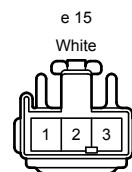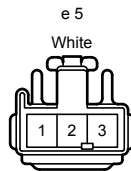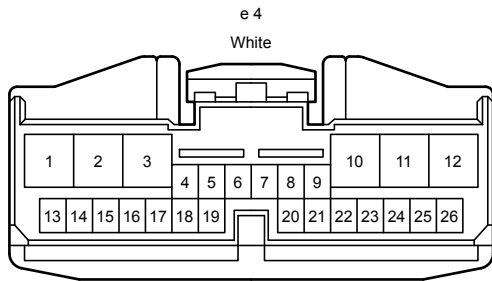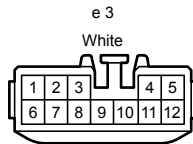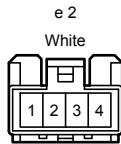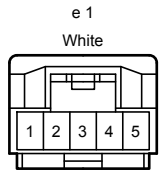

Position of Parts in Seat <LHD Front Seat Before Sep. 2012 Production>

