


Position of Parts in Seat <LHD Front Seat Before Sep. 2012 Production>

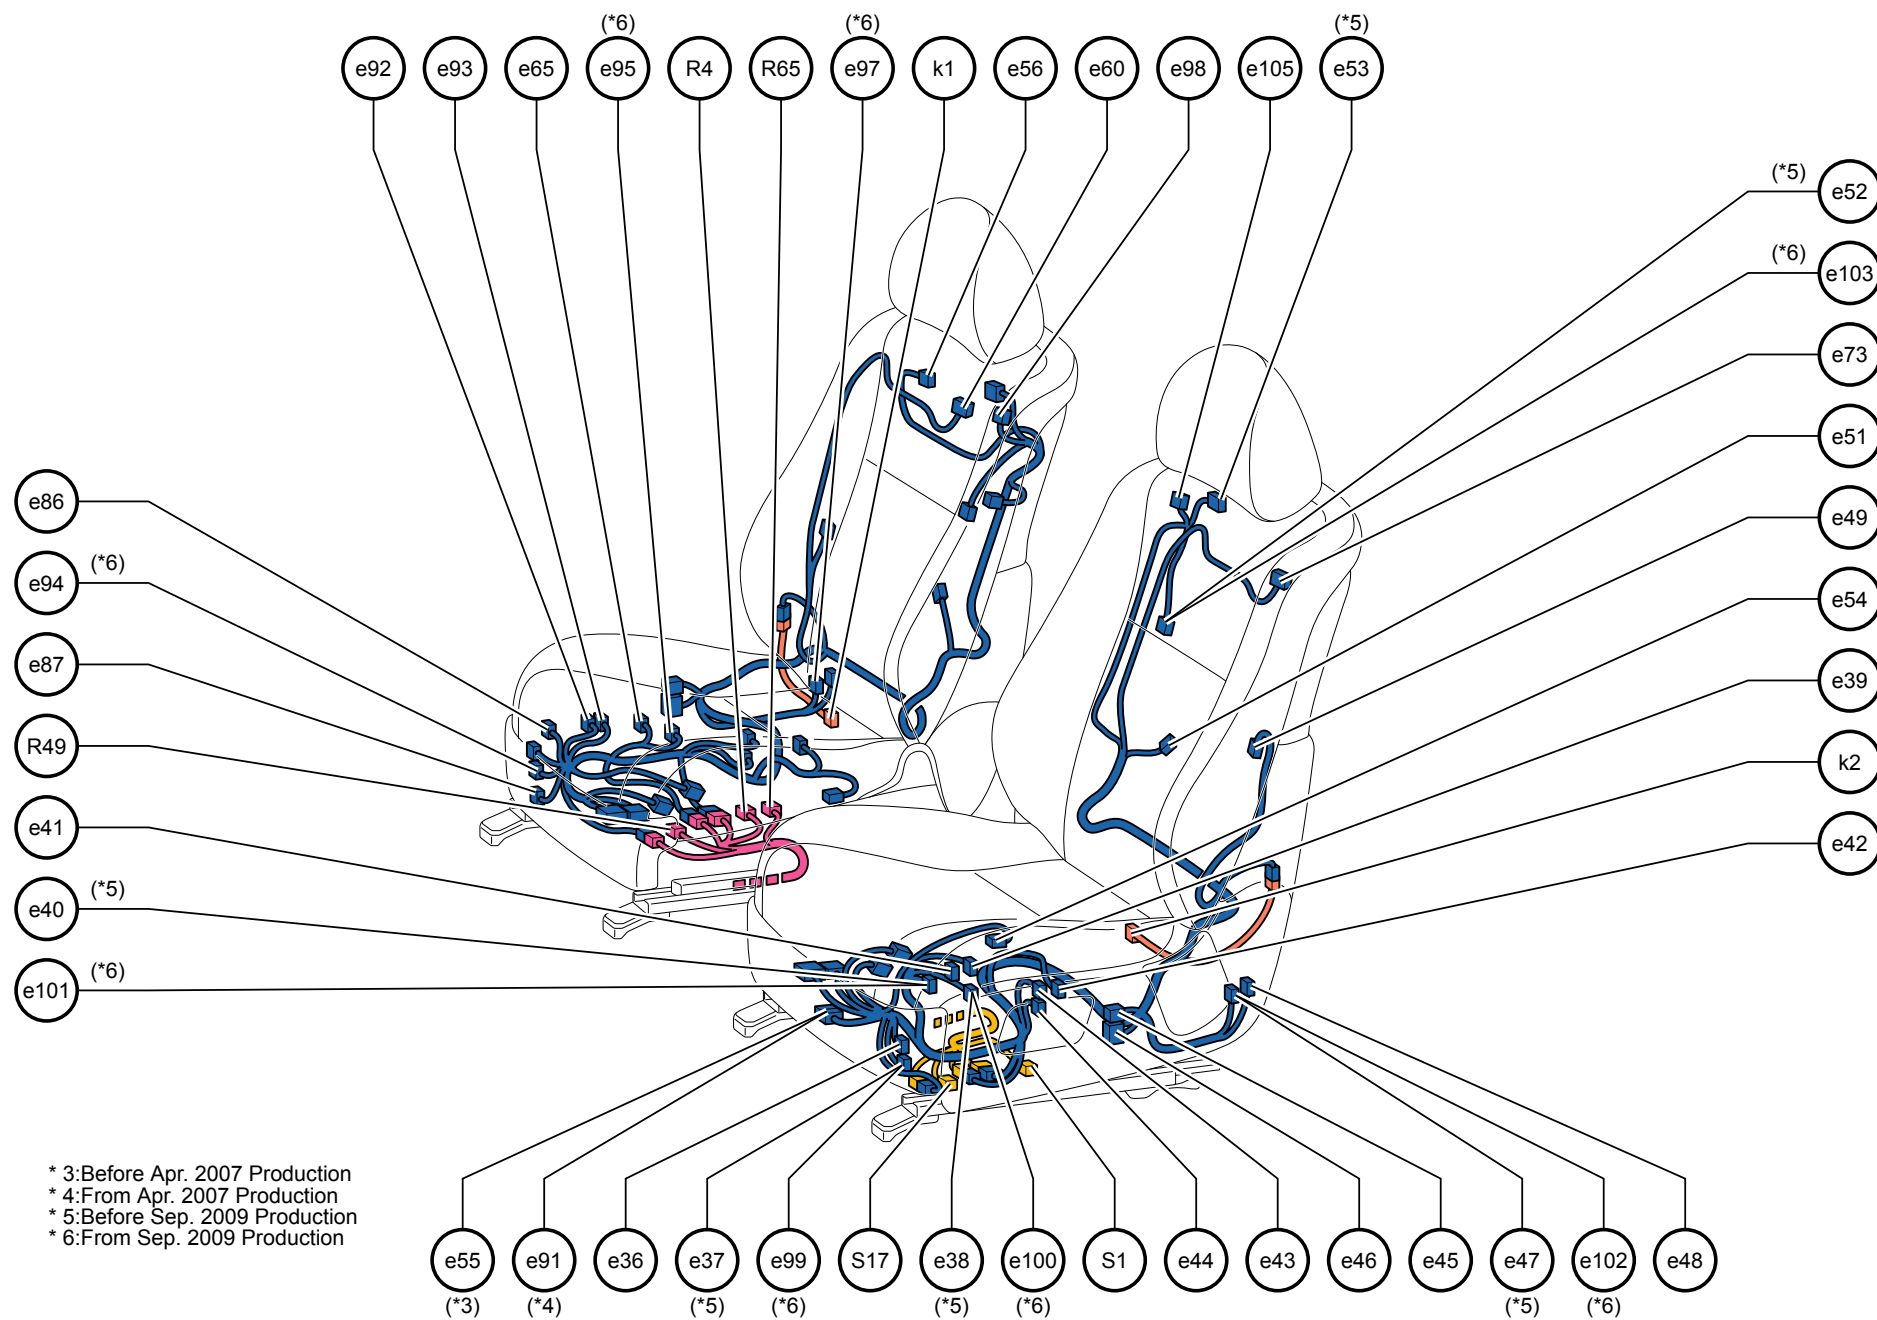










 

 

 


 

 

 

 
 




- R 4 Front Side Airbag Squib Circuit RH
- R 49 Front Seat Inner Belt Switch RH
- R 65 Junction Connector

- S 1 Front Side Airbag Squib Circuit LH
- S 17 Front Seat Inner Belt Switch LH

- e 36 Front Power Seat Position Sensor LH (Slide Position)
- e 37 Front Power Seat Position Motor LH (Slide Position)
- e 38 Front Power Seat Position Motor LH (Vertical Position)
- e 39 Front Power Seat Position Sensor LH (Vertical Position)
- e 40 Front Power Seat Cushion Control Motor LH
- e 41 Front Power Seat Cushion Position Sensor LH
- e 42 Front Seat Heater LH
- e 43 Front Power Seat Position Sensor LH (Lift Position)
- e 44 Front Power Seat Position Motor LH (Lift Position)
- e 45 Front Power Seat Control ECU and Switch LH
- e 46 Front Power Seat Control ECU and Switch LH
- e 47 Front Power Seat Position Motor LH (Reclining Position)
- e 48 Front Power Seat Position Sensor LH (Reclining Position)
- e 49 Front Lumbar Support Motor (Up-Down)
- e 51 Front Seat Climate Controller LH (Seat Back)
- e 52 Front Lumbar Support Motor (Forward-Back)
- e 53 Front Headrest Motor LH
- e 54 Front Seat Inner Belt Switch LH
- e 55 Junction Connector
- e 56 Front Headrest Position Sensor RH
- e 60 Active Headrest Control ECU RH
- e 65 Front Power Seat Position Sensor RH (Vertical Position)
- e 73 Active Headrest Control ECU LH
- e 86 Junction Connector
- e 87 Junction Connector
- e 91 Junction Connector
- e 92 Junction Connector
- e 93 Junction Connector
- e 94 Front Power Seat Position Motor and Sensor RH (Slide Position)
- e 95 Front Power Seat Position Motor and Sensor RH (Vertical Position)
- e 97 Front Power Seat Position Motor and Sensor RH (Reclining Position)
- e 98 Active Headrest Airbag Squib Circuit RH
- e 99 Front Power Seat Position Motor and Sensor LH (Slide Position)
- e 100 Front Power Seat Position Motor and Sensor LH (Vertical Position)
- e 101 Front Power Seat Cushion Control Motor and Sensor LH
- e 102 Front Power Seat Position Motor and Sensor LH (Reclining Position)
- e 103 Front Lumbar Support Motor (Forward-Back)
- e 105 Active Headrest Airbag Squib Circuit LH

- k 1 Rear Footwell Light RH
- k 2 Rear Footwell Light LH

Position of Parts in Seat <LHD Front Seat Before Sep. 2012 Production>

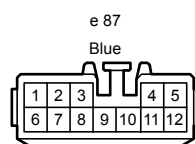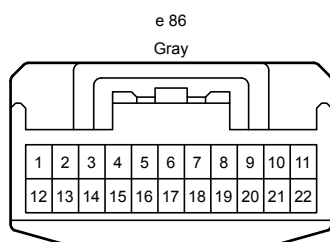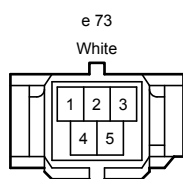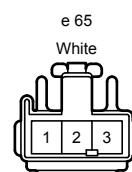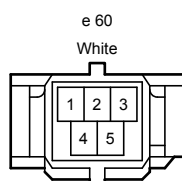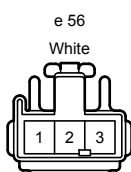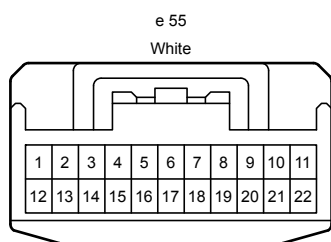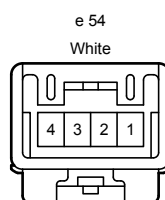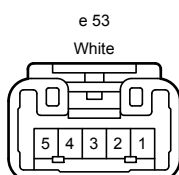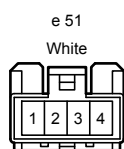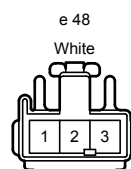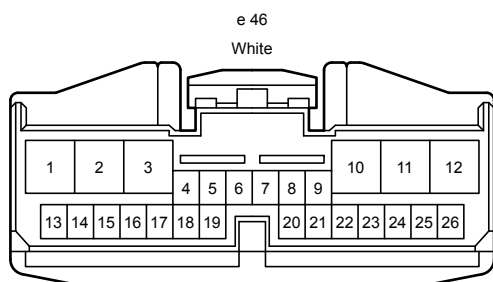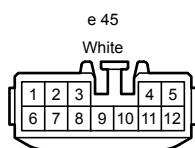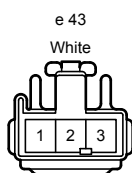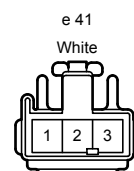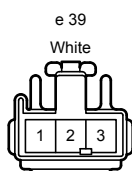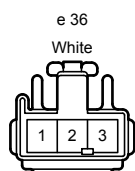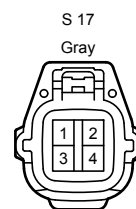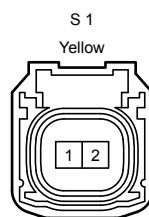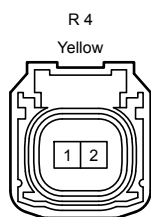

Position of Parts in Seat <LHD Front Seat Before Sep. 2012 Production>

