


Position of Parts in Seat <RHD Front Seat Before Sep. 2012 Production>

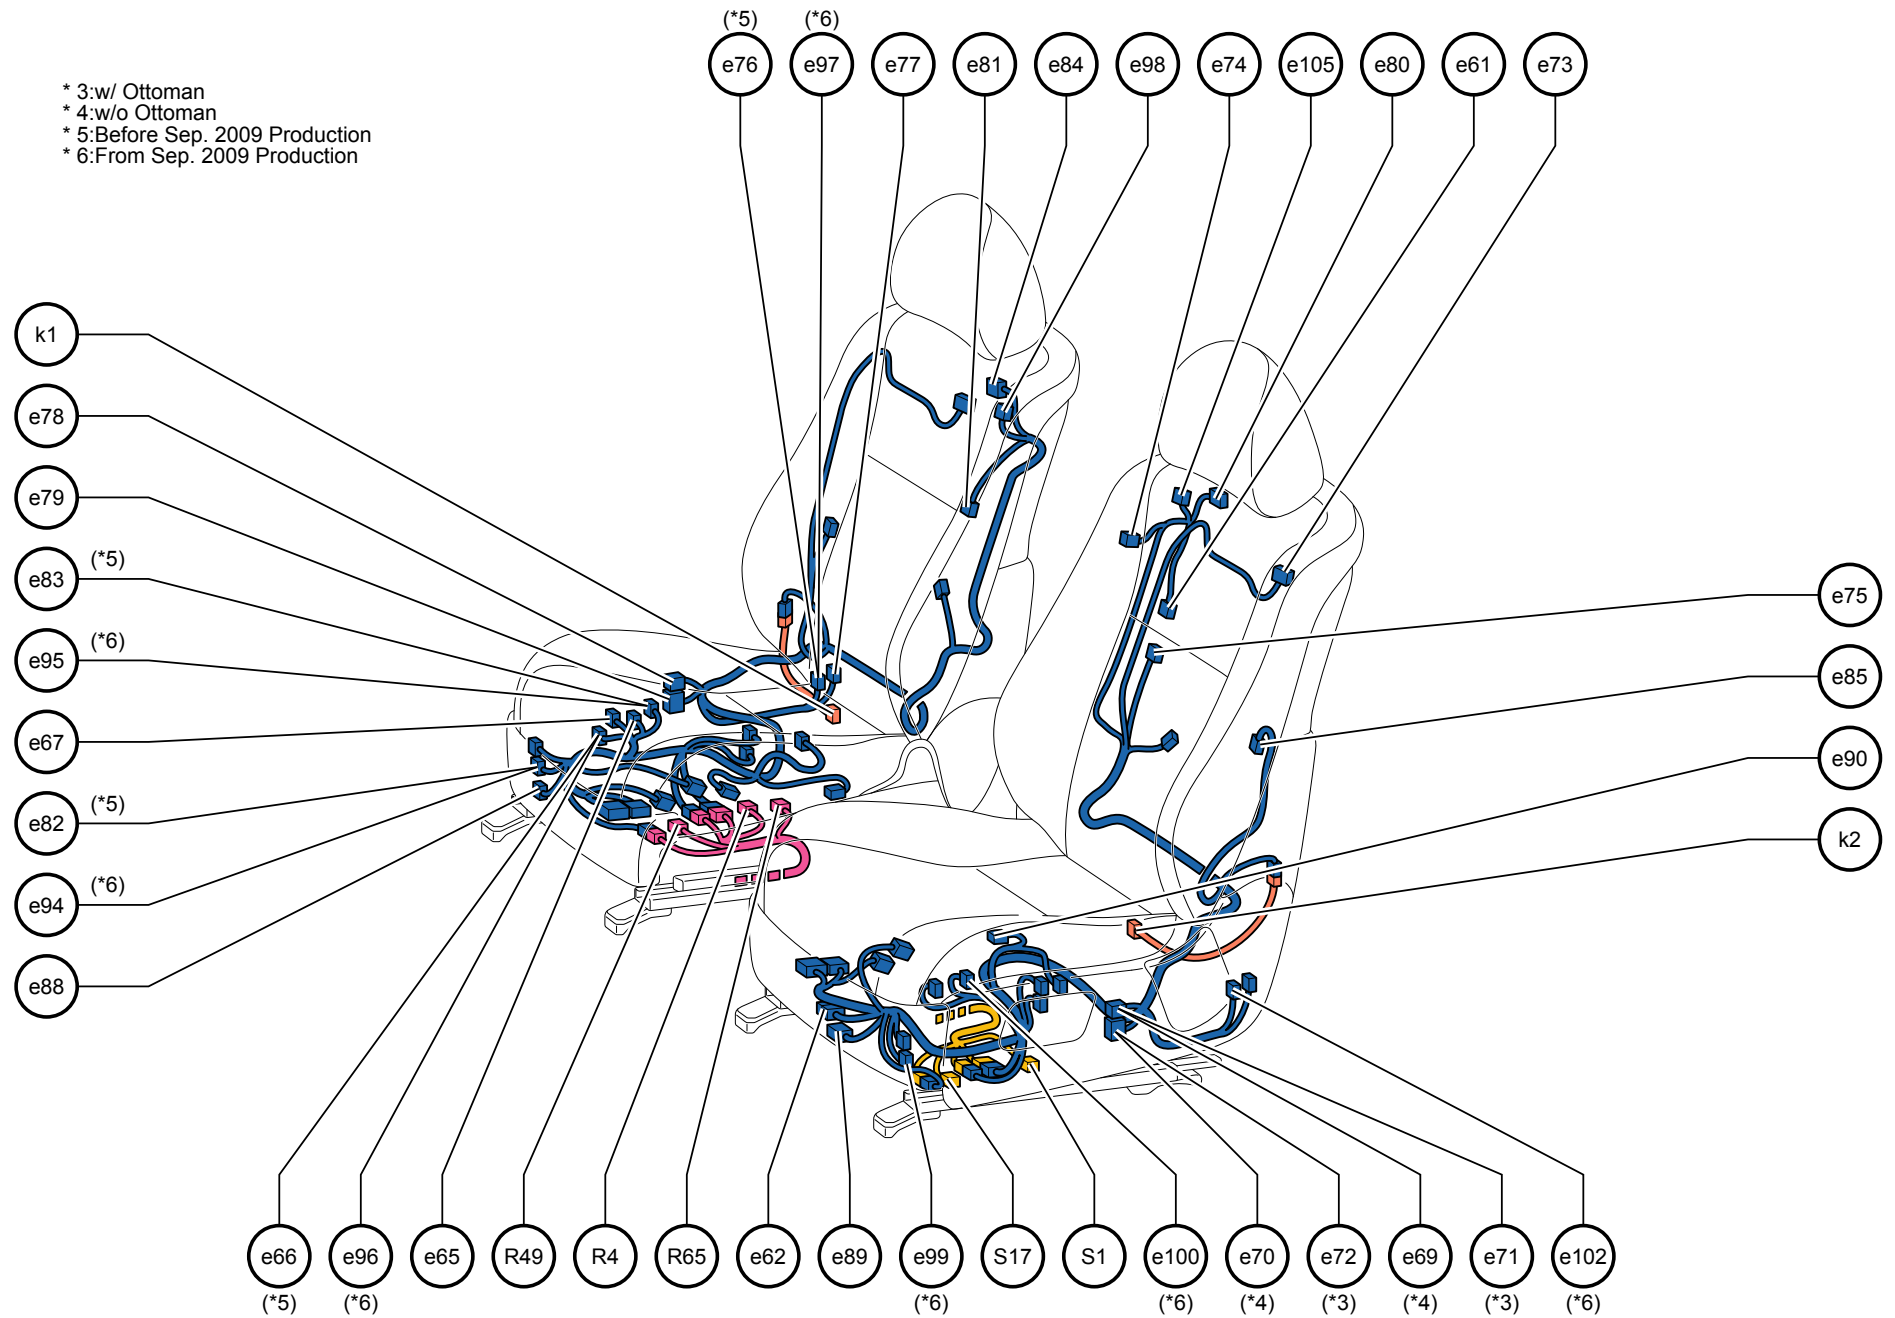

 
 




 
 







 





- R 4 Front Side Airbag Squib Circuit RH
- R 49 Front Seat Inner Belt Switch RH
- R 65 Junction Connector

- S 1 Front Side Airbag Squib Circuit LH
- S 17 Front Seat Inner Belt Switch LH

- e 61 Front Headrest Motor and Position Sensor LH
- e 62 Junction Connector
- e 65 Front Power Seat Position Sensor RH (Vertical Position)
- e 66 Front Power Seat Cushion Control Motor RH
- e 67 Front Power Seat Cushion Position Sensor RH
- e 69 Front Power Seat Switch LH
- e 70 Front Power Seat Switch LH
- e 71 Front Power Seat Control ECU and Switch LH
- e 72 Front Power Seat Control ECU and Switch LH
- e 73 Active Headrest Control ECU LH
- e 74 Front Power Seat Switch
- e 75 Front Headrest Motor LH
- e 76 Front Power Seat Position Motor RH (Reclining Position)
- e 77 Front Power Seat Position Sensor RH (Reclining Position)
- e 78 Front Power Seat Control ECU and Switch RH
- e 79 Front Power Seat Control ECU and Switch RH
- e 80 Front Headrest Position Sensor LH
- e 81 Front Lumbar Support Motor (Forward-Back)
- e 82 Front Power Seat Position Motor RH (Slide Position)
- e 83 Front Power Seat Position Motor RH (Vertical Position)
- e 84 Front Headrest Motor and Position Sensor RH
- e 85 Front Lumbar Support Motor (Forward-Back)
- e 88 Junction Connector
- e 89 Junction Connector
- e 90 Front Seat Inner Belt Switch LH
- e 94 Front Power Seat Position Motor and Sensor RH (Slide Position)
- e 95 Front Power Seat Position Motor and Sensor RH (Vertical Position)
- e 96 Front Power Seat Cushion Control Motor and Sensor RH
- e 97 Front Power Seat Position Motor and Sensor RH (Reclining Position)
- e 98 Active Headrest Airbag Squib Circuit RH
- e 99 Front Power Seat Position Motor and Sensor LH (Slide Position)
- e 100 Front Power Seat Position Motor and Sensor LH (Vertical Position)
- e 102 Front Power Seat Position Motor and Sensor LH (Reclining Position)
- e 105 Active Headrest Airbag Squib Circuit LH

- k 1 Rear Footwell Light RH
- k 2 Rear Footwell Light LH

Position of Parts in Seat <RHD Front Seat Before Sep. 2012 Production>

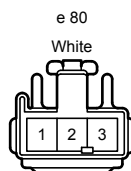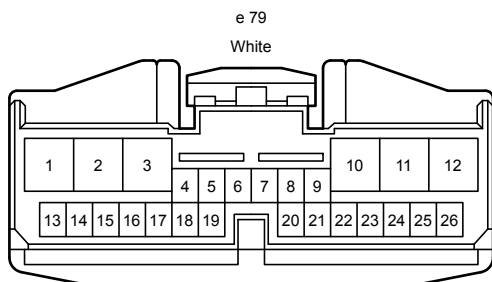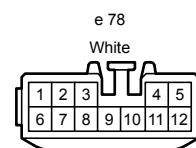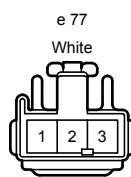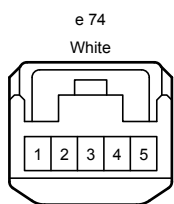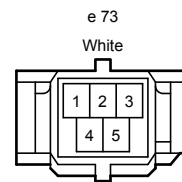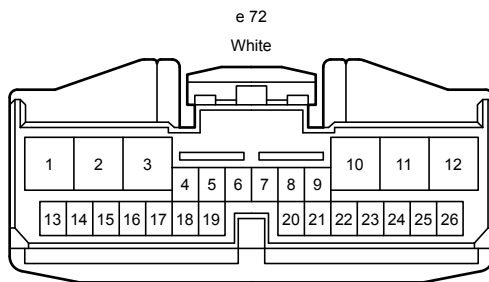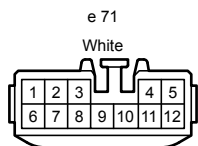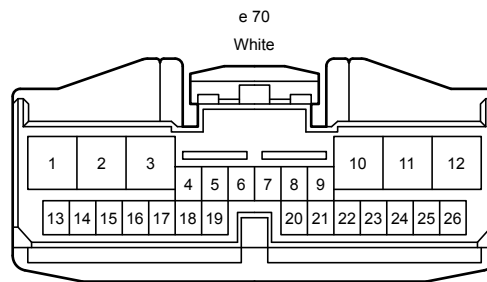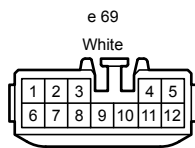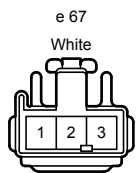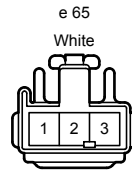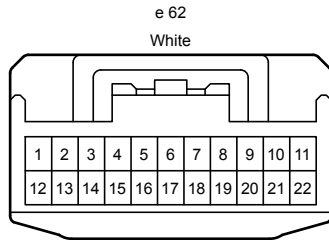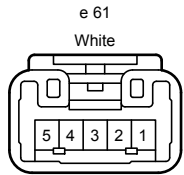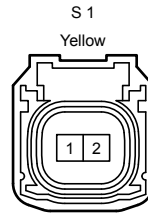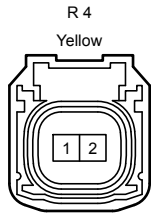

Position of Parts in Seat <RHD Front Seat Before Sep. 2012 Production>

