


Position of Parts in Seat <RHD Front Seat From Sep. 2012 Production>

* 3:w/ Calf Support
* 4:w/o Calf Support

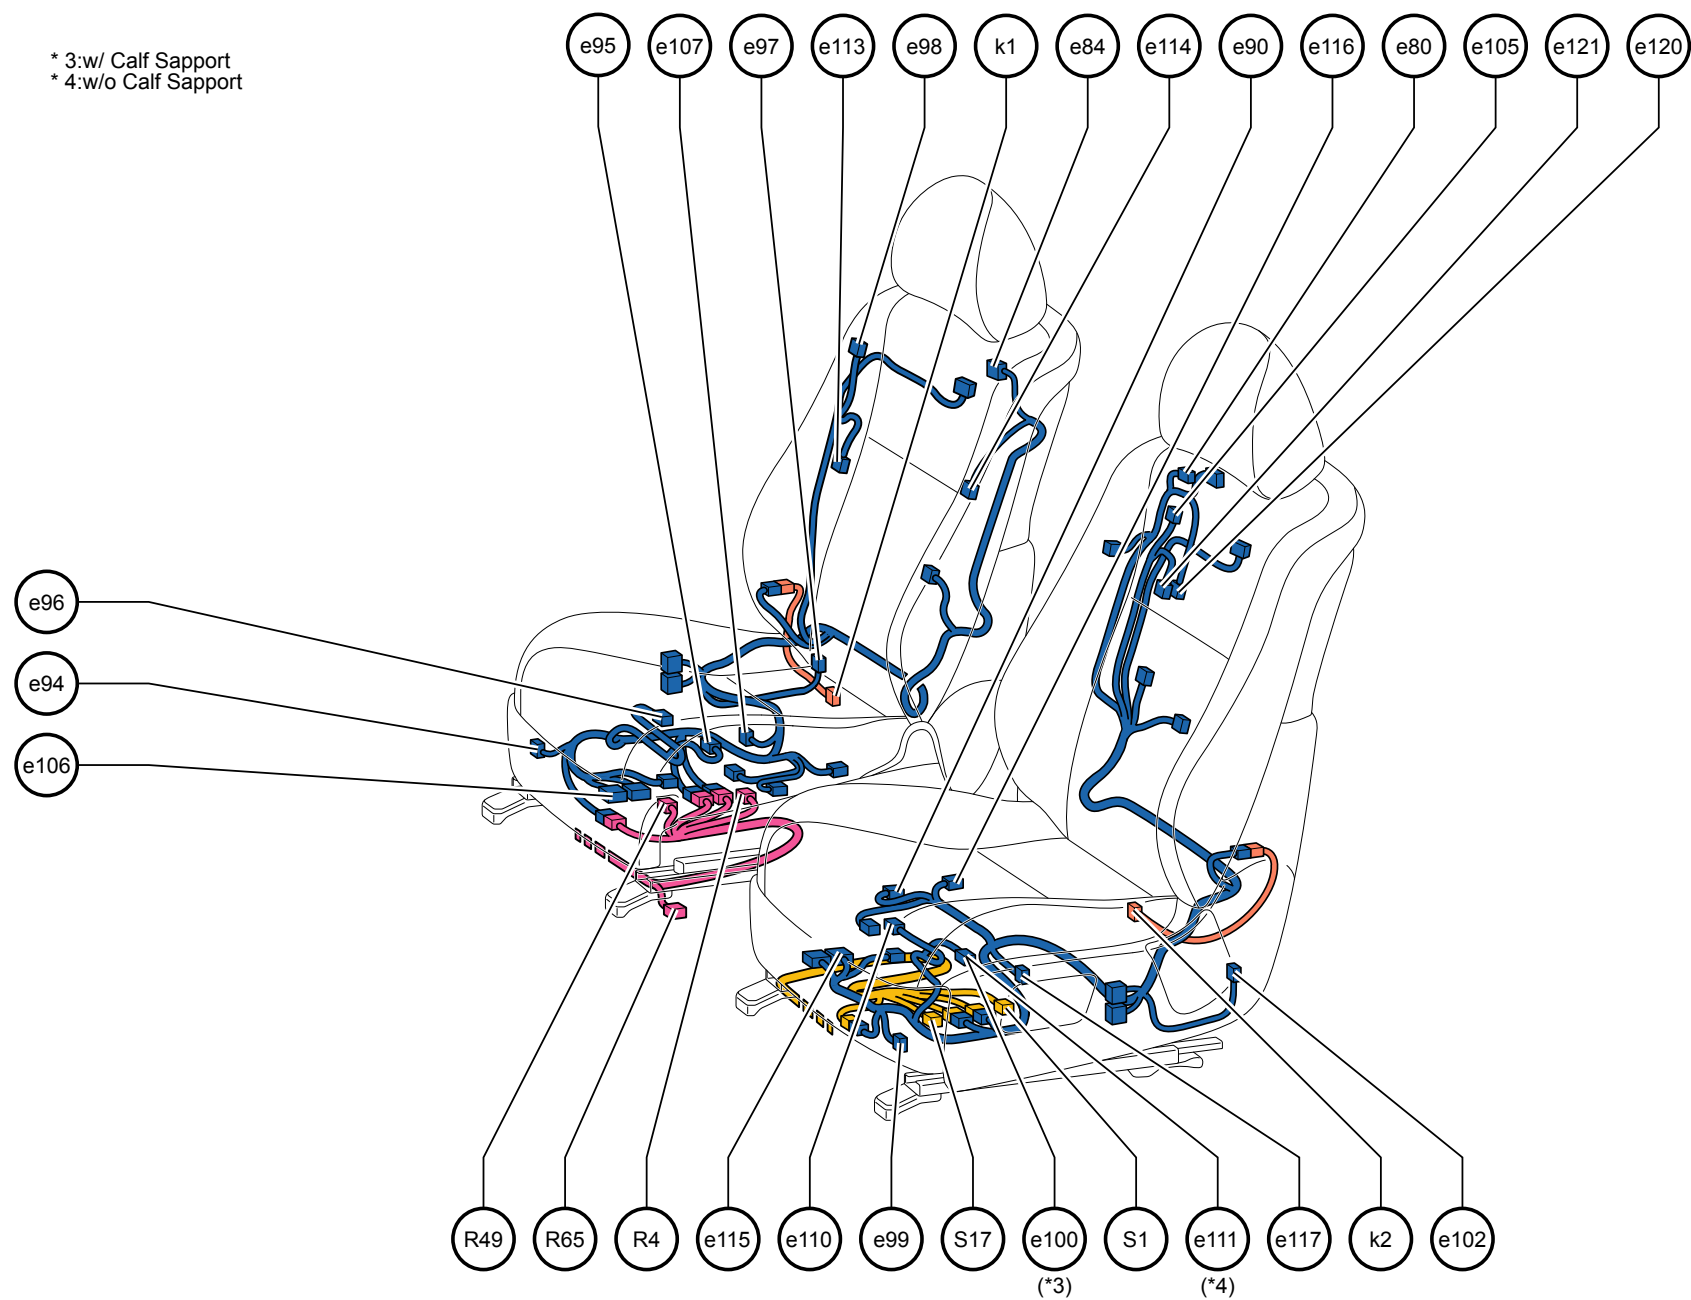

- R 4 Front Side Airbag Squib Circuit RH
- R 49 Front Seat Inner Belt Switch RH
- R 65 Junction Connector

- S 1 Front Side Airbag Squib Circuit LH
- S 17 Front Seat Inner Belt Switch LH

- e 80 Front Headrest Position Sensor LH
- e 84 Front Headrest Motor and Position Sensor RH
- e 90 Front Seat Inner Belt Switch LH
- e 94 Front Power Seat Position Motor and Sensor RH (Slide Position)
- e 95 Front Power Seat Position Motor and Sensor RH (Vertical Position)
- e 96 Front Power Seat Cushion Control Motor and Sensor RH
- e 97 Front Power Seat Position Motor and Sensor RH (Reclining Position)
- e 98 Active Headrest Airbag Squib Circuit RH
- e 99 Front Power Seat Position Motor and Sensor LH (Slide Position)
- e 100 Front Power Seat Position Motor and Sensor LH (Vertical Position)
- e 102 Front Power Seat Position Motor and Sensor LH (Reclining Position)
- e 105 Active Headrest Airbag Squib Circuit LH
- e 106 Front Seat Climate Control ECU RH
- e 107 Front Power Seat Position Motor RH (Lift Position)
- e 110 Front Power Seat Calf Support Motor LH
- e 111 Front Power Seat Vertical Position Sensor LH
- e 113 Front Lumbar Support Motor (Up-Down)
- e 114 Front Lumbar Support Motor (Forward-Back)
- e 115 Front Seat Climate Control ECU LH
- e 116 Front Seat Heater LH
- e 117 Front Power Seat Position Sensor LH (Lift Position)
- e 120 Front Lumbar Support Motor (Forward-Back)
- e 121 Front Lumbar Support Motor (Forward-Back)

- k 1 Rear Footwell Light RH
- k 2 Rear Footwell Light LH

Position of Parts in Seat <RHD Front Seat From Sep. 2012 Production>

