



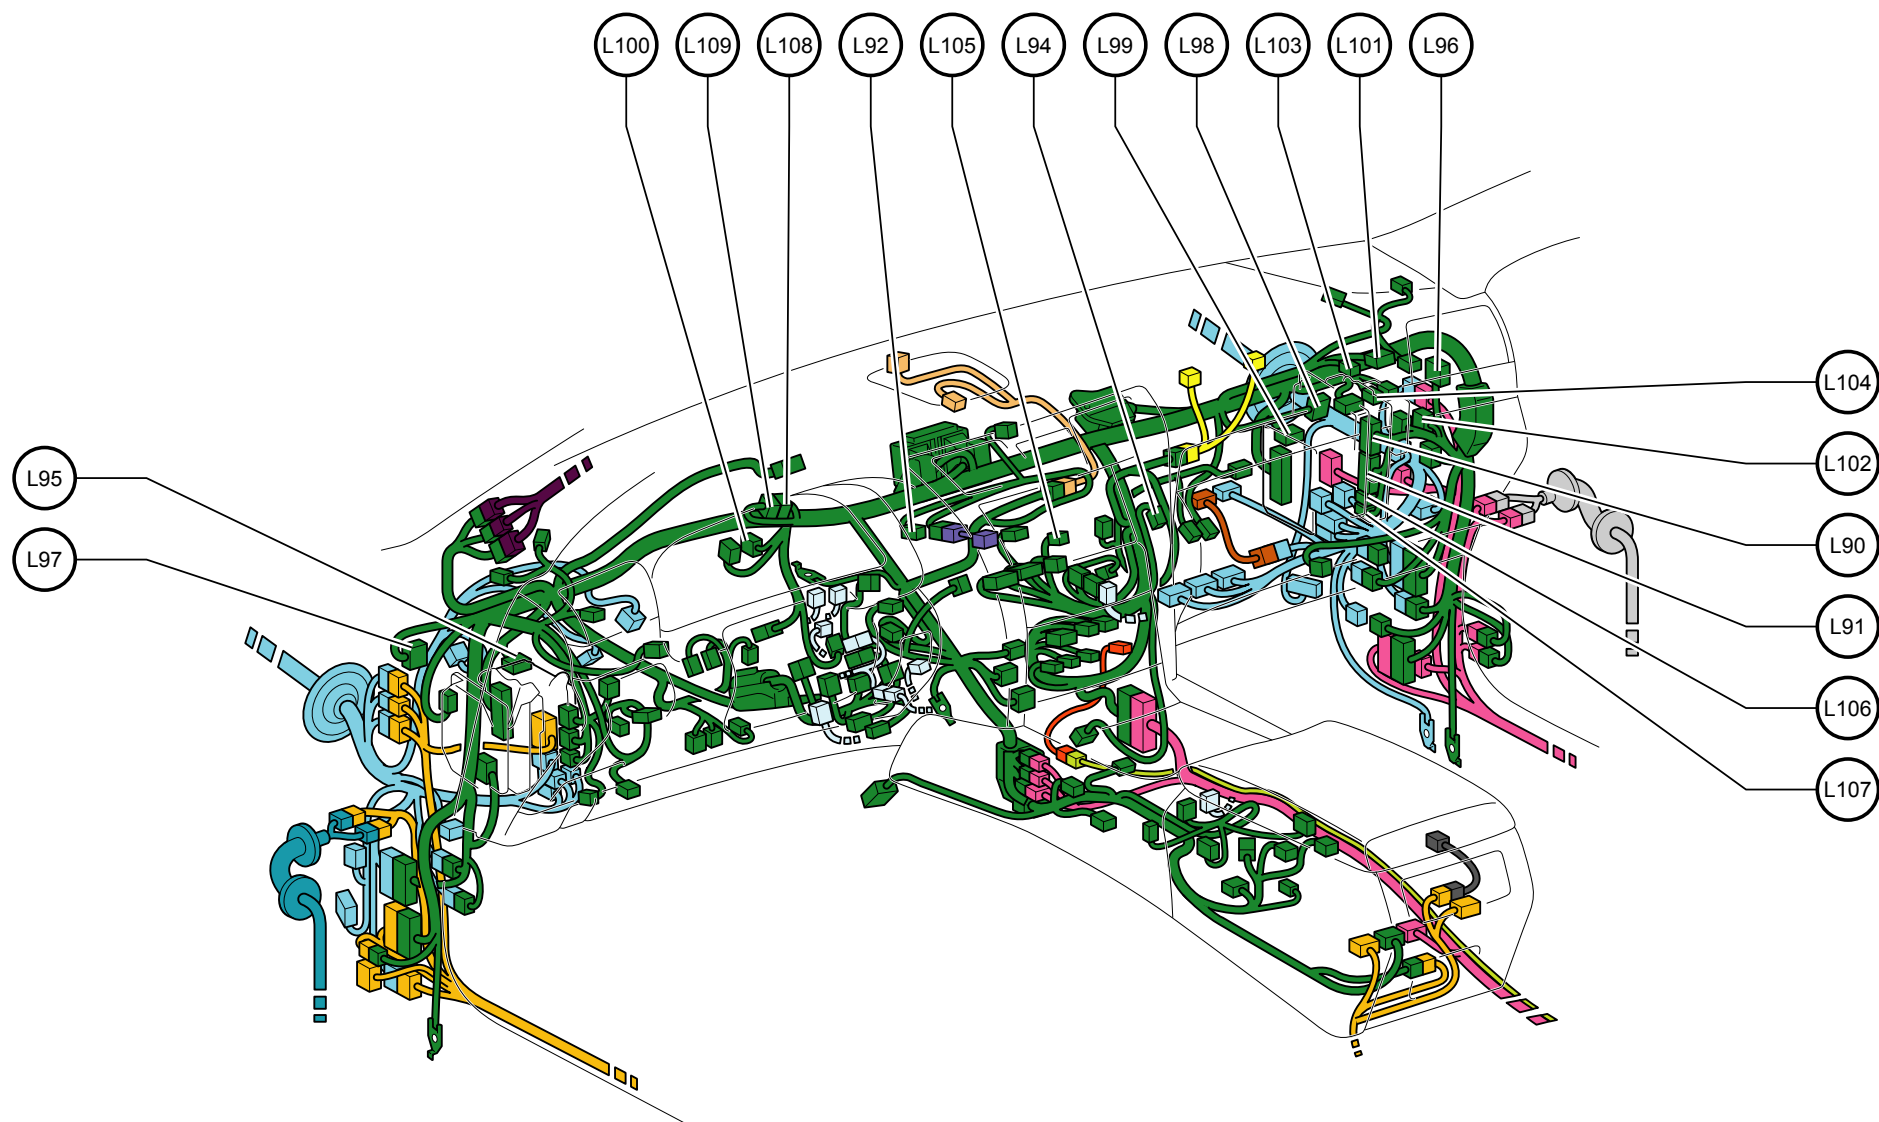


- L 90 Parking Assist ECU
- L 91 Parking Assist ECU
- L 92 Resistor Illumination (Center)
- L 94 Junction Connector
- L 95 Junction Connector
- L 96 Junction Connector
- L 97 Junction Connector
- L 98 Junction Connector
- L 99 Junction Connector
- L 100 Junction Connector
- L 101 Tire Pressure Warning ECU and Receiver
- L 102 Gateway ECU
- L 103 Tire Pressure Warning ECU and Receiver
- L 104 Navigation ECU
- L 105 Multi-Display
- L 106 Parking Assist ECU
- L 107 Parking Assist ECU
- L 108 Short Connector (Cigarette Lighter)
- L 109 Short Connector (Cigarette Lighter)

Position of Parts in Instrument Panel <LHD Before Sep. 2009 Production>


L 90
White

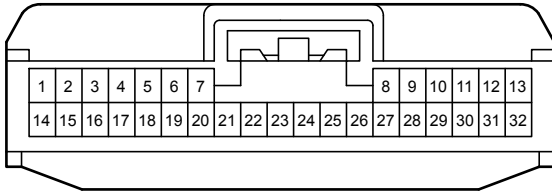


L 91
White

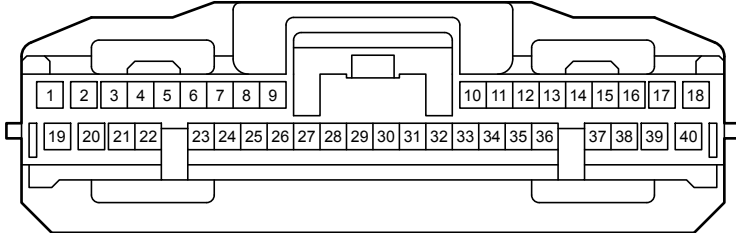


L 92
White

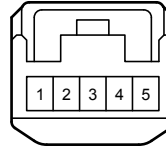


L 94
Black

 


L 95
Gray

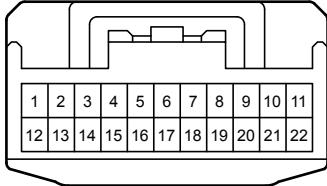


L 96
Black

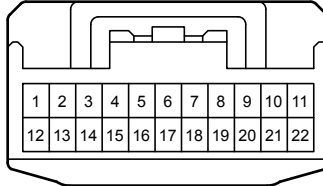


L 97
Black

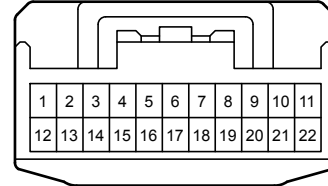


L 98
Gray

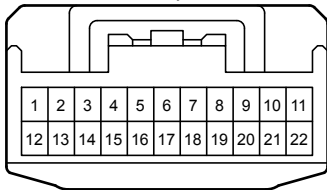


L 99
Black

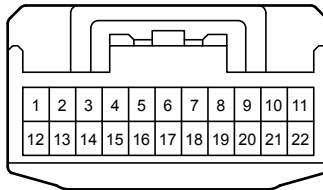


L100
Blue

 


L101
White

 


L102
White

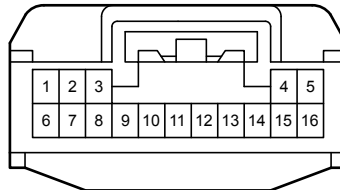

L103
Blue

 


L104
White

 


L105
Blue



 L106
Blue



L107
White

 

L108
White



L109
White

