
 
 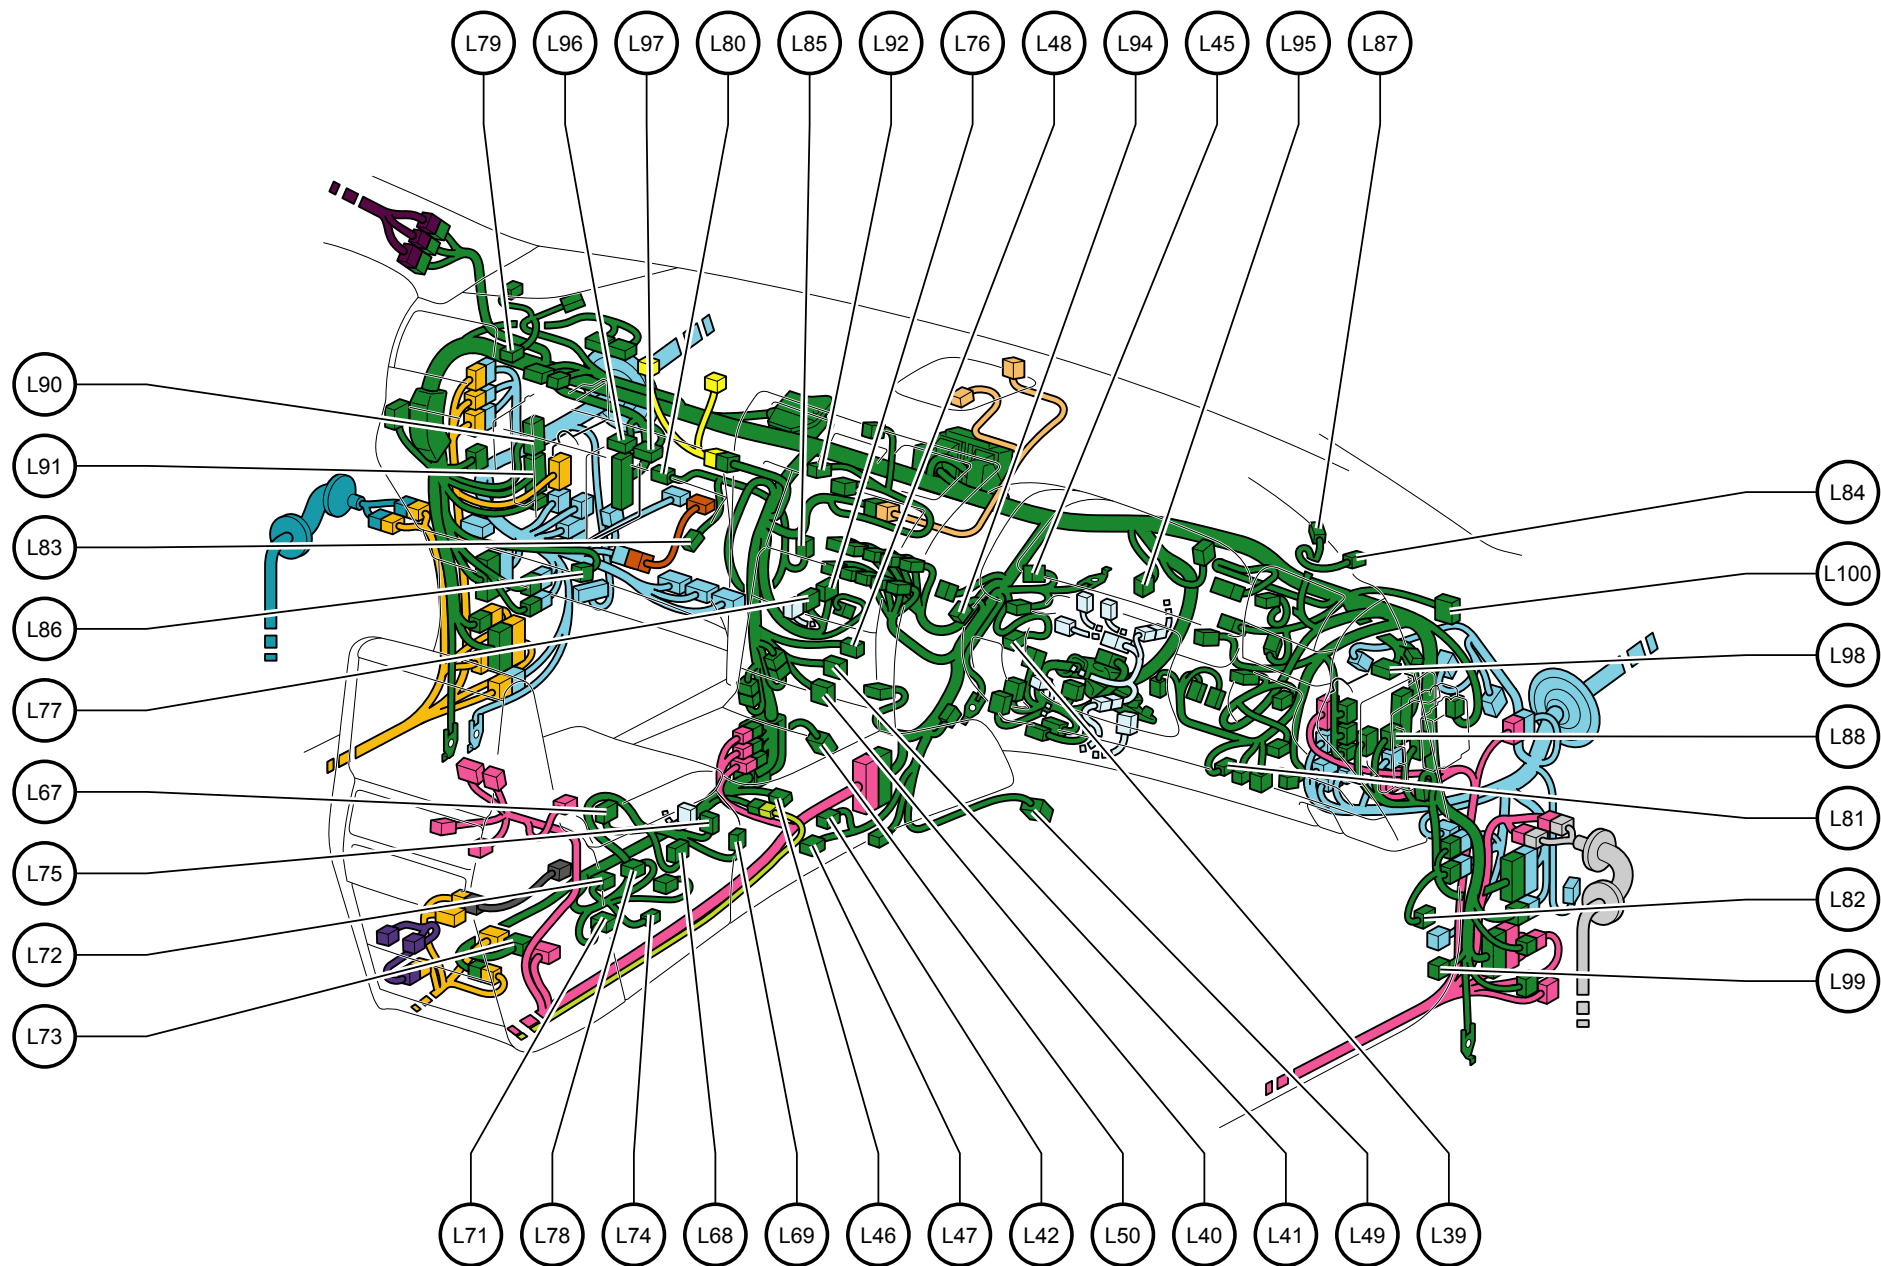

 
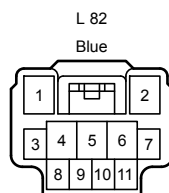

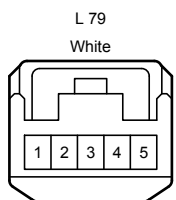
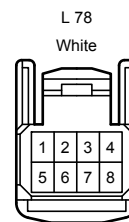
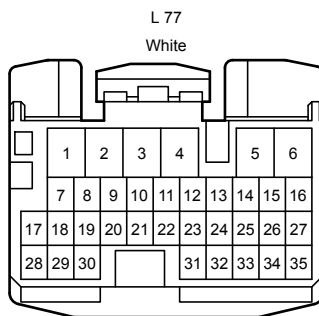
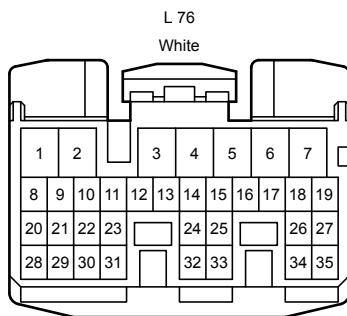
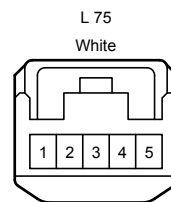
 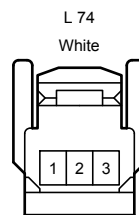
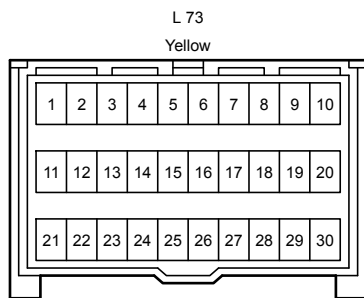

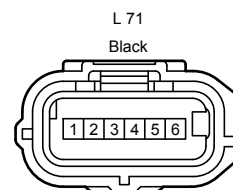
 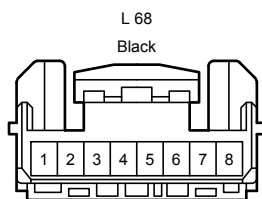
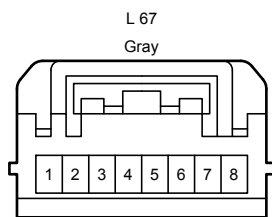
 
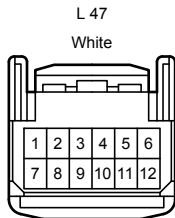

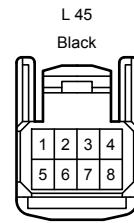
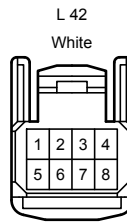
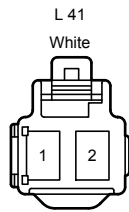


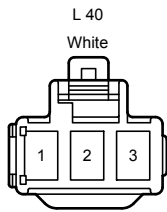

- L 39 Electric Parking Brake Switch
- L 40 PTC Heater
- L 41 PTC Heater
- L 42 Transmission Shift Switch
- L 45 Trip Switch
- L 46 Front Cigarette Lighter
- L 47 Shift Lock Control ECU
- L 48 Front Clearance Warning Buzzer
- L 49 Heated Oxygen Sensor (Bank 2 Sensor 2)
- L 50 Heated Oxygen Sensor (Bank 1 Sensor 2)
- L 67 Front Seat Climate Control Switch LH
- L 68 Front Seat Climate Control Switch RH
- L 69 Shift Lever Illumination Light
- L 71 Yaw Rate Sensor
- L 72 Power Outlet Socket (12V)
- L 73 Center Airbag ECU
- L 74 Electrical Key Oscillator (Front)
- L 75 Console Switch
- L 76 A/C Amplifier
- L 77 A/C Amplifier
- L 78 Video Terminal
- L 79 Resistor Illumination (Passenger Side)
- L 80 Glove Box Illumination Light
- L 81 Front Footwell Light RH
- L 82 Short Connector (Height Control)
- L 83 Luggage Compartment Door Opener Cancel Switch
- L 84 Front Tweeter RH
- L 85 Airbag Cutoff Switch
- L 86 Passenger Side Knee Airbag
- L 87 Front Duct Sensor RH
- L 88 Air Suspension Control ECU
- L 90 Parking Assist ECU
- L 91 Parking Assist ECU
- L 92 Resistor Illumination (Center)
- L 94 Junction Connector
- L 95 Junction Connector
- L 96 Junction Connector
- L 97 Junction Connector
- L 98 Junction Connector
- L 99 Junction Connector
- L 100 Junction Connector

Position of Parts in Instrument Panel <RHD From Sep. 2009 Production until Sep. 2012 Production>

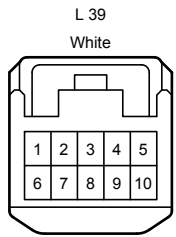

Position of Parts in Instrument Panel <RHD From Sep. 2009 Production until Sep. 2012 Production>

