

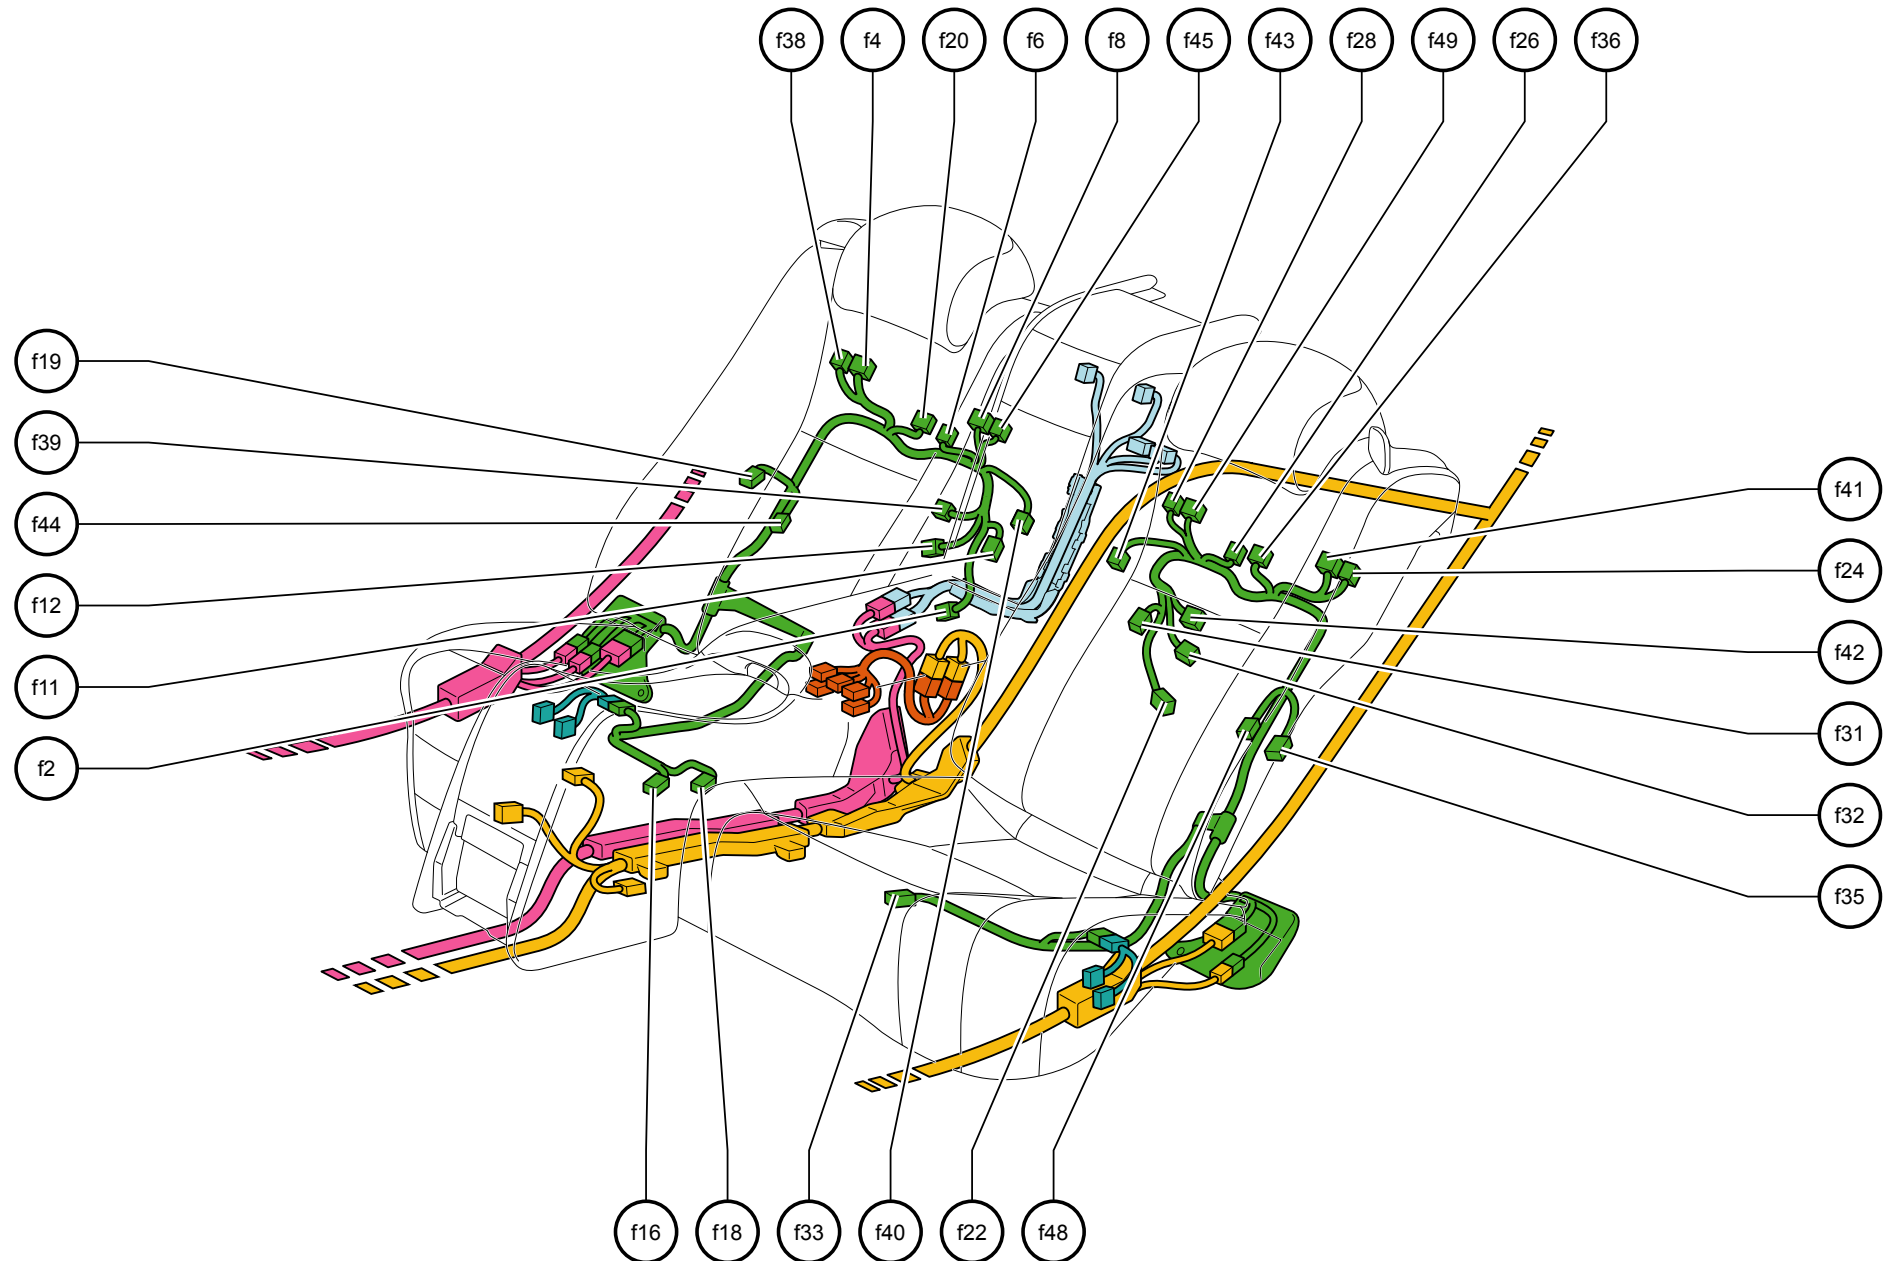
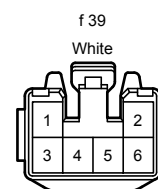
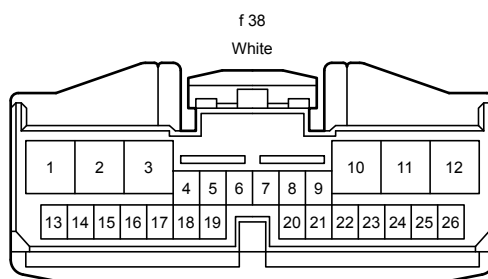
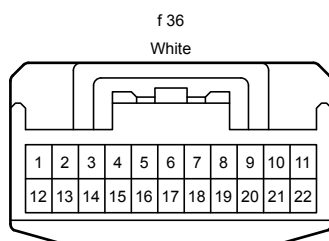
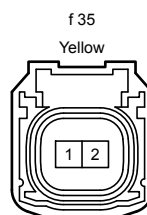
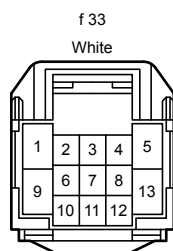
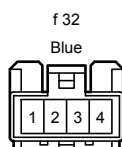
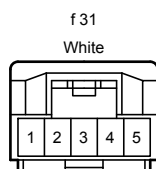
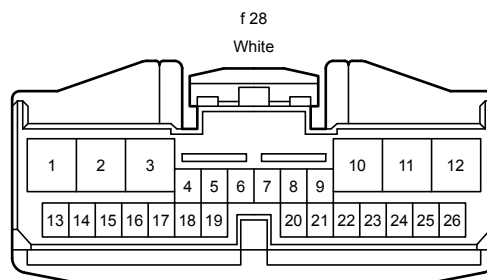
 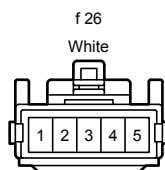
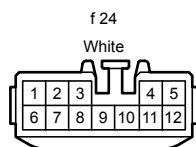

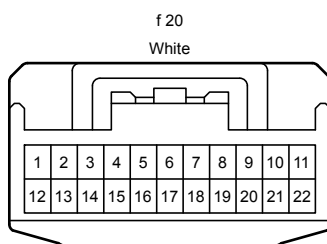
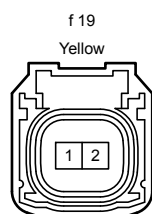
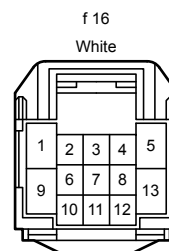
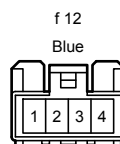
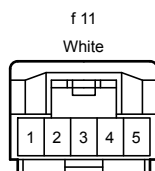
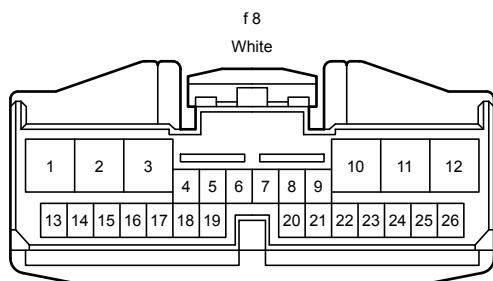
 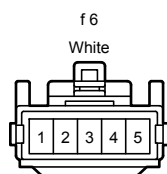


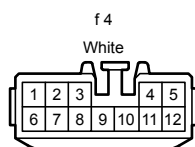

- f 2 Seat Vibrator RH
- f 4 Rear Power Seat Control ECU RH
- f 6 Rear Headrest Motor RH
- f 8 Rear Seat Climate Control ECU RH
- f 11 Rear Seat Climate Fan Motor RH (Seat Back)
- f 12 Rear Seat Climate Controller RH (Seat Back)
- f 16 Rear Power Seat Motor RH
- f 18 Rear Seat Cushion Airbag Squib Circuit RH
- f 19 Rear Side Airbag Squib Circuit RH
- f 20 Junction Connector
- f 22 Seat Vibrator LH
- f 24 Rear Power Seat Control ECU LH
- f 26 Rear Headrest Motor LH
- f 28 Rear Seat Climate Control ECU LH
- f 31 Rear Seat Climate Fan Motor LH (Seat Back)
- f 32 Rear Seat Climate Controller LH (Seat Back)
- f 33 Rear Power Seat Motor LH
- f 35 Rear Side Airbag Squib Circuit LH
- f 36 Junction Connector
- f 38 Rear Power Seat Control ECU RH
- f 39 Rear Power Seat Position Motor and Sensor RH (Fold Position)
- f 40 Rear Power Seat Position Motor RH (Lumbar Support Position)
- f 41 Rear Power Seat Control ECU LH
- f 42 Rear Power Seat Position Motor and Sensor LH (Fold Position)
- f 43 Rear Power Seat Position Motor LH (Lumbar Support Position)
- f 44 Rear Seat Heater RH
- f 45 Rear Seat Climate Control ECU RH
- f 48 Rear Seat Heater LH
- f 49 Rear Seat Climate Control ECU LH

Position of Parts in Seat <LHD Rear Seat 4-Seater From Sep. 2012 Production>



Position of Parts in Seat <LHD Rear Seat 4-Seater From Sep. 2012 Production>

