


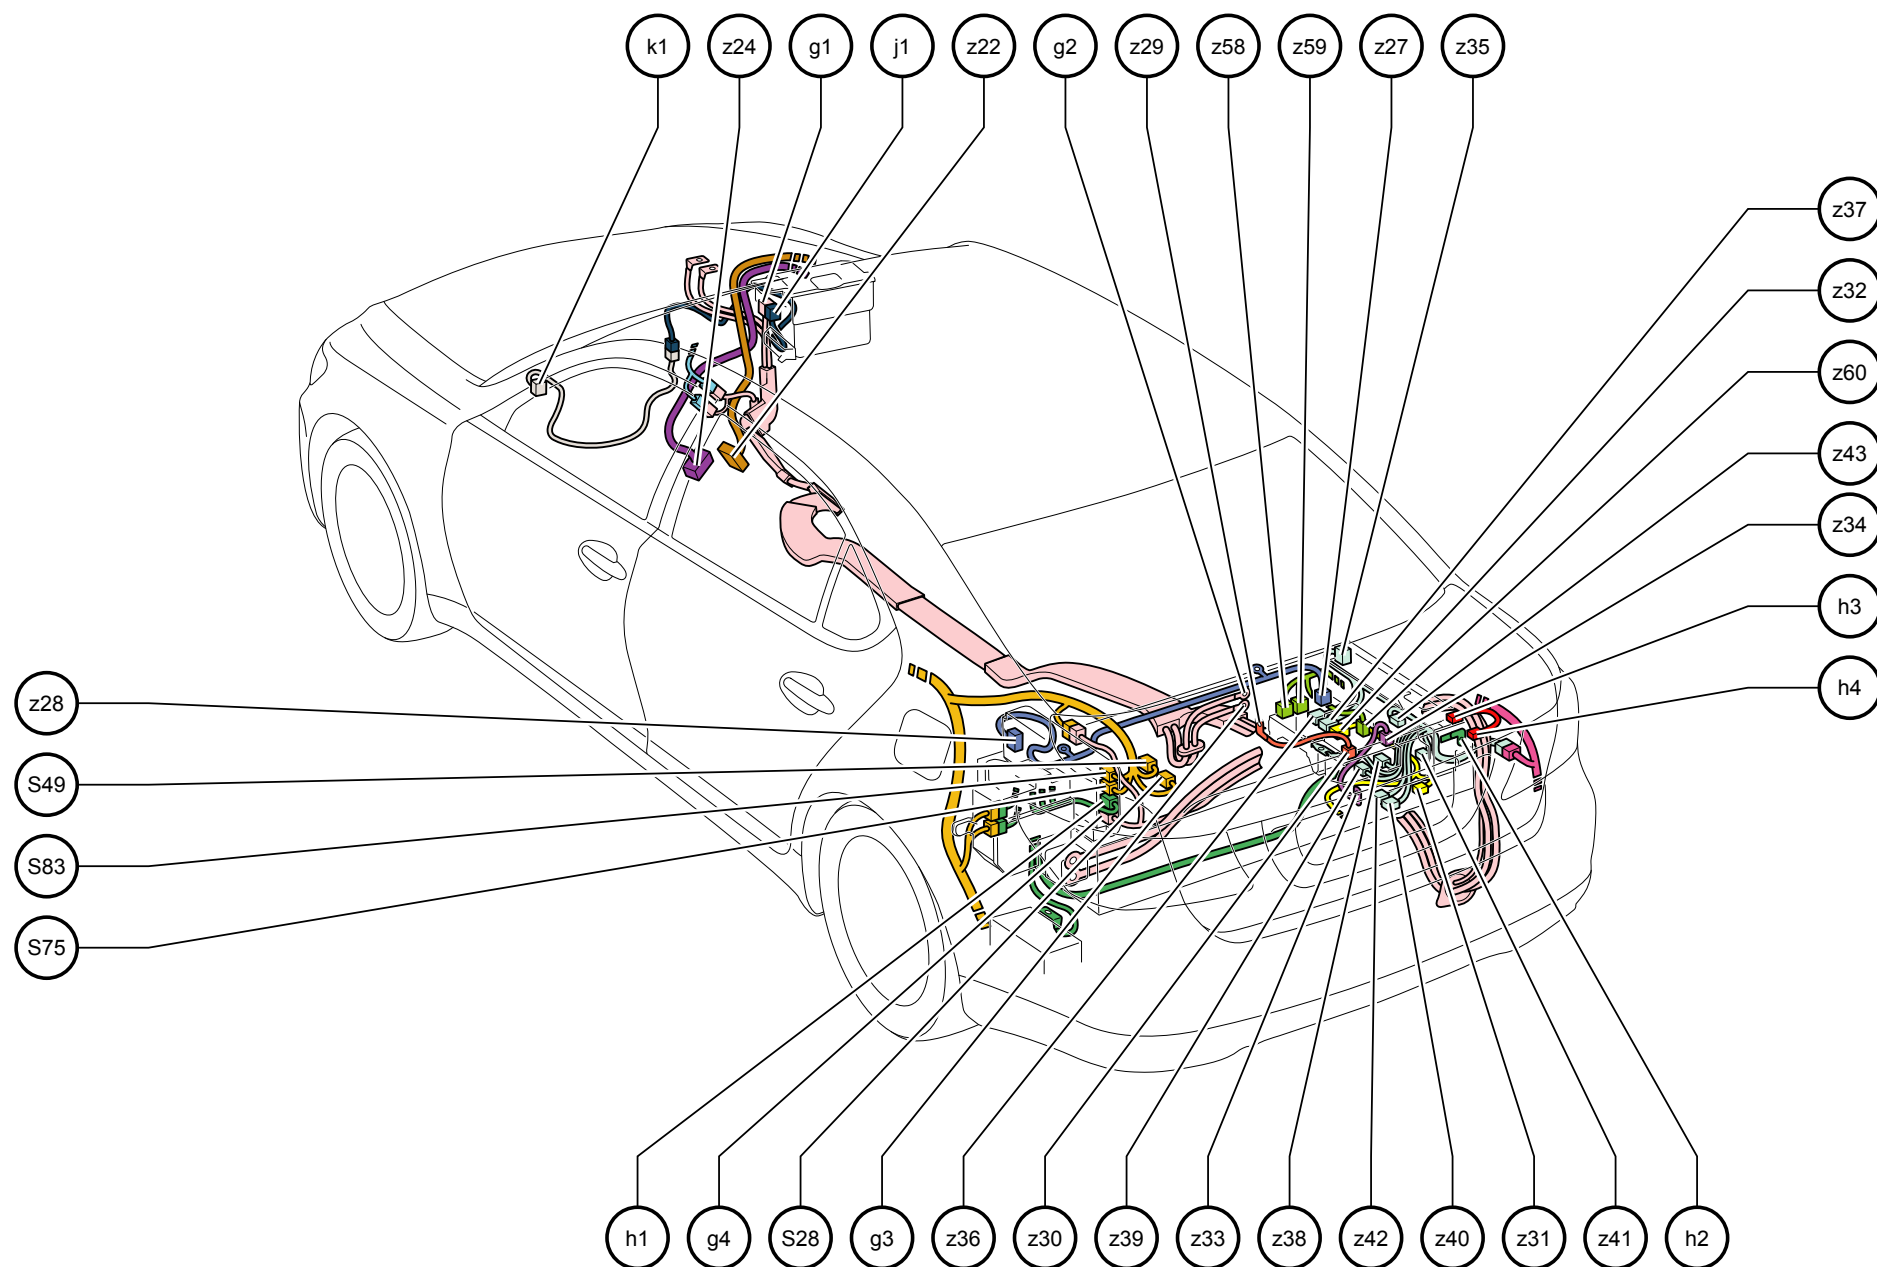

- S 28 Rear Cooling Unit Assembly
- S 49 Brake Control Power Supply Assembly
- S 75 Power Steering Converter Assembly
- S 83 Power Steering Converter Assembly















 



- g 1 With Converter Inverter Assembly
- g 2 HV Battery Junction Block Assembly
- g 3 HV Battery Junction Block Assembly
- g 4 Power Steering Converter Assembly

- h 1 Power Steering Converter Assembly
- h 2 Fuse Block , Hybrid Vehicle Converter
- h 3 Noise Filter
- h 4 Fuse Block , Hybrid Vehicle Converter

- j 1 With Converter Inverter Assembly

- k 1 With Motor Compressor Assembly

- z 22 Motor Generator No.2 , With Converter Inverter Assembly
- z 24 Motor Generator No.1 , With Converter Inverter Assembly
- z 27 HV Battery Junction Block Assembly
- z 28 Power Steering Converter Assembly
- z 29 HV Battery
- z 30 HV Battery Junction Block Assembly
- z 31 HV Battery
- z 32 Battery Voltage Sensor , HV Battery
- z 33 HV Battery
- z 34 HV Battery Junction Block Assembly
- z 35 Hybrid Vehicle Converter
- z 36 Battery Voltage Sensor
- z 37 Battery Voltage Sensor
- z 38 HV Battery Junction Block Assembly
- z 39 HV Battery Junction Block Assembly
- z 40 Battery Voltage Sensor
- z 41 Inter Lock Switch
- z 42 Noise Filter (Bypass)
- z 43 Junction Connector
- z 58 Hybrid Vehicle Converter , HV Battery Junction Block Assembly
- z 59 Hybrid Vehicle Converter , HV Battery Junction Block Assembly
- z 60 Hybrid Vehicle Converter , HV Battery Junction Block Assembly

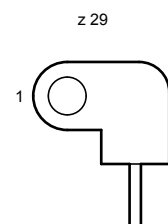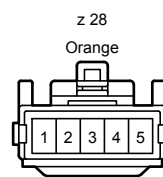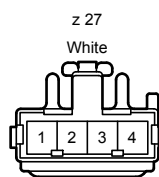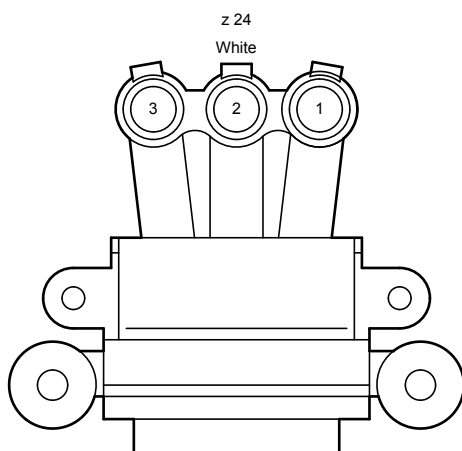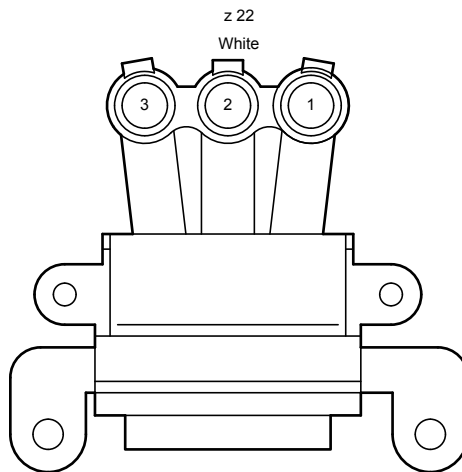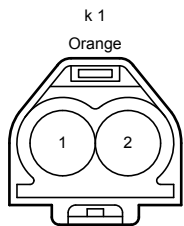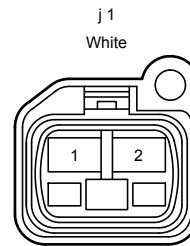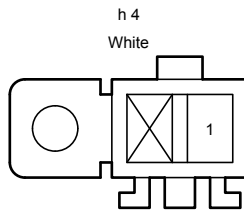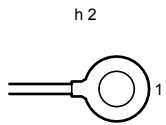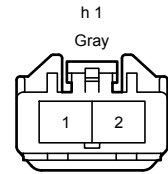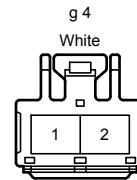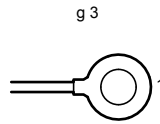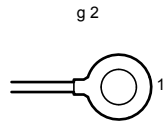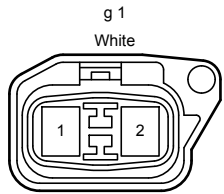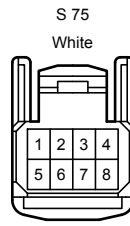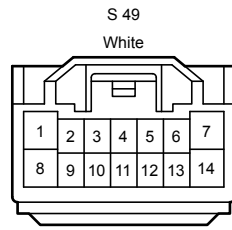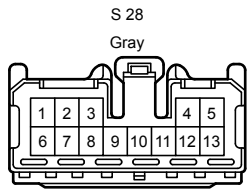

Position of Parts in Body <LHD Before Nov. 2009 Production>

