


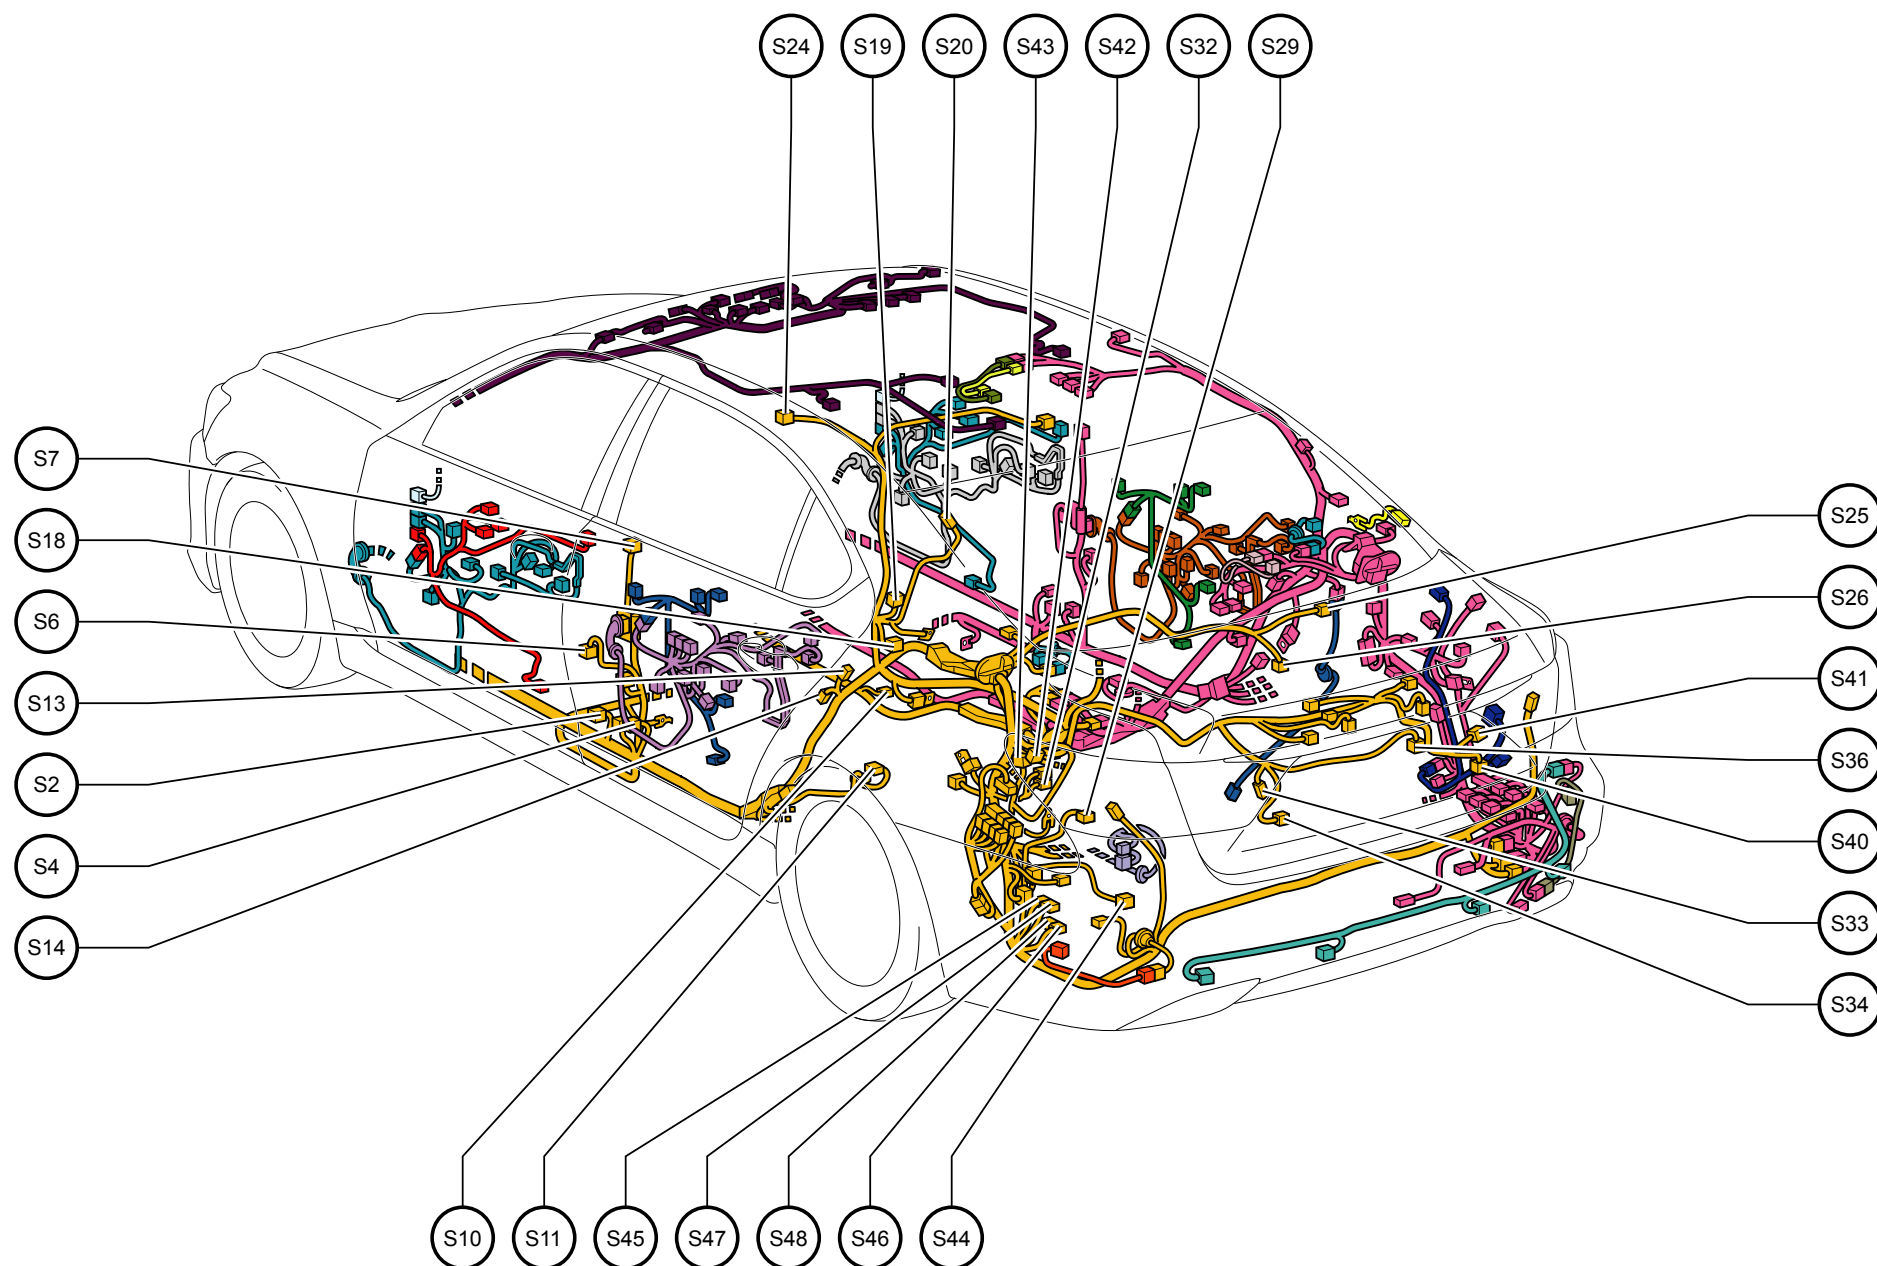

- S 2 Front Tension Reducer LH
- S 4 Front Pre-Crash Seat Belt Motor LH
- S 6 Front Door Courtesy Light Switch Assembly LH
- S 7 Height Adjustable Anchor Motor LH
- S 10 Rear Electrical Key Oscillator
- S 11 Main Fuel Sender Gauge Assembly
- S 13 Radio Setting Condenser
- S 14 Rear Door Courtesy Light Switch Assembly LH
- S 18 Rear Header Speaker Assembly LH
- S 19 Noise Filter (Rear Window Defogger)
- S 20 Center Stop Light Assembly
- S 24 Curtain Shield Airbag Assembly LH
- S 25 Rear Window Shade Assembly
- S 26 No.1 Luggage Compartment Light Assembly
- S 29 Seat Vibration ECU
- S 32 Parking Brake Actuator Assembly
- S 33 Rear Light Assembly LH
- S 34 No.1 Luggage Compartment Door Light Assembly
- S 36 Luggage Door Closer Assembly
- S 40 Power Trunk Lid Control Switch
- S 41 Rear Light Assembly RH
- S 42 Fuel Lid with Motor Lock Assembly
- S 43 Power Trunk Lid Control ECU
- S 44 Indoor Luggage Compartment Electrical Key Oscillator
- S 45 Seat Belt Control ECU
- S 46 Parking Brake ECU Assembly
- S 47 Seat Belt Control ECU
- S 48 Parking Brake ECU Assembly

Position of Parts in Body <LHD From Sep. 2012 Production>

