


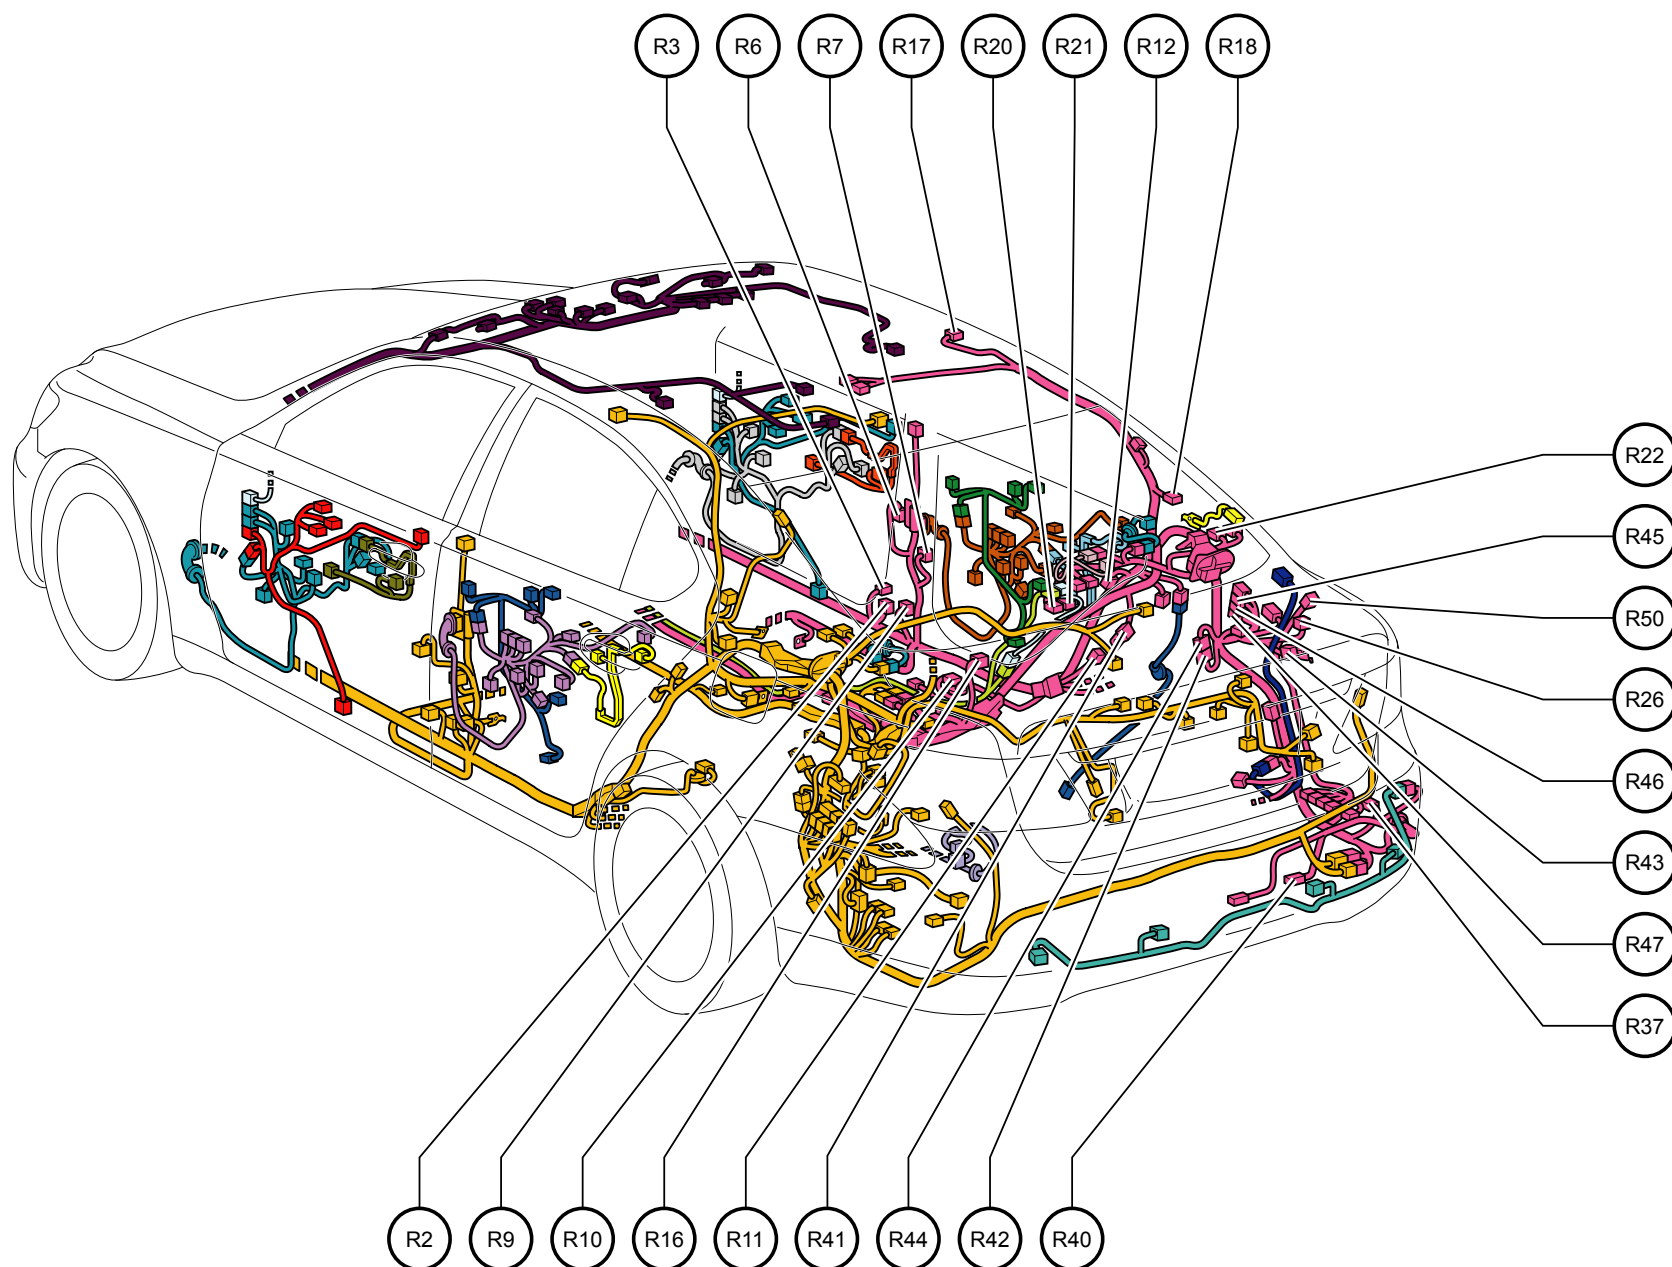

- R 2 Front Pre-Crash Seat Belt Motor RH
- R 3 Front Pretensioner RH
- R 6 Front Door Courtesy Light Switch Assembly RH
- R 7 Side Airbag Sensor Assembly RH
- R 9 Front Tension Reducer RH
- R 10 Sub Fuel Sender Gauge Assembly
- R 11 Rear Airbag Sensor RH
- R 12 Rear Door Courtesy Light Switch Assembly RH
- R 16 Disc Player Controller
- R 17 Curtain Shield Airbag Assembly RH
- R 18 Rear Header Speaker Assembly RH
- R 20 Floor Stereo Component Speaker Assembly
- R 21 No.2 Clearance Warning Buzzer
- R 22 Rear Pretensioner RH
- R 26 Rear Acceleration Sensor Assembly
- R 37 Door Control Receiver
- R 40 Outside Luggage Electrical Key Antenna
- R 41 Junction Connector
- R 42 Junction Connector
- R 43 Junction Connector
- R 44 Junction Connector
- R 45 Junction Connector
- R 46 Junction Connector
- R 47 Junction Connector
- R 50 Theft Warning Siren Assembly

Position of Parts in Body <RHD From Nov. 2009 Production until Sep. 2012 Production>

