


Position of Parts in Engine Compartment <LHD From Sep. 2012 Production>

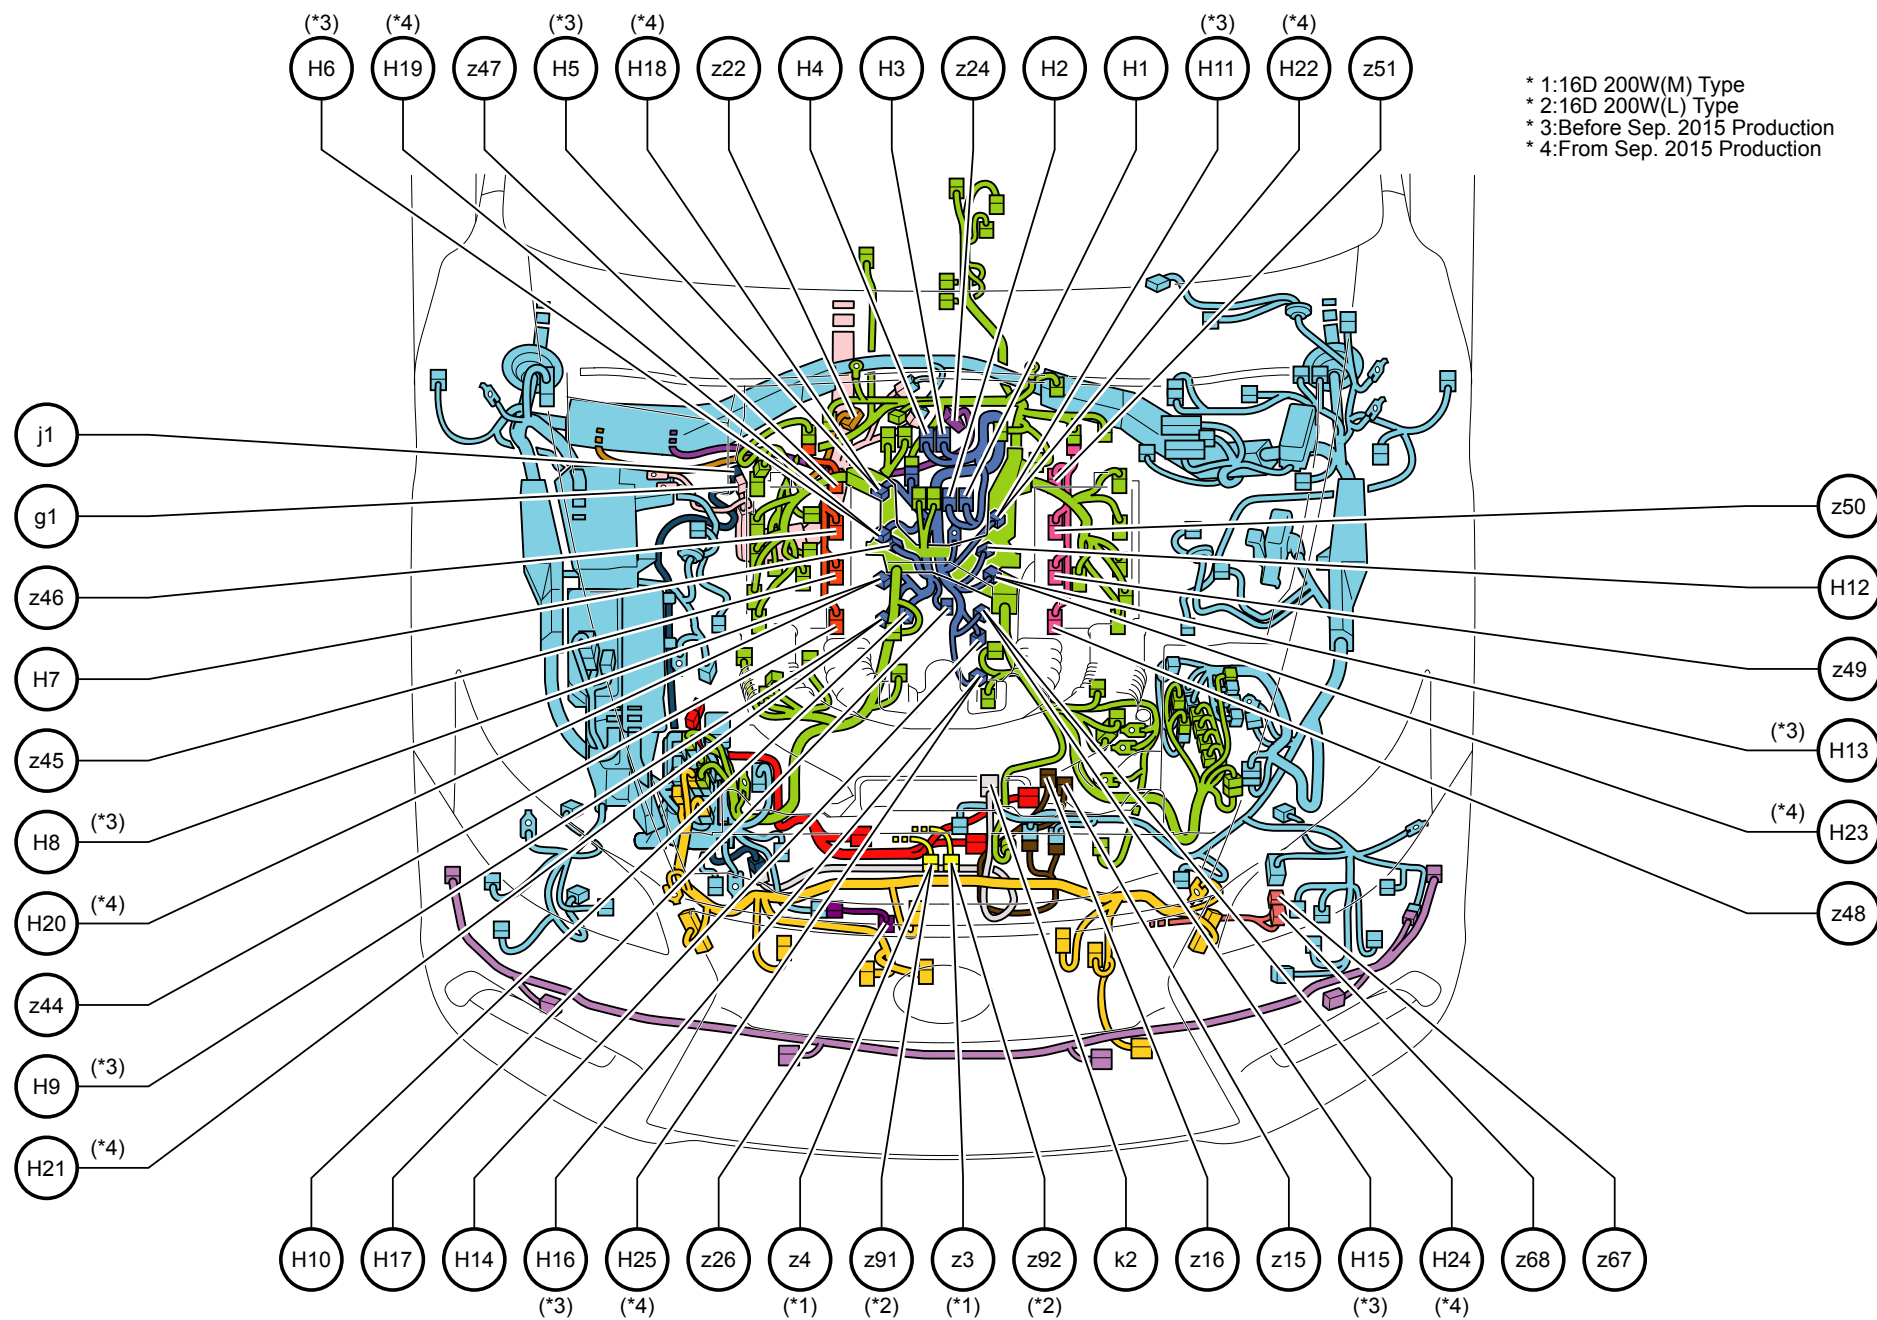

- H 1 Injector Driver (No.1)
- H 2 Injector Driver (No.1)
- H 3 Injector Driver (No.2)
- H 4 Injector Driver (No.2)
- H 5 Direct Fuel Injector Assembly No.8
- H 6 Direct Fuel Injector Assembly No.6
- H 7 Knock Control Sensor (Bank 2 Sensor 2)
- H 8 Direct Fuel Injector Assembly No.4
- H 9 Direct Fuel Injector Assembly No.2
- H 10 Knock Control Sensor (Bank 2 Sensor 1)
- H 11 Direct Fuel Injector Assembly No.7
- H 12 Knock Control Sensor (Bank 1 Sensor 2)
- H 13 Direct Fuel Injector Assembly No.5
- H 14 Knock Control Sensor (Bank 1 Sensor 1)
- H 15 Direct Fuel Injector Assembly No.3
- H 16 Direct Fuel Injector Assembly No.1
- H 17 Fuel Pressure Sensor
- H 18 Direct Fuel Injector Assembly No.8
- H 19 Direct Fuel Injector Assembly No.6
- H 20 Direct Fuel Injector Assembly No.4
- H 21 Direct Fuel Injector Assembly No.2
- H 22 Direct Fuel Injector Assembly No.7
- H 23 Direct Fuel Injector Assembly No.5
- H 24 Direct Fuel Injector Assembly No.3
- H 25 Direct Fuel Injector Assembly No.1


g 1 With Converter Inverter Assembly

j 1 With Converter Inverter Assembly


k 2 With Motor Compressor Assembly

- z 3 Cooling Fan ECU , Cooling Fan Motor
- z 4 Cooling Fan ECU , Cooling Fan Motor No.2
- z 15 Steering Actuator Assembly
- z 16 Steering Actuator Assembly
- z 22 Motor Generator No.2 , With Converter Inverter Assembly
- z 24 Motor Generator No.1 , With Converter Inverter Assembly
- z 26 Inverter Water Pump Motor Assembly
- z 44 Port Fuel Injector Assembly No.2
- z 45 Port Fuel Injector Assembly No.4
- z 46 Port Fuel Injector Assembly No.6
- z 47 Port Fuel Injector Assembly No.8
- z 48 Port Fuel Injector Assembly No.1
- z 49 Port Fuel Injector Assembly No.3
- z 50 Port Fuel Injector Assembly No.5
- z 51 Port Fuel Injector Assembly No.7
- z 67 Front Active Stabilizer Control ECU Assembly , Front Active Stabilizer Control Actuator Assembly
- z 68 Front Active Stabilizer Control ECU Assembly , Front Active Stabilizer Control Actuator Assembly
- z 91 Cooling Fan ECU , Cooling Fan Motor
- z 92 Cooling Fan ECU , Cooling Fan Motor No.2


H 1
Gray

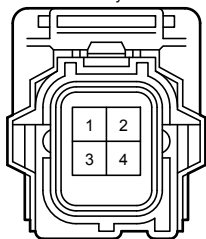


H 2
Black

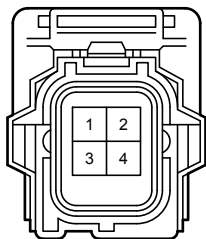


H 3
Gray

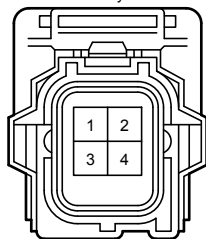


H 4
Black

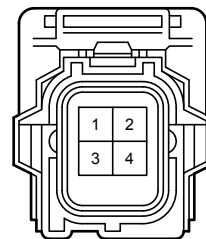


H 5
Gray

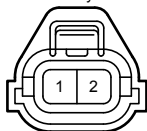


H 6
Gray

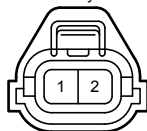


H 7
Black

 


H 8
Gray

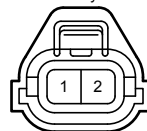

H 9
Gray

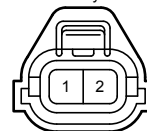


H 10
Black

 

H 11
Black



 
H 12
Gray



H 13
Black



 H 14
Gray




H 15
Black




H 16
Black




H 17
Dark Gray

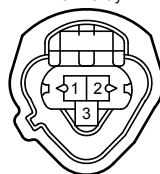


H 18
Gray

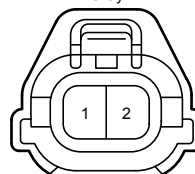


H 19
Gray

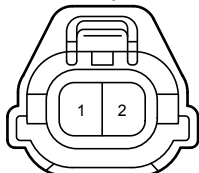


H 20
Gray

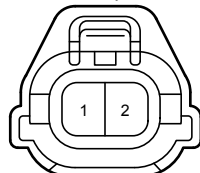


H 21
Gray

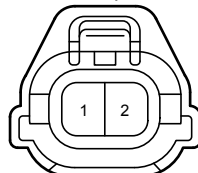


H 22
Black

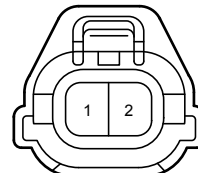


H 23
Black

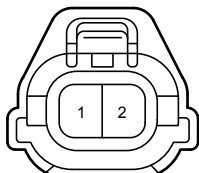


H 24
Black

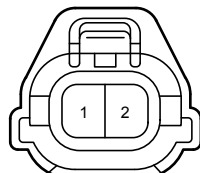


H 25
Black

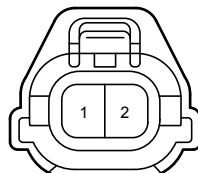


g 1
White

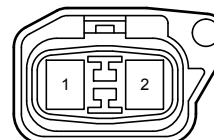


j 1
White

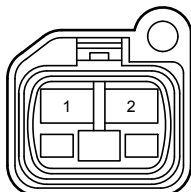

k 2
Orange

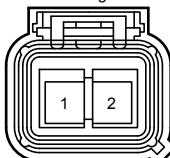

z 3
White

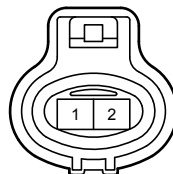

z 4
White



z 15
Gray

