


Position of Parts in Seat <RHD Front Seat Before Sep. 2012 Production>

* 3: Before Nov. 2009 Production

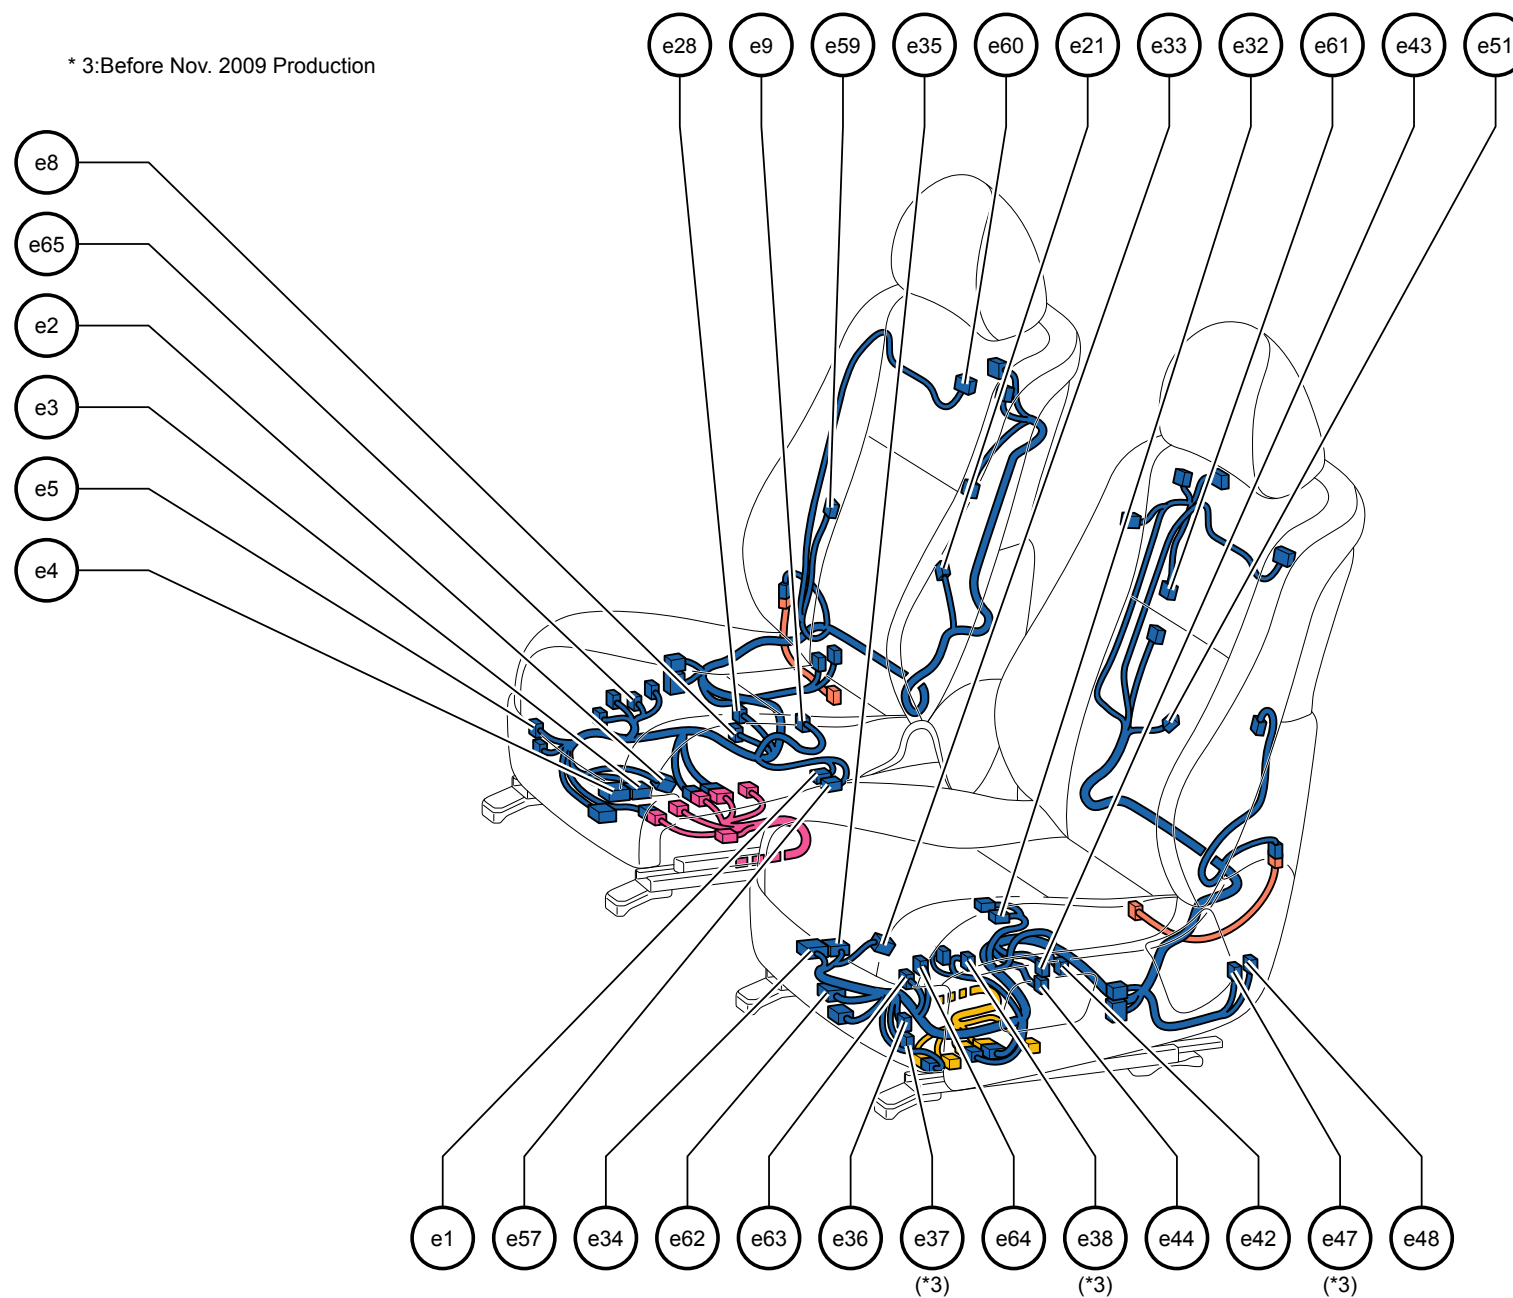

- e 1 Front Seat Climate Control Blower RH
- e 2 Front Seat Climate Controller Seat Cushion RH
- e 3 Front Seat Climate Control ECU RH
- e 4 Front Seat Climate Control ECU RH
- e 5 Front Power Seat Slide Position Sensor RH
- e 8 Front Power Seat Lift Position Motor Assembly RH
- e 9 Front Seat Heater RH
- e 21 Front Seat Climate Controller Seat Back RH
- e 28 Front Power Seat Lift Position Sensor RH
- e 32 Front Seat Climate Control Blower LH
- e 33 Front Seat Climate Controller Seat Cushion LH
- e 34 Front Seat Climate Control ECU LH
- e 35 Front Seat Climate Control ECU LH
- e 36 Front Power Seat Slide Position Sensor LH
- e 37 Front Power Seat Slide Position Motor Assembly LH
- e 38 Front Power Seat Vertical Position Motor Assembly LH
- e 42 Front Seat Heater LH
- e 43 Front Power Seat Lift Position Sensor LH
- e 44 Front Power Seat Lift Position Motor Assembly LH
- e 47 Front Power Seat Reclining Position Motor Assembly LH
- e 48 Front Power Seat Reclining Position Sensor LH
- e 51 Front Seat Climate Controller Seat Back LH
- e 57 Front Seat Inner Belt Assembly RH
- e 59 Front Lumbar Support Up and Down Motor Assembly RH
- e 60 Active Headrest Control ECU RH
- e 61 Front Headrest Motor LH
- e 62 Junction Connector
- e 63 Junction Connector
- e 64 Junction Connector
- e 65 Front Power Seat Vertical Position Sensor RH

Position of Parts in Seat <RHD Front Seat Before Sep. 2012 Production>

